

Xerox Smart Start

Customer Tip

© 2019 Xerox Corporation. All rights reserved. Xerox®, FreeFlow®, Phaser®, VersaLink® and WorkCentre® are trademarks of Xerox Corporation in the United States and/or other countries.
BR27388

Other company trademarks are also acknowledged.

Document Version: 1.0 (September 2019).

Preface

Xerox Smart Start is a Windows installer designed for users who are not sure which print driver to install but also allows more technical user to make their own selections before installing a Xerox printer. Xerox Smart Start performs the following:

- Xerox Printer Discovery
- Allows admins to pick which printer(s) they want to install
- Make recommendations on which driver provides the best experience
- Downloads the best driver from Xerox.com, and then creates a printer
- Upgrade existing Xerox printers if new drivers are available
- Xerox TWAIN and WIA Scan Driver installation



Xerox Smart Start supports Microsoft's Type 3 and Type 4 print technologies. Xerox Smart Start will install the Xerox V3 Global Print driver or the V4 product specific driver and supporting companion applications.

Xerox Smart Start supports the following Windows Operating Systems:

- Windows 10
- Windows 8.1
- Windows 7sp1 (Type 3 drivers only)

Contents

Preface	i
Xerox Smart Start	1
What Products Support Xerox Smart Start?	1
Where do I find Xerox Smart Start?	1
How Does Xerox Smart Start Work?	2
Printer Discovery	2
Installation Types	2
Installing a Printer with Xerox Smart Start	3
Basic Install	3
Advanced Install	3
Offline Printer Installation	4
Install Printers with Xerox Smart Start and the Xerox® Quick Link App	4
Upgrading the Print Driver with Xerox Smart Start	5
Trouble Shooting	6
Xerox Smart Start does not discover my printer	6
Xerox Smart Start fails to download print/scan drivers	6
Xerox Smart Start takes a long time to discover printers on my network	6

Xerox Smart Start

What Products Support Xerox Smart Start?

Xerox Smart Start is available for the following products:

Xerox® WorkCentre® 7830/7835/7845/7855 Multifunction Printer*	Xerox® AltaLink® B8045/B8055/B8065/B8075/B8090 Multifunction Printer
Xerox® WorkCentre 7830i/7835i/7845i/7855i Color Multifunction Printer*	Xerox® AltaLink C8030/C8035/C8045/C8055/C8070 Color Multifunction Printer
Xerox® WorkCentre 7970/7970i Color Multifunction Printer*	Xerox® B1022/B1025 Multifunction Printer
Xerox® WorkCentre 7220/7225 Multifunction Printer*	Xerox® Phaser® 6510 Color Printer, Xerox® WorkCentre 6515 Color Multifunction Printer
Xerox® WorkCentre 7220i/7225i Color Multifunction Printer*	Xerox® VersaLink® B400/B405 Printer
Xerox® WorkCentre 5845/5855/5865/5875/5890 Multifunction Printer*	Xerox® VersaLink B600/B605/B610/B615 Printer
Xerox® WorkCentre 5865i/5875i/5890i Multifunction Printer*	Xerox® VersaLink B7025/7030/7035 Multifunction Printer
Xerox® WorkCentre 5945/5955 Multifunction Printer*	Xerox® VersaLink C400/C405 Color Printer
Xerox® WorkCentre 5945i/5955i Multifunction Printer*	Xerox® VersaLink C500/C505/C600/C605 Color Printer
Xerox® WorkCentre 6655/6655i Color Multifunction Printer*	Xerox® VersaLink C7020/C7025/C7030/C7000 Color Multifunction Printer
Xerox® WorkCentre 3655S/3655X/3655i Multifunction Printer*	Xerox® VersaLink C8000/C900 Color printer

* Xerox Smart Start does not support the installation of scan drivers for these products.
The admin will need to download and install them separately.

Where do I find Xerox Smart Start?

Xerox Smart Start is a stand-alone installer. It requires administrator rights to download and run the .exe. It can be downloaded from www.support.xerox.com. Follow the below procedure to access the software.

- Select Printers
- Select desired Product Family (example AltaLink)
- Select the desired Model (AltaLink C8030/ C8035/ C8045/ C8055/ C8070 Color Multifunction Printer)
- Select Xerox Smart Start – Driver Installer

How Does Xerox Smart Start Work?

Printer Discovery

Xerox Smart Start searches the local subnet for supported Xerox printers using SNMP. It will also detect subnets used by existing printers and search those networks for new printers.

Xerox Smart Start also allows users to search for specific network printers using hostname or IP address.

Installation Types

The user can choose between two different kinds of installations.

- **Quick Install** – Xerox Smart Start will automatically install drivers based on the user's operating system and printer model. Quick install does not install scan drivers.
- **Advanced Install** – Xerox Smart Start will allow the user to choose which print system, PDL, and scan driver they want to install. Xerox Smart Start will recommend which options provide the best print experience.

Installing a Printer with Xerox Smart Start

Basic Install

1. Launch XeroxSmartStart.exe. This requires elevation to an administrator account.
2. Agree to the EULA.
3. Xerox Smart Start will scan for printers.
4. Select the printer you want to install and choose either **Quick Install** or **Advanced Install**.
 - If you select **Quick install** you are done.
 - If you select **Advanced Install** Xerox Smart Start will present a list of options; Print System, Driver PDL, TWAIN/WIA Scan Drivers and Printer Name. Once you have selected the options you want, select **Install** to start the installation process.
5. If Xerox Smart Start did not find the printer you want to install select **Don't See Your Printer**.
 - Enter the printer's hostname or IP address and select **Continue**. If Xerox Smart Start detects your printer it will take you to the **Advanced Install** screen.
6. When the installation finishes Xerox Smart Start will display a confirmation screen. You can **Install Another Printer** or exit by selecting **Done**. There is also the option to print a test page.

Advanced Install

On the Advanced Install screen, a set of install options is presented to select from. There is also an "i" button next to each option. Selecting the "i" displays recommendations on what value to select for each option.

Print System

You can choose between Microsoft's Type 3 and Type 4 print systems.


- Introduced in Windows 2000, Type 3 print drivers are optimized for printing from traditional desktop applications.
- Introduced in Windows 8, Type 4 print drivers are optimized for printing from Microsoft Store applications.

Driver PDL

You have the option of selecting either PostScript or PCL6.

Scan Driver

Optionally you can choose to install scan drivers. By default, Xerox Smart Start does not install scan drivers

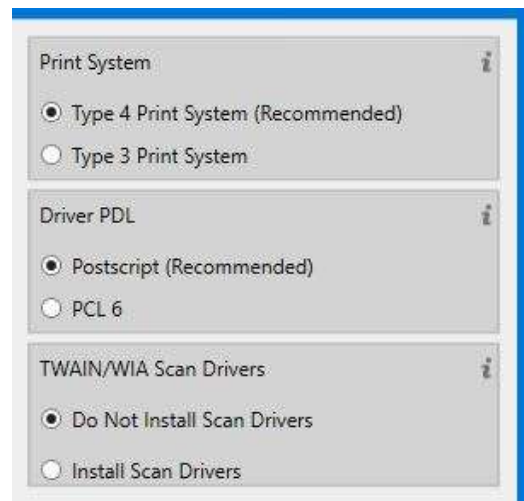

Offline Printer Installation

Xerox Smart Start can install printers when they are offline. Note, Xerox Smart Start will not install scan drivers for offline printers.

1. Run Xerox Smart Start and let it finish discovering printers.
2. Select **Don't See Your Printer**.
3. Enter the printer's hostname or IP address and select **Continue**.
4. If Xerox Smart Start cannot find the printer, it will prompt you to install an offline printer.
5. Select **Install an Offline Printer**.
6. Choose your printer model.
7. Then select **Quick Install** or **Advanced Install** to install the printer.

Install Printers with Xerox Smart Start and the Xerox® Quick Link App

With the Xerox® Quick Link App, an admin can download a custom Xerox Smart Start installer that already has your printer's network address. This allows you to skip printer discovery entirely and immediately install your printer with Xerox Smart Start.

 


The Xerox® Quick Link App is supported by Xerox® ConnectKey technology enabled devices. Before you can use Quick Link you will need to add it to your printer. This can be done in the Xerox App Gallery found on your printer's home screen. Once Quick Link is installed, follow these instructions to start printing.

1. From the home screen select the Xerox Quick Link app on your printer.
2. Xerox® Quick Link App will ask if you are connecting to a computer or mobile device, select **Computer**.
3. In the next screen enter your email address and select **Send**.
4. Your printer will send you an email containing a Xerox Smart Start download link.
5. Open the email and select the **Microsoft Windows** link.
6. This will launch your default web browser and download a custom Xerox Smart Start installer.
7. Run the installer – you will need to elevate to an administrator account.
8. Agree to the EULA.
9. Xerox Smart Start will present you with a Ready to Install screen. Select **Quick Install** or **Advanced Install** to begin.
10. After the installation is finished the Install Complete confirmation screen is displayed.


Upgrading the Print Driver with Xerox Smart Start

When Xerox Smart Start scans for printers it checks to see if there are print driver updates available for existing Xerox printers. If Xerox Smart Start finds an update, it will present you with an **Update** button.



To upgrade to the recommended option just select the **Update** button. To see upgrade options select the “i” button.

If your printer is using an out-of-date Type 3 print driver and your operating system supports Type 4 print drivers then Xerox Smart Start presents you with the following window after selecting **Update**.

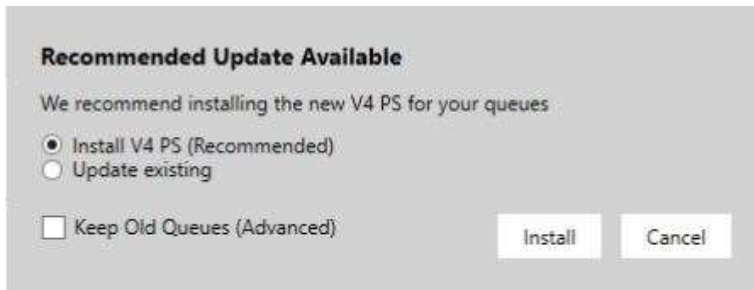

- If you choose **Install V4** then Xerox Smart Start will delete the old Type 3 printer and replace it with a new printer using the Type 4 print driver.
- If you choose **Install V4** and check **Keep Old Queues**, then Xerox Smart Start will keep the old Type 3 printer and create a new printer with the Type 4 driver. You will end up with two printers, one Type 3 the other Type 4.
- If you choose **Update existing**, then Xerox Smart Start will upgrade your printer to the latest Type 3 Xerox Global Print Driver.

Note: Whichever option you choose Xerox Smart Start will not delete the old V3 print driver.

Trouble Shooting

Xerox Smart Start does not discover my printer

- Xerox Smart Start uses SNMP to discover printers. Ensure SNMP v1/v2c is enabled on your printer. Check network settings on the device's web page.
- The printer may be on a different subnet than the PC running Xerox Smart Start. Select **Don't See Your Printer** and enter the printer's hostname or IP address to search for it.
- The printer must use the default SNMP read-only community name string in order for Xerox Smart Start to discover it. Select **Don't See Your Printer** and enter the printer's hostname or IP address to find and install it.

Xerox Smart Start fails to download print/scan drivers

- Xerox Smart Start downloads print drivers from the Internet. Check your PC's proxy settings and ensure you are connected to the Internet.

Xerox Smart Start takes a long time to discover printers on my network

- Xerox Smart Start uses every printer in Devices and Printers to search for new printers. Try deleting any old unused printers.
- Remove any old TCP/IP ports from your PC that are no longer assigned to a printer. To remove unassigned TCP/IP ports follow the procedure below:

Caution: Please perform a back up for your Print Management settings prior to performing this procedure.

1. Select Start, **Settings** (Windows 10) or **Control Panel** (Windows 7 or Windows 8/8.1).
2. On Windows 10
 - Open **Devices** and select **Printers & scanner**.
 - Scroll down until you see **Related Settings**.
 - Select the **Print server properties** link.On Windows 7, Windows 8 or Windows 8.1
 - Select **View devices and printers** link.
 - Select any printer then select **Print server properties** button.
3. In Print server properties select the **Ports** tab.
4. Select the **Change Port Settings** button.
 - You will be required to elevate to an administrator account.
5. Scroll down the list of printer ports and look for any port described as a *Standard TCP/IP Port* that does not have a printer associated with it.
6. Delete any of these ports.