

Xerox Font Management Utility (FMU)

Customer Tip

© 2020 Xerox Corporation. All rights reserved. Xerox®, Phaser®, VersaLink®, AltaLink®, WorkCentre®, ColorQube®, PrimeLink® are trademarks of Xerox Corporation in the United States and/or other countries.

Other company trademarks are also acknowledged.

BR28147

Dc011cc241 Document Version: 3 (January 2020).

Preface

This document provides instructions about how to use the Xerox Font Management Utility as to add PostScript and PCL fonts to supported Xerox devices.

Supported Products

Xerox® ColorQube® 8580/8880	Xerox® D95A/D110/D125	Xerox® WorkCentre® 3335/3345
Xerox® WorkCentre® 5945/5955 Xerox® WorkCentre® 5945i/5955i	Xerox® WorkCentre® 5845/5855/5865/5875/5890 Xerox® WorkCentre® 5865i/5875i/5890i*	Xerox® AltaLink® B8045/B8055/B8065/ B8075/B8090
Xerox® Phaser® 3052 Xerox® Phaser® 3260	Xerox® WorkCentre® 7830/7835/7845/7855 Xerox® WorkCentre® 7830i/7835i/7845i/7855i	Xerox® AltaLink® C8030/C8035/C8045/ C8055/C8070
Xerox® WorkCentre® 6605	Xerox® WorkCentre® 3215/3225	Xerox® D136
Xerox® WorkCentre® 6655/6655i	Xerox® WorkCentre® 3615	Xerox® Phaser® 3020BI
Xerox® VersaLink® C400/C405	Xerox® ColorQube® 8700/8900	Xerox® WorkCentre® 7970/7970i Color
Xerox® PrimeLink® C9065/C9070	Xerox® Phaser® 6700	Xerox® Color C60/C70
Xerox® VersaLink® C500/C505/C600/C605	Xerox® WorkCentre® 3025BI Xerox® WorkCentre® 3025NI	Xerox® Phaser® 6510 Xerox® WorkCentre® 6515
Xerox® WorkCentre® 3655S/3655X/3655i	Xerox® WorkCentre® 7525/7530/7545/7556	Xerox® WorkCentre® 7220/7225 Xerox® WorkCentre® 7220i/7225i
Xerox® Phaser® 7500	Xerox® WorkCentre® 4265	Xerox® Phaser® 3320
Xerox® WorkCentre® 5325/5330/5335	Xerox® VersaLink® B600/B605/B610/B615	Xerox® VersaLink® C7020/C7025/C7030/C7000
Xerox® Phaser® 4600/4620	Xerox® Phaser® 4622	Xerox® VersaLink® B7025/7030/7035
Xerox® Phaser® 7800	Xerox® Phaser® 6600	Xerox® WorkCentre® 3315/3325
Xerox® B1025 Multifunction Printer	Xerox® Phaser® 3330	Xerox® Phaser® 7100
Xerox® VersaLink® B400/B405	Xerox® Phaser® 3610	

Contents

Preface	i
Supported Products	i
FMU Requirements	1
Supported Operating Systems	1
Font Standards.....	1
Prerequisites	1
FMU Operations	2
Adding a Printer	2
Adding Fonts	3
Deleting Fonts	4
Exporting Fonts	4
Printing the Font List	5
Xerox Intelligent Barcode Utility (XIBU) feature	6
Overview	6
Installing XIBU onto a Printer	6
Print Sample Barcodes	7
Removing XIBU From a Printer	7
FMU Troubleshooting	8
Install Status Unknown.....	8
Fonts Cannot Be Selected to Install.....	8

FMU Requirements

Supported Operating Systems

The Xerox FMU supports the following Windows Client Operating systems:

- Windows 8, 32-bit, 64-bit
- Windows 8.1 Update 1, 32-bit, 64-bit
- Windows 10 (Version 1803, 1809, 1903 and 1909), 32-bit, 64-bit

Font Standards

- Adobe Type 1 Fonts (Postscript Outline Fonts)
- Adobe Type 3 Fonts (Postscript User/Bitmap Fonts)
- Adobe Type 42 Fonts (Postscript TrueType Fonts)
- Open Type font
- Open Type layout with TrueType outlines (glyph tag) (Caveat: Open type layout with PostScript outlines (CFF tag) are not supported)
- PCL Formats 0, 10, 11 and 20 Fonts
- PCL Format 15 (TrueType) Fonts
- PCL Format 16 (TrueType) Fonts*
- PCL Macro Fonts (with a “.pcl” extension)*
- True Type Unicode fonts
- True Type version 3.0
- Barcode Postscript Type 1
- Barcode PCL
- Asian Truetype font as PCL

*Limited Product support

 
Prerequisites

- ✓ The software is available at <https://www.support.xerox.com>. It can be accessed by selecting Printers - <the desired Xerox device> - and scrolling down to Utilities.
- ✓ The device must be connected to the network and powered on.

FMU Operations


Adding a Printer

1. Select Start>Xerox>Xerox Font Management Utility.




2. Select Add Printer.



3. If the desired printer is not listed, then select the Advanced Search  icon.
 - a. Enter a Gateway and Subnet or IP Address of specific printer.
 - b. Select OK to search.

The image shows a dialog box titled 'Advanced Search'. Below the title, there is a paragraph of text: 'If the printer you are looking for does not show up in the Discovered Printers list it is likely that it is not on the same subnet. Use this feature to search for printers on other subnets.' Below this text are three input fields. The first field is labeled 'Gateway' and has a radio button selected next to it. The second field is labeled 'Subnet Mask'. The third field is labeled 'IP Address' and has a radio button next to it. Each input field has a small 'x' icon in its top right corner.

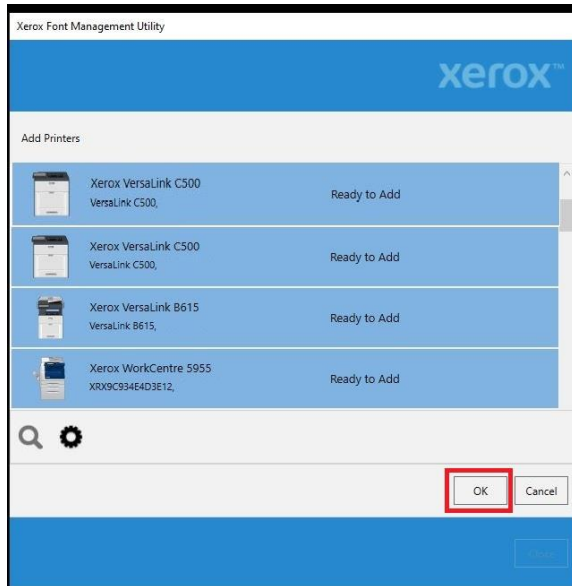 


4. Select the printer(s) you wish to add and select OK.
Multiple printers can be selected with 'Ctrl' or 'Shift' mouse clicks.




5. When finished, select Close to exit the utility.

 
Adding Fonts

Before you begin, make sure that the device is connected to a network and powered on.

 1. Select Start>Xerox>Xerox Font Management Utility.
2. Select the desired printer and select Add Fonts. 
3. Select a Font from the displayed list or search for a specific font.
 - a. By default, fonts are stored in the following directory C:\WINDOWS\Fonts.
 - b. Use the arrows to choose a different directory. 
 - c. To search for a specific font, select the magnifying glass and enter a search string.
4. Select the font(s) you wish to add. To select multiple fonts, you must hold the <Shift> or <Ctrl> key while selecting each font.
5. Once the fonts are chosen. Select OK.
6. If a font was selected in error, click the  icon to remove it from the list.

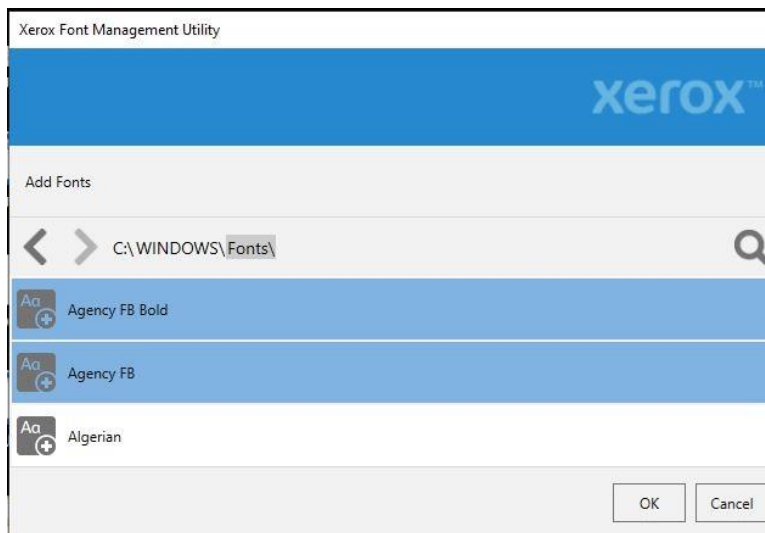

 7. Select Send. This will start the process of downloading the font(s) to the device.

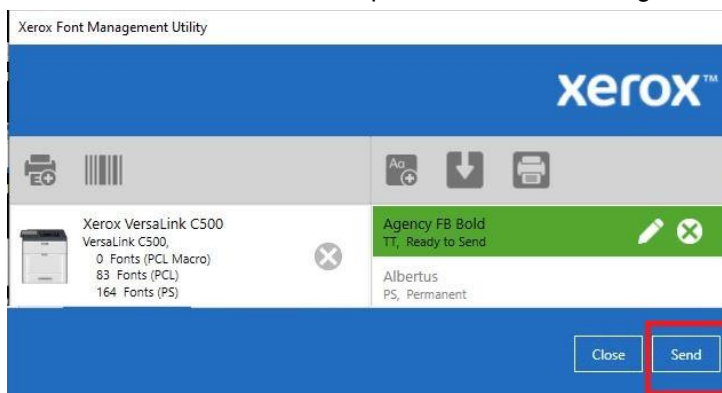


8. When finished, select Close to exit the utility.

Deleting Fonts


1. Select Start>Xerox>Xerox Font Management Utility.
2. Select the desired printer.
3. Select the Trash Can icon for the downloaded font you wish to remove.

 
Note: Permanent fonts cannot be removed.

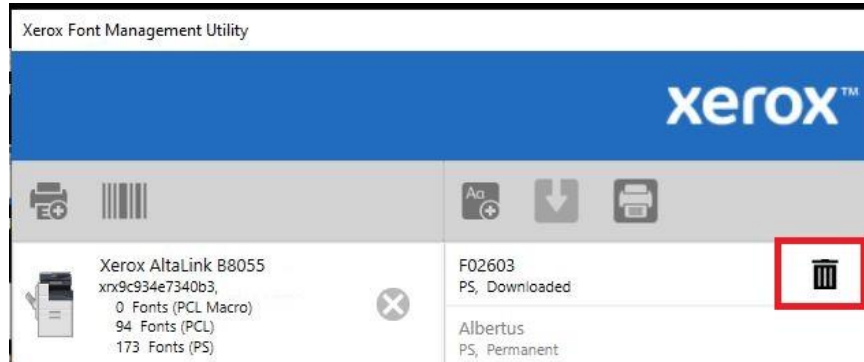

4. Select Send.
5. When finished, select Close to exit the utility.

Exporting Fonts

 1. Select Start>Xerox>Xerox Font Management Utility.
2. Select the desired printer(s) and select Add Fonts.
3. Select the font(s) you wish to export, then select Ok.
4. Select the Export Font List icon. 
5. Depending on what type of Fonts are selected you will be able to select what fonts can be exported. The options are:
 - a. Export PS and PCL fonts into two separate .exp files. (Recommended)
 - b. Export only PS fonts
 - c. Export only PCL fonts

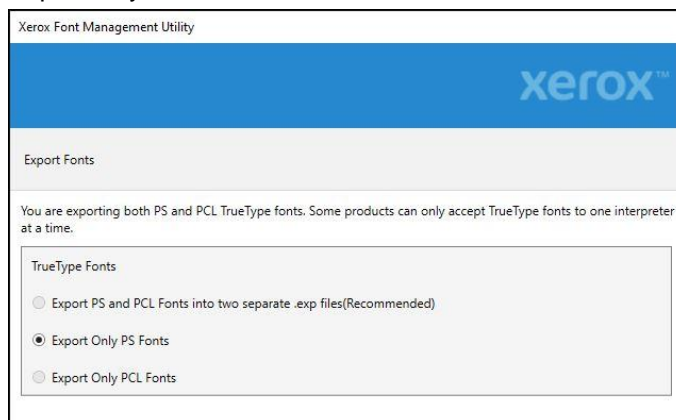

6. Select OK to open a Windows dialog to save the file.
7. Give the file a name and save it.

 
8. When finished, select Close to exit the utility.


Note: The exported file can be loaded onto the device by sending the exported list to the device via an 'LPR' command. The list can also be renamed with a .ps or pcl file extension and submitted via the device's Web User interface.

Printing the Font List

1. Select Start>Xerox>Xerox Font Management Utility.
2. Select the desired printer.

Note: The current font list for the selected device is displayed in the right column.

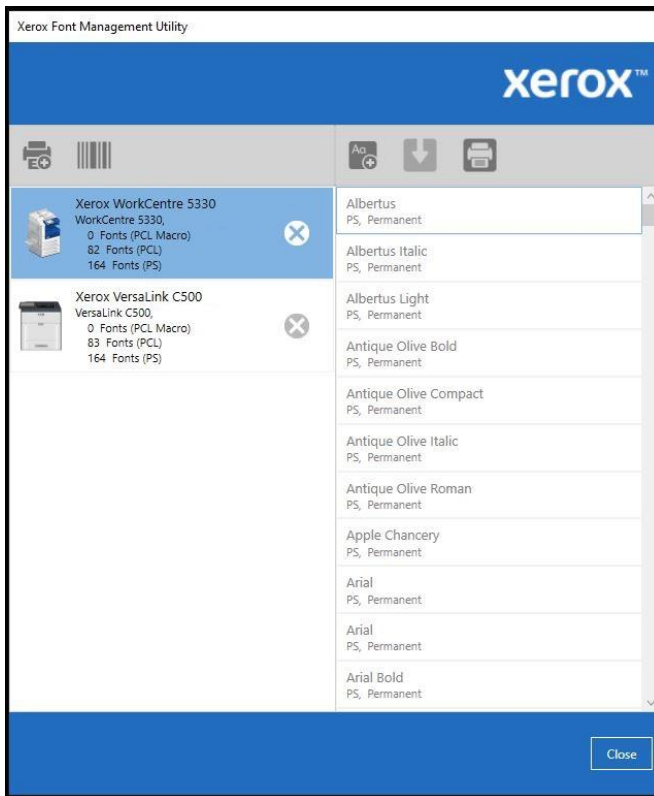

3. Select the Print Font List icon. 
4. A standard Windows Print dialog will appear.
 - a. Select the printer where you would like the font list to print.
 - b. The font list printed is the list of fonts which are installed on the printer selected in step two.
5. When finished, select Close to exit the utility.

Xerox Intelligent Barcode Utility (XIBU) feature

Overview

The FMU encompasses a utility that interprets Postscript **(only)** Barcode Fonts. This utility is called the Xerox Intelligent Barcode Utility (XIBU). XIBU is installed on the device and allows a user to send a Barcode font to the printer in which the information is converted from a Barcode to a readable format. The Xerox Barcode Utility only needs to be loaded once on the printer and it should remain available after reboots.


This section of the document describes how to perform the following with the XIBU:

 
- Add/Remove XIBU from a printer
- Print a sample barcode font list

The sample barcode list contains the name of each barcode along with a representative set of display items from the font.

Note: If a hard disk (SD or SSD Card) is not installed and/or not supported by the device, then XIBU will not be available

Installing XIBU onto a Printer

1. Select Start>Xerox>Xerox Font Management Utility.
2. Select a printer and select the XIBU icon. 
3. Check the Install/Update checkbox and select OK.

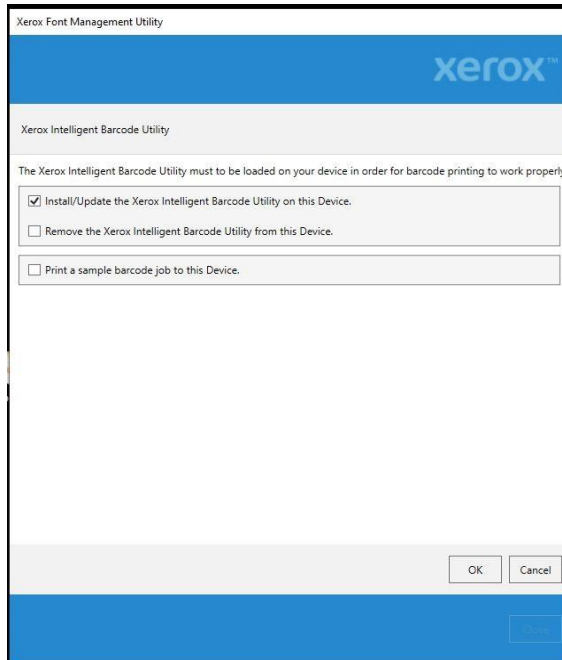

4. This will start the process of downloading the utility to the device.
5. Once the utility is installed select Close to exit the FMU.

Print Sample Barcodes

Note: XIBU must be installed on the device before printing sample barcodes.

1. Select Start>Xerox>Xerox Font Management Utility.
2. Select a printer and select the XIBU icon.
3. Select the Print a sample... check box and select OK.
4. The device selected in step two (2) will print out a sample list of Xerox barcodes.

Removing XIBU From a Printer

1. Select Start>Xerox>Xerox Font Management Utility.
2. Select a printer and select the XIBU icon.
3. Select the Remove checkbox and select OK.
4. This will start the process of removing the utility from the device.
5. Once the utility is un-installed select Close to exit the FMU.

FMU Troubleshooting

Install Status Unknown

Summary: The user sends a font and the device provides the “Install Status Unknown” warning.

Possible Cause(s):

- A. The time it takes to download the fonts exceeds the printer’s internal timeout.
- B. The font being installed is not accepted by the device and is not installed.
- C. The device does not support font status via SNMP. The FMU requires font status via SNMP

Action(s):

- A. Select the Back button. If the fonts that you downloaded does not appear in the right pane, try de-selecting the printer with Ctrl-Click and then reselecting it. This will refresh the printer’s font list.
- B. Validate the font being downloaded is supported by the printer being used. Attempt to install a different type of font to see if the device is accepting any fonts.
- C. Print a Font list at the device and verify the font did indeed install.

 


Fonts Cannot Be Selected to Install

Summary: The user sees a list of fonts however they are not selectable and/or the OK button is greyed out.

Possible cause: Device does not have a hard disk (SSD Card) installed, or an SSD card is not supported by the device

Action: Contact a Xerox sales representative

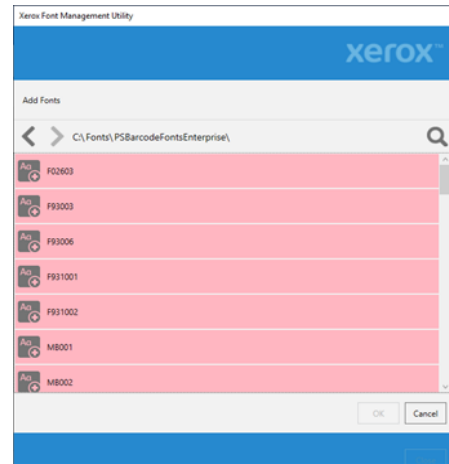

If none of these troubleshooting steps resolve the issue, contact Xerox Customer Support. You can reach Xerox Customer Support at <http://www.xerox.com> or by calling Xerox Support in your country.