


Flash Memory






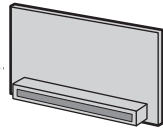


printer


Mémoire Flash • Memoria Flash • Flash-Speicher • Memoria flash • Memória flash • Flash-geheugen • Flash-minne • Flash-minne • Flash-hukommelse • Flash-muisti • Флэш-память • Paměť flash • Pamięć Flash • Flash memória • Flash Bellek • Μνήμη Flash • 闪存 • 快閃記憶體 • 플래시 메모리




See the instructional video at
www.xerox.com/office/5550support

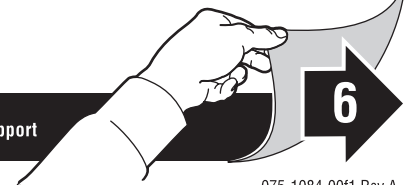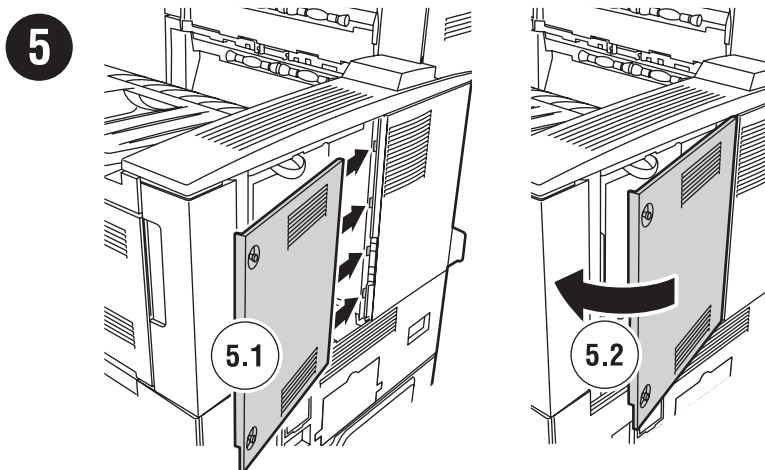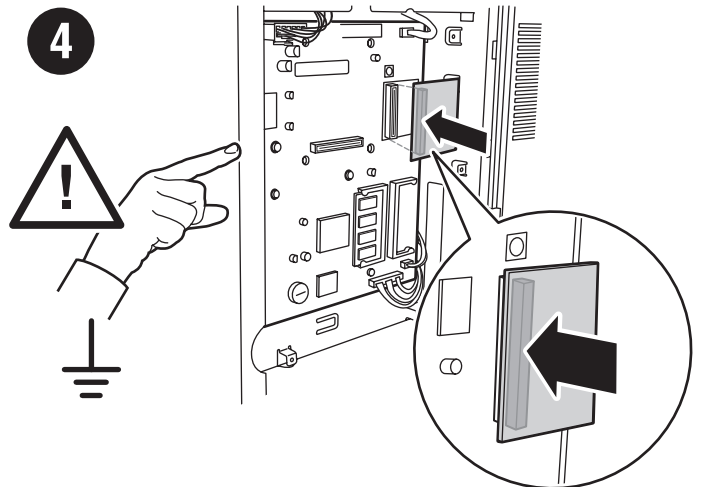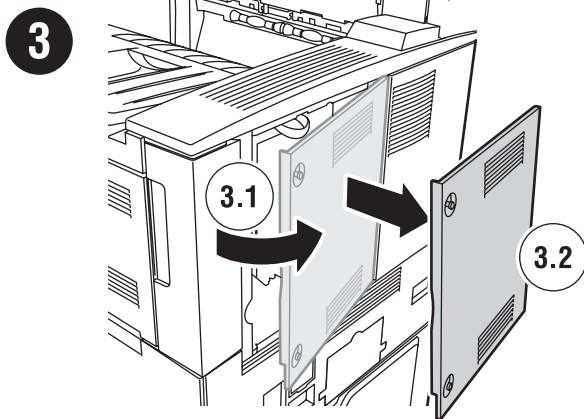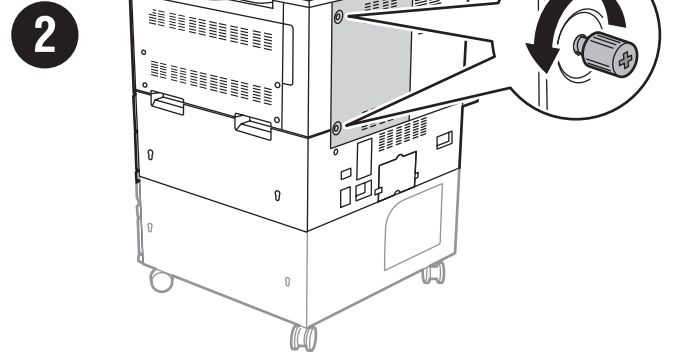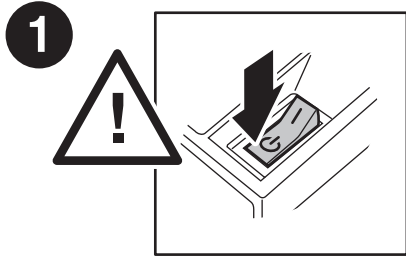

6

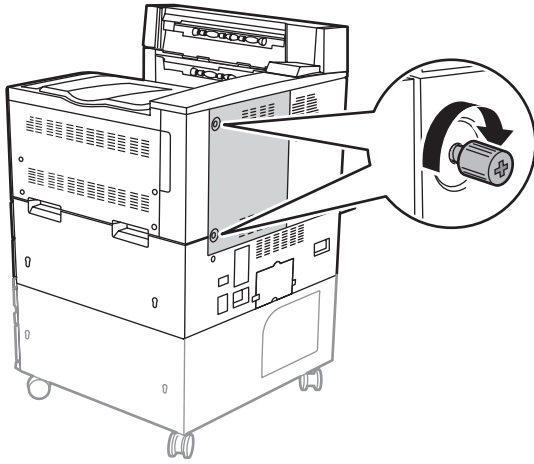

7

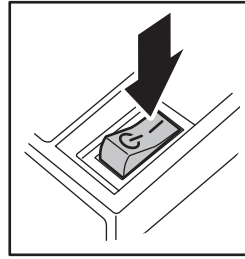

8

Confirm installation

Confirmez l'installation
 Confermare l'installazione
 Installation bestätigen
 Confirmar instalación
 Confirmar instalação
 Installatie bevestigen
 Bekräfta installation
 Bekrefta montering
 Bekræfte installation
 Vahvista asennus
 Підтвердіть установку
 Potvrdit instalaci
 Potwierdź instalację
 Telepítés jóváhagyása
 Yüklemeyi Onayla
 Επιβεβαίωση εγκατάστασης
 确认安装
 確認安裝
 설치 확인

Print Configuration Page

Imprimez la page de configuration
 Stampare la pagina di configurazione
 Konfigurationsseite drucken
 Imprimir página de configuración
 Imprimir página de configuração
 Configuratiepagina afdrukken
 Skriv ut konfigurationssidan
 Skriv ut konfigurasjonsrapport
 Udskrive konfigurationsside
 Tulosta konfigurointisivu
 Печать страницы конфигурации
 Tisk konfigurační stránky
 Drukuj Stronę konfiguracji
 Konfigurációlap nyomtatása
 Yapılandırma Sayfası Yazdır
 Εκτύπωση σελίδας διαμόρφωσης
 打印设置页
 列印設定頁
 환경 설정 쪽 인쇄

