

































 
















 
Xerox® AltaLink® B80XX Multifunction Printer















Product Symbols







Symbol	Description
	Warning: Indicates a hazard that can cause serious injury or death if not avoided.
	Hot Warning: Hot surface on or in the printer. Use caution to avoid personal injury.
	Pinch Hazard: This warning symbol alerts users to areas where there is the possibility of personal injury.
	Caution: Indicates a mandatory action to take to avoid damage to the property.
	Do not touch this part of the printer
	Do not touch the part or area of the printer.
	Do not touch the part or area of the printer.
	Do not expose the drum cartridges to direct sunlight.
	Do not burn the item.
	Do not burn the toner cartridges.
	Do not burn the drum cartridges.

Symbol	Description
	Do not burn the waste cartridge.
	Pinch Hazard: To avoid personal injury, use caution in this area.
	Do not load paper in this area
	To avoid lines on the output, ensure that original documents are loaded correctly in the document feeder.
	Hot surface. Wait for the indicated time before handling.
	On
	Off
	Standby and Power
	Ground/Common/Earth Terminal
	Do not use paper attached with staples or any form of binding clip.
	Do not use folded, creased, curled, or wrinkled paper.
	Do not load or use inkjet paper.
	Do not reload paper previously printed on or used.

Symbol	Description
	Do not use postcards.
	Do not copy money.
	No Knives
	No Scissors
	No Screwdrivers
	No Pens
	Add paper or media.
	Do not load paper in the tray above the MAX line.
	Do not load paper in the tray above the MAX fill line
	Do not load paper in the tray above the MAX fill line
	Maximum Paper Level Do not use paper attached with staples or any form of binding clip.
	Load original documents face up in the document feeder in the direction of the arrow as indicated.
	Paper Jam

Symbol	Description
	Lock
	Unlock
	Load paper/media in the direction indicated.
	Paper Clip
	Cooling
	Elapsed Time
	Pause to unload output
	NFC
	RFID
	Supply Paper
	Supply Paper Face Down
	1-Sided Original
	Hole-punched Paper

Symbol	Description
	Transparency
	Load letterhead paper face up in the tray in the direction and orientation shown.
	Load letterhead face down.
	Load labels paper face up in the tray in the direction and orientation shown.
	Load transparencies in the tray in the direction and orientation shown.
	Load envelopes with non-adhesive long-edge flaps print-side down and the flaps open and up.
	Load punch paper in the tray in the direction and orientation shown.
	Load letterhead paper in the tray in the direction and orientation shown.
	Load labels paper face down in the tray in the direction and orientation shown.
	Weight
	Load SIM card in this direction
	Do not touch this area
	Staple jam
	Staple

Symbol	Description
	Staple instructions
	Staple cartridge empty
	Imaging unit
	Fuser unit
	Services Home Button
	This item can be recycled.