
Table of contents

Safety Notices v

Electrical Safety	v
Disconnect Device	vi
Laser Safety	vi
Maintenance Safety	vi
Operational Safety	vii
Ozone Safety	viii

Notices ix

Radio Frequency Emissions	ix
FCC in the USA	ix
In Canada	ix
Safety Extra Low Voltage Approval	x
Certifications in Europe	x
It's Illegal in the USA	xi
It's Illegal in Canada	xiii
Environmental Notices for the USA	xiv
Environmental Notices for Canada	xiv
Product Recycling and Disposal	xv

Conventions xvi

Symbols	xvi
Writing Style Conventions	xviii

Tools Mode	1-1
Overview	1-1
Entering and Exiting Tools Mode	1-1
Navigating in Tools Mode	1-5
Machine Defaults and Feature Defaults	1-6
Machine Defaults 1	1-9
Initial Screen	1-10
Auto Color Calibration	1-13
What to know about screening	1-13
Run Calibration	1-16
Check Gradation	1-18
Manual Adjust	1-20
Tray Priority	1-23
System Timers	1-24
Power Saver	1-25
Screen Saver	1-26
Job Spacing	1-27
Tools Off	1-28
Auto Resume Scan	1-29
Auto Resume Print	1-30
Auto Resume Stop	1-31
Auto Resume Hold	1-32
Auditron Mode Off	1-33
Job Complete	1-34
Job Program Incomplete	1-35
Audio Tones	1-36
Productivity Setting	1-38
Auto Tray Switching	1-40
Transparency Size	1-42
Set Date & Time	1-43
Setting the Date	1-43
Setting the Time	1-44
Dual Language	1-45
Non-Standard Paper Size	1-46
D-MAX Setup	1-47
D-MAX Color Not Selectable	1-47
When to Use D-MAX Setup	1-48
Machine Defaults 2	1-50
Paper Registration Adjustment	1-51
100% Adjust	1-55
Special Tray	1-56
Additional Originals	1-57

Stored Program Access	1-58
Auto Recognition	1-59
Reduce/Enlarge Presets	1-62
Photo Reproduction Level	1-64
Color Adjust & Registration	1-65
Auto Rotation	1-67
Maximum Scan to Print Quantity	1-69
Decurler Setup	1-70
Decurler Specifications	1-70
Decurler Settings A through D	1-71
Decurler Settings E1 through E6	1-71
Calculating curl	1-72
NVM Read/Write	1-74
Machine Defaults 3	1-78
DFA Device	1-78
Feature Defaults 1	1-80
Color Mode	1-81
Output	1-82
Offset Catch Tray	1-83
Stacker Settings	1-84
Two Stackers Settings	1-85
Stacker/Stapler Settings	1-87
Edge/Center Erase	1-88
Turning Off Edge Erase	1-88
Border Erase	1-89
Edge Center Erase	1-90
Color Shift	1-91
Reduce/Enlarge	1-92
100% or Auto	1-92
Preset/Variable	1-93
2 Sided Output	1-94
Original Type	1-97
Chroma	1-100
Paper Supply	1-101
Image Shift	1-102
Color Balance	1-106
Lighten/Darken	1-107
Feature Defaults 2	1-108
Sharpness	1-109

Auditron	2-1
Overview	2-1
Authentication	2-2
Initialization	2-4
Create/Modify User Accounts	2-6
Creating a User Account	2-7
Modifying a User Account	2-9
Changing the Tools Mode Password	2-10
Creating a Password for the Auditron Mode	2-11
Review User Accounts	2-13
Review General Accounts	2-15
Review Printer Job Account	2-17
Review Service Prints Account	2-18