

THE DOCUMENT COMPANY

XEROX

DC230LP NetWare® 4.x NDS Quick Install

Installation Requirements:

If this is a Token Ring installation, the Token Ring card must be installed by your Xerox service representative and configured before performing this procedure. Refer to the *Token Ring Quick Install* card.

If running NLSP, be sure that RIP/SAP compatibility is configured on the same segment as the DC230LP.

Note: For a Bindery installation, refer to the *NetWare 3.1x/4.1x Bindery Quick Install* card.

Before Installation:

- Perform the network installation for the printer using the appropriate NetWare utility (PCONSOLE or NWADMIN).

Note: Define the printer as *Defined Elsewhere* or *Remote/Other*.

- Record the following information for use during setup at the DC230LP:

Print Server name: _____

Print Server Password: _____

 
NDS Tree: _____

NDS Name Context: _____

 
Frame Type: _____

Poll Interval: _____

This installation procedure assumes that you know how to navigate through the menu system on the DC230LP Control Panel. Refer to the quick reference card, *Using the Menu System* (701P96834) for assistance.

1. Connect the DC230LP to your network outlet or cable.
2. Access the System Administration menus:
 - a) Press **[Online]** to take the printer off line.  displays.
 - b) Press **[Menu]**.  displays.
 - c) Press **[▶]**, then press **[▲]** or **[▼]** until  displays.
 - d) Press **[▶]**.  displays.
 - e) Use the **[▲]** and **[▶]** keys to enter **[2222]**.

Note: 2222 is the factory default password and may be changed to suit your needs. Refer to the *DC230LP System Administration Guide, Network Installation and Troubleshooting*.

- f) Press **[Enter]**.  displays.
3. Access the NetWare menus:
 - a) Press **[▶]**.  displays.
 - b) Press **[▼]** until  displays.
 - c) Press **[▶]**.  displays.
 - d) Press **[▼]** until  displays.
 4. Enable NetWare:
 - a) Press **[▶]**.  displays.
 - b) Press **[▶]**.  displays.
 - c) Press **[▼]**.  displays.

THE DOCUMENT COMPANY

XEROX

DC230LP NetWare® 4.x NDS Quick Install

- d) Press **[Enter]**. **SAVED** displays momentarily, followed by

Enablement
Enabled >

5. Select the appropriate Interface for your network:

Note: Token Ring will not be available as a selection unless it has been installed and configured.

- a) Press **[▼]** until
- Interface
Ethernet >
- displays. If Ethernet is the desired interface, go to step 6.

- b) If Token Ring is the required interface, press **[▶]**, then press **[▼]** until
- Interface
Token Ring =
- displays.

- c) Press **[Enter]**. **SAVED** displays momentarily, followed by
- Interface
Token Ring >

6. Select the Frame Type for your network:

- a) Press **[▼]** until
- Enet Frame Type >
Ethernet II
- displays. If Ethernet II is the desired Frame Type, go to step 7.

- b) Press **[▶]**, then press **[▼]** until the required Frame Type displays

Enet Frame Type =
(required setting)

- c) Press **[Enter]**. **SAVED** displays momentarily, followed by

Enet Frame Type >
(your entry)

IMPORTANT: During the next two steps, be sure that the *Print Server Name* and *Print Server Password* are exactly the same as the values entered in PCONSOLE or NWADMIN.

7. Enter the Print Server Name:

- a) Press **[▼]** until
- Pserver Name >
(current entry)
- displays.

- b) Press **[▶]**. **Pserver Name =**
(current entry) * displays.

- c) Press **[▶]** repeatedly until the cursor reaches the end of the entry. A tone sounds indicating when the last character has been reached.

- d) Press **[◀]** repeatedly to delete the current entry.

- e) Use the **[▲]** and **[▶]** keys to enter the Print Server name.

- f) Press **[Enter]**. **SAVED** displays momentarily, followed by

Pserver Name >
(your entry)

8. Enter the Print Server Password:

- a) Press **[▼]** until
- Pserver Pswrd >

- displays.

- b) Press **[▶]**. **Pserver Pswrd =**
********* * displays.

- c) Use the **[▶]** to move to the last character of the current entry. A tone sounds when the last character has been reached.

- d) Press **[◀]** repeatedly to delete each character.

- e) Use the **[▲]** or **[▼]** key to enter the first character of the password.

- f) Press **[▶]** to move to the next character. Repeat this procedure to enter the entire password.

- g) Press **[Enter]**. **SAVED** displays momentarily, followed by your entry

 
Pserver Pswrd >

9. Enter a dash **[–]** as the File Server name:

 
THE DOCUMENT COMPANY

 
XEROX

DC230LP NetWare® 4.x NDS Quick Install

- a) Press [▼] until  displays.
- b) Press [▶].  displays.
- c) Press [▶] repeatedly until the cursor reaches the end of the current entry. A tone sounds indicating when the last character has been reached.
- d) Press [◀] repeatedly to delete each character.
- e) Use the [▲] and [▼] keys to select the [-] (dash).
- f) Press [Enter]. **SAVED** displays momentarily, followed by .

 
10. Enter the Poll Interval:

- a) Press [▼] until  displays.
- b) Press [▶].  displays.
- c) Press [▲] or [▼] to increase or decrease the setting to the desired number.

- d) Press [Enter]. **SAVED** displays momentarily, followed by .
- #### 11. Enter the NDS Tree name:

- a) Press [▼] until  displays.
- b) Press [▶].  displays.
- c) Press [▶] repeatedly until the cursor reaches the end of the entry. A tone sounds when the last character is reached.
- d) Press [◀] repeatedly to delete the current entry.
- e) Use the [▲] or [▼] key to enter the first character in the NDS Tree name.
- f) Press [▶] to move to the next character and repeat this procedure to enter the entire name.
- g) Press [Enter]. **SAVED** displays momentarily, followed by .

12. Enter the NDS Context:

- a) Press [▼] until  displays.
- b) Press [▶].  displays.
- c) Press [▶] repeatedly until the cursor reaches the end of the entry. A tone sounds indicating when the last character has been reached.
- d) Press [◀] repeatedly to delete the current entry.
- e) Use the [▲] or [▼] key to enter the first character in the NDS Context name.
- f) Press [▶] to move to the next character and repeat this procedure to enter the entire name. The fully qualified name should be used for NDS Trees with a country code. Notice in the examples below that there are no leading or trailing dots.

EXAMPLE A: NDS Name Context for a Tree with a country:

OU=SALES.O=MYCOMPANY.C=US

EXAMPLE B: NDS Name Context for a Tree without a country:

SALES.MYCOMPANY

- g)** Press **[Enter]**. ****SAVED**** displays momentarily, followed by

NDS Context
(your entry) >

- 13.** Save all the settings:

- a)** Press **[Online]**.
displays.

Reset Required
Press ENTER key

- b)** Press **[Enter]**.

Warming Up
Please Wait ... >

The DC230LP will reboot, save the settings entered, and print a Configuration Report in approximately 3 minutes.

- 14.** Check the settings on the Configuration Report against those entered to be sure they are correct. The Pserver Password does not appear on the Configuration Report.

- 15.** At the client, install print drivers and map the printer in the usual manner. Refer to the CentreWare® manual, *Getting Started with Print and Fax Services*, for additional information.

Additional information on the NetWare setup can be found in the *DC230LP System Administration Guide, Network Installation and Troubleshooting*.