

# Novell NetWare 4.1X NDS Quick Install Card

## Xerox Document Centre 240/255/265 LP/ST

### Before You Start

If your printer is equipped with a Token Ring interface, use the **Token Ring Quick Install Card** supplied in this set to set the Ring Speed and Source Routing settings for your environment.

The CentreWare software supplied with your printer can be used to set up your printer on your Novell network. Refer to the document entitled **Getting Started with Admin Services**. This procedure assumes you ran NWADMIN or PCONSOLE to set up a print server object. Please refer to the documentation supplied by Novell to complete this task. Record precisely (Observe upper and lower case, dot notation etc.) the following:

NDS Tree \_\_\_\_\_

NDS Context Name \_\_\_\_\_

Print Server Name \_\_\_\_\_

Print Server password \_\_\_\_\_

Additionally, you must set **NCP packet signature** option to **0,1**, or **2** (3 is not supported), AND set **Reply to get nearest server** to **ON** for at least one file server that is on the same segment as the printer.

**NOTE:** ALL Print Servers you create must have a password. When your printer will service queues on multiple file servers, the Print Server name must be the same on all file servers and the Print Server password must be the same on all file servers.

### Go to the printer and...

1. Connect your Document Centre to the network with the appropriate cabling.
2. Enter the *Tools* pathway.
  - a) Press the **Access (A)** button.
  - b) On the keypad enter **1111** or the current password. Press the **Enter** button when finished. If your printer is an ST model press the **Go to Tools** button, otherwise skip to the next step.
  - c) The Touch Screen will be used for the remainder of the data entry.
3. Enable the Network Protocol
  - a) Press the **Connectivity and Network Setup** button.
  - b) Wait for the screen to refresh and press the **Network Setup** button.
  - c) Press the **NetWare** button.
  - d) Wait for the screen to refresh and press the **Protocol and Media** button.

- e) Press the **Enable** button. Once pressed the Physical Media buttons will appear. Select **Ethernet** or **Token Ring**. Press **Save** to retain the settings and continue.

4. Set the Frame Type (**Ethernet ONLY. For devices equipped with a Token Ring interface, skip Step4a and 4b**).

- a) Press the **Frame Type** button.
- b) Select the frame type desired then press **Save** to retain your changes and exit to the NetWare Options screen.

5. Set the NDS Settings

- a) Press the **NDS Settings** button.

Novell suggests using typeful names when entering Name Context and Directory Service Tree information.

#### TYPEFUL NAME EXAMPLE:

`cn=contextname.ou=organization.o=company.c=country`

- b) At this screen press the **Name Context** button and use the touch panel keyboard to enter the context in which this printer resides. To access numeric characters and punctuation, press the **More Characters** button. When finished press **Save**.

