









Xerox Nuvera[®] 100/120/144/157 EA and MX Production Systems










Xerox Nuvera[®] 200/288/314 EA and MX Perfecting Production Systems

 
 
 
 
 


Product Symbols






 

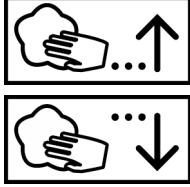


 












Refer to the following table for the product symbols and their definitions.


| Symbol | Definition |
|---|--|
|  | Caution This symbol indicates a mandatory action to take in order to avoid damage to these areas. |
|  | Warning This symbol alerts users to areas where there is the possibility of personal injury. |
|  | Hot Warning This symbol alerts users to areas where there are heated surfaces which should not be touched. |
|  | Hot Warning - Burn Hazard This symbol alerts users to areas where there are heated surfaces which should not be touched. |
|  | Laser Warning This symbol indicates a laser is being used and alerts the user to refer to the appropriate safety information. |
|  | Pinch Hazard This warning symbol alerts users to areas where there is the possibility of personal injury. |
|  | High Voltage Warning This warning symbol alerts users to areas where there is high voltage. To avoid personal injury, use extreme care in these areas. |
|  | Lock |

| Symbol | Definition |
|---|---|
|  | Unlock |
|  | Do Not Touch |
|  | Do Not Dispose into an Open Flame / Incinerate |
|  | Paper Jam |
|  | Do Not Use Transparencies / Overhead Projector Sheets |
|  | Do Not Use Tabs |
|  | Do Not Use Media Attached with Staples or Paper / Metal Clips |
|  | Load Drilled Paper as Indicated |
|  | Load Labels as Indicated |
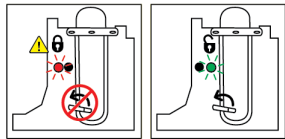
| Symbol | Definition |
|---|--|
|  | <p>Load Tabs as Indicated</p> |
|  | <p>Load Letterhead as Indicated</p> |
|  | <p>Load Transparency Media as Indicated</p> |
|  | <p>Load Preprinted Media as Indicated</p> |
|  | <p>Drilled Paper</p> <ul style="list-style-type: none"> • 2 or 3 Holes • 2 or 4 Holes |
|  | <p>Bidirectional Arrow</p> |
|  | <p>Left Direction Indicator</p> |

| Symbol | Definition |
|--|--|
|  | Right Direction Indicator |
|  | Up Direction Indicator |
|  | Down Direction Indicator |
|  | Maximum Fill Line Do not load media in the tray above this line. |
|  | Staple |
|  | Large Media Size Indicator This shows the user where to position the tray lever for large media sizes. |
|  | Position Arrows |
|  | Clean Glass as Indicated |
|  | Toner |
|  | Empty Toner |
|  | Full Toner |
|  | Do Not Use Non-MICR (White) |

| Symbol | Definition |
|---|---|
|  | <p>Do Not Use EA Toner (Green)</p> |
|  | <p>Do Not Use MICR Toner (Red)</p> |
|  | <p>Dry Ink Waste Bottle When the bottle is full, remove the cap from the cap holder on the side of the full bottle, and secure the cap onto the open hole on the top of the full bottle.</p> |
|  | <p>Caution Area</p> <ul style="list-style-type: none"> • Do not rotate the handle when the light is red. • When the light is green, the handle may be rotated. |
|  | <p>Hole Punch Waste Bin</p> |
|  | <p>Hole Punch Handle</p> |
|  | <p>On This symbol indicates the main power switch is in the ON position.</p> |
|  | <p>Off This symbol indicates the main power switch is in the OFF position.</p> |
|  | <p>Standby This symbol indicates the secondary power switch is in the Standby position.</p> |

| Symbol | Definition |
|---|---|
|  | <p>Do Not Dispose in Normal Household Waste Stream</p> <ul style="list-style-type: none"> • Application of this symbol is confirmation that you should not dispose of items, such as Customer Replaceable Units (CRUs), in the normal household waste stream. You must dispose of these items in compliance with agreed national procedures. • This symbol often accompanies batteries and indicates that used electrical and electronic products and batteries should not be mixed with general household waste. • For more information about collection and recycling, please contact your local municipality, your waste disposal service, or the point of sale where you purchased the items. |