

2 Tray Module, installation:
1-5, 2-9

2 Up option: 22-19. See also *Advanced Features*.

2-Sided feature: 22-19. See also *Advanced Features*.

Access: 6-1

Passwords: 6-3

Printer connection: 6-2

Accessories: 2-9

Administrator Password:
23-13. See also *Administrative Features*.

Administrative Features: 23-2

Advanced Features: 22-19

Advanced Features button:
2-7, 21-2. See also *Advanced Features*.

Anti-rotation button: 2-3

AppleTalk cabling diagram:
5-6

Area 1: 24-9. See also *Bypass Tray*.

Area 2: 24-13

Area 3: 24-15

Area 4: 2-2, 24-17

Area 5: 24-19. See also *Fuser Area* or *Upper Inverter*.

Area 6: 24-25

Arrow buttons: 21-2

Audio Tones: 23-16. See also *Administrative Features*.

Auto Mode Change: 23-12.
See also *Administrative Features*.

Auto Start: 21-4

Automatic Color Adjust: 23-9.
See also *Administrative Features*.

Background Suppression:
22-16. See also *Quality Adjustment*.

Basic Copying: 21-1

Bindery

Context, NetWare 4.x or 5.x: 8-6

Print queue for: 8-7

Setup: 7-13

Black overprint print option:
B-4, B-9

Brightness print option: B-4

Bypass Transport: 2-1.
See also *Area 1*.

Bypass Tray: 2-1, 22-4, 22-9.
See also *Paper Supply* and *Area 1*.

Cabling diagrams

AppleTalk: 5-6

Parallel cable: 5-11

Windows, Novell environment: 5-7

- Windows NT 4.0:** 5-8
- Windows printing:** 5-9
- Unix:** 5-10
- Calibrator:** 20-1, 20-5. See also *ColorWise Pro Tools*.
- Changing Global Settings:** 20-17. See also *Profile Manager*.
- Checking Edited Profiles:** 20-11. See also *Editing Profiles*.
- Chooser (Macintosh OS)**
 - Selecting the printer:** 15-1
 - Setting up printer in:** 12-4
- Cleaning procedures:** 25-1
- Clear All:** 21-1
- CMYK Simulation Method print option:** B-4
- CMYK Simulation Profile print option:** B-5, B-10
- Color:** 23-5. See also *Administrative Features*.
- Color adjustment:** 24-29
- Color Editor:** 20-6. See also *ColorWise Pro Tools*.

- Color Level:** 22-174. See also *Quality Adjustment*.
- Color Mode:** 23-5
- Color Mode button:** 2-8
- Color Mode print option:** B-5
- ColorSync System Profile, setting the:** 12-9
- ColorWise Pro Tools:** 13-12, 20-1, 20-6
 - Configuring a connection for:** 13-12

- Configuration page**
 - Printing from the Printer Control Panel:** 7-16
- Connecting to the network:** 5-1, 5-12
- Contrast Dial:** 21-2
- Copier Control Panel:** 21-1
- Copier Main Screen:** 21-4
- Copier Screen:** 21-1. See also *Copier Main Screen*.
- Copies print option:** B-5
- Copy button:** 2-7
- Copy button:** 21-1. See also *Copy Mode*.
- Copy Features:** 22-1
- Copy Mode:** 21-3
- Copy/Print Cartridge:** 25-9, 25-18
- Copy/print quality problems:** 24-27, 24-60
- Custom Output Direction print option:** B-11
- Custom page sizes**
 - Macintosh OS:** 15-6
 - Windows, defining:** 14-13
 - Windows, printing:** 14-14
- Default Profiles:** 20-12. See also *Profile Manager*.
- Default settings for print options:** B-2
- Defaults for Copy:** 23-4 See also *Administrative Features*.
- Defining Profiles:** 20-16. See also *Profile Manager*.
- Densitometer:** 20-4
- Density:** 23-4
- Document Cover:** 2-6

Document Feeder: 1-49, 21-5, 25-3, 26-2

Document Feeder Belt: 25-3

Document Feeder Cover: 25-4

Document Glass: 2-6, 21-5, 25-2

Document Glass Cover: 25-2

Document Input Tray: 2-5

Downloading Profiles: 20-13.
See also *Profile Manager*.

Dry Ink Carrousel access: 2-3

Dry Ink Cartridges: 25-5, 25-17

Duplex print option: B-5, B-12

Duplex Tray: 1-27, 2-1, 2-9, 24-7

Editing Profiles: 20-7

Electrical specifications: 26-3

Electronic Collation print option: B-5, B-11

Envelopes: 22-10. See also *Bypass Tray*.

Erase option: 22-19, 23-5. See also *Advanced Features*.

Ethernet cabling diagram: 5-4

Exit button: 21-2

Expert Mode: 20-6

Feed rollers: 25-4

Fiery Link

Configuring a connection for: 13-3, 13-6, 13-9

My Fiery List: 17-8

Setting preferences for: 17-6

Tools: 17-4

Using: 17-1—17-8

Fiery Server hardware: 26-5

Fiery software

Configuring ColorWise Pro Tools connection: 13-12

Configuring Fiery Link connection: 13-2, 13-11

Downloading installers with Fiery WebTools: 13-15

Installing overview: 12-6, 13-1

Installing ColorWise Pro Tools: 13-12

Installing Fiery Link: 13-1

Installing on Macintosh OS: 12-6

Server support for: 8-1

Setting up Fiery WebTools: 13-15—13-16

WebDownloader: 14-20

Fiery WebDownloader: 14-20, 16-7

Fiery WebLink

Destination change: 8-13

Using: 16-4

Fiery WebSetup

Accessing: 19-1, 19-3

Enabling Java services: 19-2

Exiting: 19-24

General Setup options: 19-4

Network Setup: 19-8

Printer Setup: 19-21

Server Setup: 19-5

Fiery WebSpooler

Accessing: 18-2

Managing jobs: 18-1

Manipulating job options

- and job flow: 18-4
- Overriding job options: 18-6
- Tracking jobs: 18-1
- Using the Job Log: 18-7
- Window, about: 18-3
- Fiery WebTools:** 6-6
 - Accessing: 8-13, 16-3
 - Configuring for: 8-12
 - Downloading installers with: 13-15
 - Fiery Link: 17-1—17-8
 - Font Manager: 16-8
 - Installer WebTool: 16-5
 - Overview of use: 16-1
 - Setting up on client: 8-12, 13-16
 - Setting up on printer: 8-12, 13-15
 - Status WebTool: 16-14
 - WebLink: 8-13, 16-4
 - WebDownloader: 14-20, 16-7
 - WebSetup: 19-1—19-26
 - WebSpooler: 18-1—18-8
- Font Manager:** 16-8
- Fonts list:** 26-6
- Frame types:** 5-3
- Front Cover:** 2-1
- Fuser area:** 2-3, 24-19.
See also *Area 5*.
- Gamma print option:** B-3
- ICC printer profile, loading**
 - Photoshop 4.0: 12-11
 - Photoshop 5.0: 12-12
- ICM profile, loading**
 - Windows 95/98: 9-24, 9-26
 - Windows 2000: 10-32, 10-34
 - Windows NT 4.0: 11-26, 11-28
- Information pages:** 7-16
- Installation, hardware:** 1-1
- Installer WebTool:** 16-5
- Installing user software**
 - ColorWise Pro Tools:** 13-12
 - Downloading installers with Fiery WebTools:** 13-15
 - Fiery software:** 13-1—13-16
 - For Macintosh OS:** 12-1—12-12
 - For Windows 95/98:** 9-1—9-26
 - For Windows 2000:** 10-1—10-34
 - For Windows NT 4.0:** 11-1—11-28
- Interface specifications:** 26-4
- IPX printing overview:** 8-3
- IPX/SPX printing**
 - Windows 95/98: 9-14
 - Windows 2000: 10-15
 - Windows NT 4.0: 11-9
- Java**
 - Enabling Java services:** 19-2
 - Installing Runtime (Macintosh OS):** 12-7
- Job Log**
 - Deleting: 18-8
 - Displaying: 18-7
 - Printing: 18-8
 - Updating: 18-8
 - Using the: 18-7

- Job Management error messages:** 24-63
- Knob, Dry Ink Carrousel:** 2-3
- Layout print option:** B-5
- Lever A:** 2-3
- Lever B:** 2-3

- Lighten/Darken:** 22-15.
See also *Density*.
- Lighten/Darken button:** 21-2.
See also *Lighten/Darken*.
- Limit Copy Set:** 23-13. See also *Administrative Features*.
- Lower Inverter:** 1-31. See also *Area 6*.
- LPR printing**
 - Windows 2000 new installation:** 10-9
 - Windows 2000 upgrade installation:** 10-13
 - Windows NT 4.0:** 11-15
- Macintosh OS**
 - Application printing:** 15-1, 15-5
 - Cabling with AppleTalk:** 5-6
 - Custom page size:** 15-6
 - Installing user software:** 12-1—12-12
 - Installing Fiery software and fonts:** 12-6
 - Installing Mac OS Runtime for Java:** 12-7
 - Installing Mac OS software:** 12-6
 - Loading the monitor settings file (Photoshop 5.0):** 12-10
 - Loading the ICC printer profile (Photoshop 4.0):** 12-11
 - Loading the ICC printer profile (Photoshop 5.0):** 12-12
 - Printing:** 15-1—15-6
 - Selecting the printer:** 15-1
 - Setting print options:** 15-3
 - Setting the ColorSync System Profile:** 12-9
 - Setting up the printer as a PostScript printer:** 12-2
 - Setting up the printer in the Chooser:** 12-4
- Macintosh print driver:** 3-11
- Maintenance:** 25-1
- Making a Copy:** 21-10
- Managing Profiles:** 20-15.
See also *Profile Manager*.
- Map to networking chapters:** 4-2
- Max guideline:** 1-36
- Media Type print option:** B-6
- Menus, top-level printer:** 7-2
- Metal Plate:** 1-35
- Meter Check:** 23-1
- Mirror print option:** B-6
- Monitor settings file, loading (Photoshop 5.0):** 12-9
- My Fiery List:** 17-8
- NDS**
 - Connection:** 8-6
 - Setup:** 7-10
- Negative print option:** B-6
- NetWare 3.x, 4.x, 5.x**
 - Bindery context, 4.x or 5.x:** 8-6
 - Configuring server:** 8-4

- NDS connection:** 8-6
- Printing:** 8-2
- Print queue for bindery:** 8-7
- Setting up clients:** 8-7
- NetWare clients Setup:** 8-7
- Network**
 - Options:** 7-8
 - Protocols:** 5-3, 7-8
- Network problem solving:** 24-45
- Network Protocol setup messages:** 24-46
- Network server**
 - Fiery utilities, support for:** 8-1
 - NetWare 3.x, 4.x, 5.x printing:** 8-2, 8-4—8-7
 - Setup:** 8-1—8-16
 - Setup requirements:** 6-7
- Network Services Setup**
 - At Printer Control Panel:** 7-10
 - Remote:** 19-8
- Novell cabling for Windows:** 5-7
- Novell error messages:** 24-51
- Novell problems during network setup:** 24-48
- Number buttons:** 2-7
- Numeric Keypad:** 21-2
- Orientation print option:** B-6
- Original Exit Tray:** 2-5
- Output option:** 22-20, 23-5. See also *Advanced Features*.
- Output print option:** B-6
- Output Profile print option:** B-6, B-13
- Overriding print options:** B-2
- Oversize Paper Tray:** 2-9
- Page Order print option:** B-7
- Page Range print option:** B-7, B-13
- Paper Feed Roller access cover:** 2-5
- Paper Guides:** 1-36
- Paper Size print option:** B-7
- Paper Source print option:** B-7
- Paper Stop:** 2-1
- Paper Supply:** 22-3, 23-4
- Paper Supply arrow buttons:** 2-7, 21-2. See also *Paper Supply*.
- Paper Supply Indicators:** 21-2. See also *Paper Supply*.
- Paper Tray 1:** 1-35, 2-1, 26-1
- Paper Tray 2:** 26-1
- Paper Tray 3:** 26-1
- Paper tray jam:** 24-5
- Paper Trays:** 22-4. See also *Paper Supply*.
- Paper, loading:** 1-35
- Parallel port printing**
 - Cable connection diagram:** 5-4, 5-11
 - Windows 95/98:** 9-7, 9-9, 9-12
 - Windows 2000:** 10-3
 - Windows NT 4.0:** 11-3
- Passwords**
 - Control level scenarios:** 6-4
 - Setting:** 6-3
- PCL Setup at the Printer Control Panel:** 7-6

- Phosphors print option:** B-3
- Photoshop 4.0, loading the ICC printer profile:** 12-12
- Photoshop 5.0**
- Loading the ICC printer profile (Macintosh OS):** 12-12
 - Loading the monitor settings file (Macintosh OS):** 12-9
 - Loading the Working space profile**
 - Windows 95/98:** 9-25
 - Windows 2000:** 10-33
 - Windows NT 4.0:** 11-27
- Positioning Originals** See *Document Glass* or *Document Feeder*.
- Postcards:** 22-7. See also *Bypass Tray*.
- PostScript or PCL drivers in Windows 95/98:** 9-3
- PostScript Setup at the Printer Control Panel:** 7-5
- Power OFF:** 1-56
- Power ON:** 1-55
- Print area:** 26-3
- Print options**
- Black overprint:** B-4, B-9
 - Brightness:** B-4
 - Check on Print:** B-4
 - CMYK Simulation Method:** B-4
 - CMYK Simulation Profile:** B-5, B-10
 - Color Mode:** B-5
 - Copies:** B-5
 - Custom Output Direction:** B-11
 - Default settings:** B-2
 - Duplex:** B-5, B-12
 - Electronic Collation:** B-5, B-11
 - Gamma:** B-3
 - Layout:** B-5
 - Media Type:** B-6
 - Mirror:** B-6
 - Negative:** B-6
 - Orientation:** B-6
 - Output:** B-6
 - Output Profile:** B-6, B-13
 - Override hierarchy:** B-2
 - Page Order:** B-7
 - Page Range:** B-7, B-13
 - Paper Size:** B-7
 - Paper Source:** B-7
 - Phosphors:** B-3
 - Pure Black Text/Graphics:** B-8
 - Rendering Style:** B-8, B-13
 - RGB Separation:** B-8
 - RGB Source Profile:** B-8, B-13
 - Scale:** B-8
 - Spot Color Matching:** B-9
 - Table:** B-3
 - Where to set:** B-1
 - White point:** B-3
- Printer:** 1-1, 1-9, 1-19
- Printer connection**
- Access:** 6-2
 - Ensuring:** 6-8
- Printer Control Panel:** 2-1, 2-4

- Printer Control Panel**
 - Bindery Setup:** 7-13
 - NDS Setup:** 7-10
 - Network Protocol options:** 7-8
 - Network Services Setup:** 7-10
 - PCL Setup:** 7-6
 - PostScript Setup:** 7-5
 - Printer Setup:** 7-4
 - Printing information pages:** 7-16
 - Setup from:** 7-1
 - SMB Setup:** 7-15
 - System Setup:** 7-3
 - Top-level menus:** 7-2
- Printer description files**
 - Windows 95/98:** 9-24
 - Windows 2000:** 10-32
 - Windows NT 4.0:** 11-26
- Printer drivers**
 - Windows 95/98:** 9-1—9-26
 - Windows 2000:** 10-1—10-34
 - Windows NT 4.0:** 11-1—11-28
- Printer error codes:** 24-37
- Printer error messages:** 24-33
- Printer memory card:** 1-73, 2-9
- Printer memory card, installation:** 1-73
- Printer options, setting**
 - Windows 95/98:** 9-22
 - Windows 2000:** 10-30
 - Windows NT 4.0:** 11-24
- Printer Output Tray:** 2-1
- Printer Paper Feed Area:** 2-1. See also *Area 2*.
- Printer power switch:** 2-2
- Printer problems:** 24-56
- Printer Setup:** 7-4
- Printer Setup, remote:** 19-21
- Printer specifications:** 26-1
- Printer, components:** 2-1
- Printing**
 - From applications:** 14-2, 15-1
 - From Macintosh OS:** 15-1—15-6
 - From Windows:** 14-1—14-20
 - Custom page sizes:** 14-13, 15-6
 - Remote:** 14-15
 - Using saved settings:** 14-9
 - WebDownloader:** 14-20
 - Windows 95/98:** 14-2—14-6
 - Windows 2000:** 14-7
 - Windows NT 4.0:** 14-15
- Printing options, setting**
 - Windows 95/98 PostScript options:** 14-2, 14-3
 - Windows 95/98 PCL options:** 14-2, 14-5
 - Windows 2000:** 14-7
 - Windows NT 4.0:** 14-16
- Profile Manager:** 20-11. See also *ColorWise Pro Tools*.
- Pure Black Text/Graphics print option:** B-8
- Quality Adjustment:** 22-16
- Quality Adjustment button:** 2-7, 21-2. See also *Quality Adjustment*.

- Reduce/Enlarge:** 22-1, 23-4
- Reduce/Enlarge arrow buttons:** 2-8, 21-2. See also *Reduce/Enlarge*.
- Reduce/Enlarge Indicators:** 21-2. See also *Reduce/Enlarge*.
- Registration corner:** 2-6
- Remote printing, saving files for:** 14-15
- Rendering Style print option:** B-8, B-13
- Reorder numbers:** 2-10, 26-4
- RGB Separation print option:** B-8
- RGB Source Profile print option:** B-8, B-14
- Runtime for Java, installing (Macintosh OS):** 12-7
- Runtime Printer error messages:** 24-53
- Saved settings**
 - Creating:** 14-9
 - Deleting:** 14-10
 - Exporting:** 14-11
 - Importing:** 14-11
 - Loading:** 14-9
 - Modifying:** 14-10
- Scale print option:** B-8
- Scanner Control Panel components:** 2-7
- Scanner error messages:** 24-39
- Scanner memory card, installation:** 1-79, 2-9
- Scanner Stand, installation:** 1-39
- Scanner, components:** 2-5
- Scanner, installation:** 1-45
- Select button:** 21-2
- Self Diagnostics:** 23-21. See also *Administrative Features*.
- Setup**
 - From Printer Control Panel:** 7-1—7-16
 - Preparing for:** 6-1
 - Printer Control Panel:** 7-1
 - Remote, from WebSetup:** 19-1—19-7
- Sharpness:** 22-16. See also *Quality Adjustment*.
- Shortcuts:** 14-12
- Side Output Tray:** 2-2, 26-2
- Simulation Edits:** 20-10. See also *Editing Profiles*.
- SMB printing**
 - Setup:** 7-15
 - Windows 95/98:** 9-17
 - Windows 2000:** 10-24
 - Windows NT 4.0:** 11-18
- Sorter/Stacker:** 2-9
- Space requirements:** 1-2
- SPM printing for Windows 2000:** 10-22
- Spot Color Matching print option:** B-9
- Start button:** 2-7, 21-2
- Status WebTool:** 16-4
- Stop button:** 2-7, 21-1
- System Administrator**
 - Functions:** 4-1
 - Tips:** A-1
- System Setup:** 7-3
- TCP/IP**
 - Windows 2000 new**

- installation: 10-9
- Windows 2000 upgrade installation:** 10-13
- Windows NT 4.0:** 11-15
- TCP/IP network**
 - Adding a printer:** 8-9
 - Configuring clients (Windows NT 4.0/2000):** 8-11
 - Configuring Windows NT 4.0 server:** 8-9
 - Sharing a printer:** 8-10
 - UNIX:** 8-14—16
 - Windows NT 4.0:** 8-8
- Test Page:** 1-57
- Timers:** 23-14. See also *Administrative Features*.
- Token Ring kit:** 2-9, 3-1
- Tools button:** 2-7, 21-1. See also *Tools Mode*.
- Tools Mode:** 23-1
- Top Right-hand Cover:** 2-1. See also *Area 4*.
- Top-level menus:** 7-2
- Transparencies:** 22-8. See also *Bypass Tray*.
- Transparency Tray:** 2-9
- Transporting Scanner:** 23-22. See also *Administrative Features*.
- Universal Paper Tray:** 2-9, 26-1
- UNIX**
 - Cabling diagram, TCP/IP:** 5-10
 - Network:** 8-14
 - Setting up printer (TCP/IP):** 8-15
 - Setting up TCP/IP:** 8-16
- Upper Inverter:** 1-32, 24-21. See also *Area 5*.
- User Password:** 23-17. See also *Administrative Features*.
- Version Information:** 23-20. See also *Administrative Features*.
- VisualCal:** 24-29
- Waste Container:** 25-15
- WebDownloader** See *Fiery WebDownloader*.
- WebLink** See *Fiery WebLink*.
- WebSetup** See *Fiery WebSetup*.
- WebSpooler** See *Fiery WebSpooler*.
- WebTools** See *Fiery WebTools*.
- Windows**
 - Cabling diagram, Novell environment:** 5-7
 - Cabling diagram, NT 4.0:** 5-8
 - Cabling diagram, Windows printing:** 5-9
 - Printing from:** 14-1—14-20
- Windows 2000**
 - Configuring clients of a server (TCP/IP):** 8-11
 - Custom page sizes:** 14-13
 - ICM profile, loading:** 10-32, 10-34
 - Installation of user software for printing:** 10-1—10-34
 - IPX/SPX printing:** 10-15
 - LPR printing (new**

- installation): 10-9
 - LPR printing (upgrade installation):** 10-13
 - Parallel port printing:** 10-3
 - Printer description files:** 10-32
 - Printing from:** 14-7
 - Setting print options:** 14-7
 - Setting printer options:** 10-30
 - SMB printing:** 10-24
 - SPM printing:** 10-22

 - TCP/IP printing (new installation):** 10-9
 - TCP/IP printing (upgrade installation):** 10-13
 - Working space profile (Photoshop 5.0), loading:** 10-33
- Windows 2000 print driver:** 3-7
- Windows 95/98**
- Custom page sizes:** 14-13
 - ICM profile, loading:** 9-24, 9-26
 - Installation of user software for printing:** 9-1—9-26
 - IPX/SPX printing:** 9-14
 - Parallel port printing:** 9-7, 9-9, 9-12
 - PostScript or PCL drivers:** 9-3
 - Printer description files:** 9-24
 - Printing from:** 14-2
 - Setting PCL print options:** 14-5
 - Setting PostScript print options:** 14-3
 - Setting printer options:** 9-22
 - SMB printing:** 9-17
 - Working space profile (Photoshop 5.0), loading:** 9-25
- Windows 95/98 print driver:** 3-5
- Windows NT 4.0**
- Adding a printer:** 8-9
 - Cabling diagram, TCP/IP:** 5-8
 - Configuring clients:** 8-11
 - Configuring server:** 8-9
 - ICM profile, loading:** 11-26, 11-28
 - Installation of user software for printing:** 11-1—11-28
 - IPX printing:** 11-9
 - LPR printing:** 11-15
 - Parallel port printing:** 11-3
 - Printer description files:** 11-26
 - Printing from:** 14-15
 - Setting PCL print options:** 14-18
 - Setting PostScript print options:** 14-16
 - Setting printer options:** 11-24
 - Sharing a printer SMB printing:** 8-10
 - SMB printing:** 11-18
 - TCP/IP network:** 8-8
 - TCP/IP printing:** 11-15
 - Working space profile**

(Photoshop 5.0), loading:
11-27

**Windows NT 4.0 server
cabling diagram:** 5-8

Windows NT print driver: 3-9

Working space profile

Windows 95/98: 9-25

Windows 2000: 10-33

Windows NT 4.0: 11-27

X-Rite DTP32 See
Densitometer.

Zoom Arrow buttons: 2-7,
21-2. See also
Reduce/Enlarge.