

Xerox® Integrated RFID Card Reader Supported Devices

The table below lists the devices which support the installation of the Xerox® Integrated RFID Card Reader. The table also indicates the minimum device software level required to allow the installation and configuration of the reader. If your device has a lower software level, please download the correct software from the Drivers and Downloads page for your device. Download the latest Installation and Configuration Guide from the Drivers and Downloads page for your device on Xerox.com to complete the installation of your Xerox® Integrated RFID Card Reader.

For devices that require the Xerox USB Card Reader Plug-In, download the install file from the Drivers and Download page for your device on Xerox.com. Unzip and save the file to a known location on your computer/server before installation and configuration begins.

To identify the software level on your device, press the **Machine Status** button on the Control Panel. The System Software Version number is displayed.

Product	Minimum System Software Version	Xerox USB Card Reader Plug-In Required?
Xerox® WorkCentre® 3655 Multifunction Printer	072.060.034.16800	No
Xerox® WorkCentre® 5325/5330/5335 Multifunction Printer	53.30.82	Yes
Xerox® WorkCentre® 5845/5855/5865/5875/5890 Multifunction Printer	071.190.034.06000	No
Xerox® WorkCentre® 5945/5955 Multifunction Printer	072.091.054.31606	No
Xerox® WorkCentre® 6655 Multifunction Printer	072.110.044.20500	No
Xerox® WorkCentre® 7220/7225 Multifunction Printer	071.030.034.06000	No
Xerox® WorkCentre® 7830/7835 Multifunction Printer	071.010.034.06000	No
Xerox® WorkCentre® 7845/7855 Multifunction Printer	071.040.034.06000	No