

Fig. 1-1
Click on the File and select **Print** from your application.

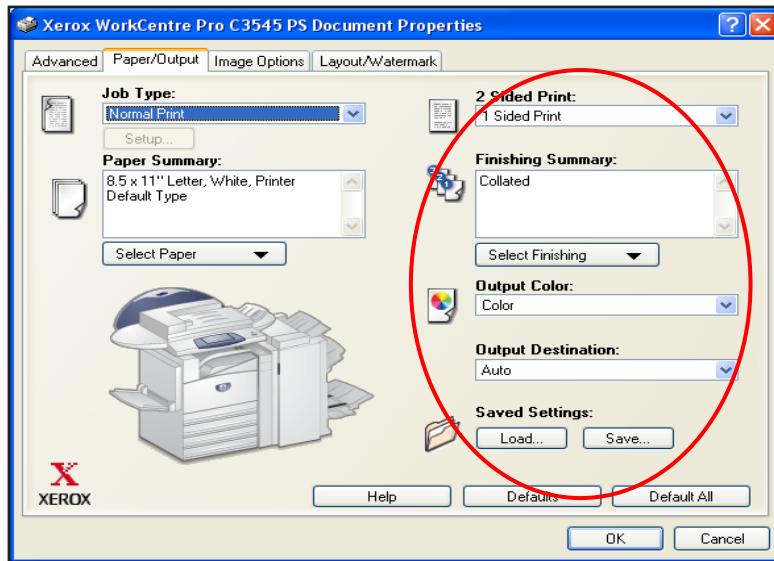


Fig. 1-3
Make changes as needed.

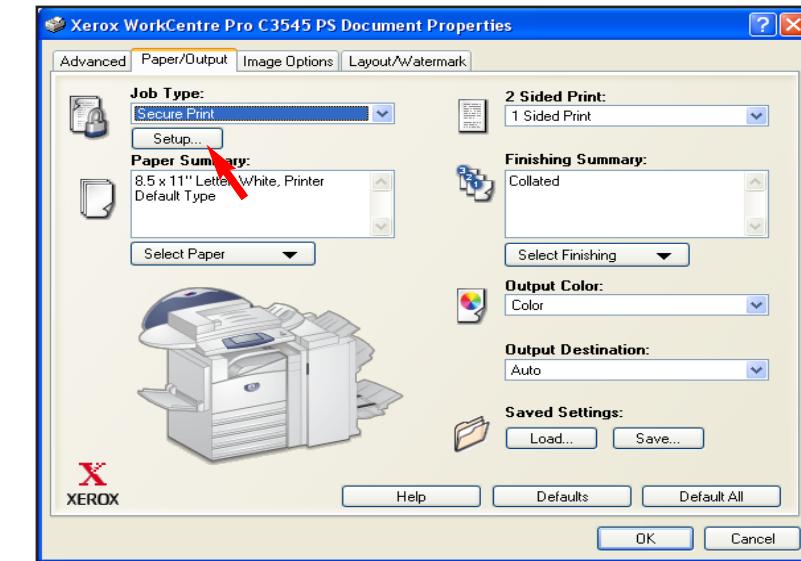


Fig. 1-5
Click **Setup....**

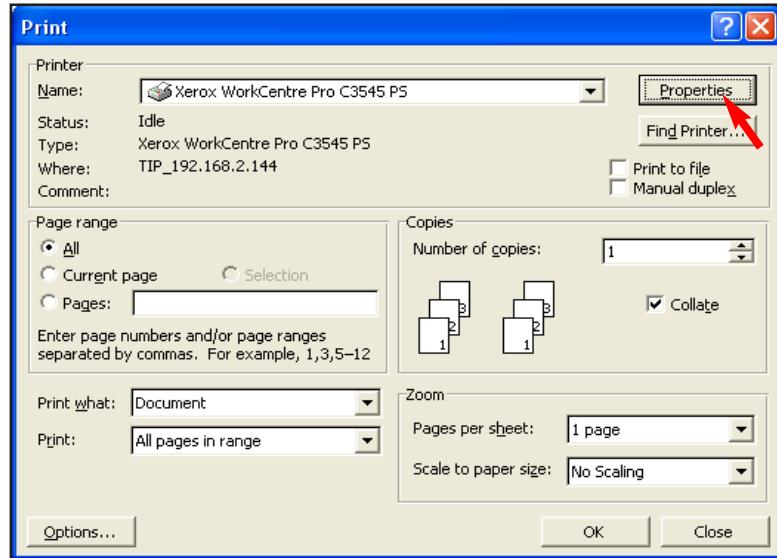


Fig. 1-2
Click **Properties**.

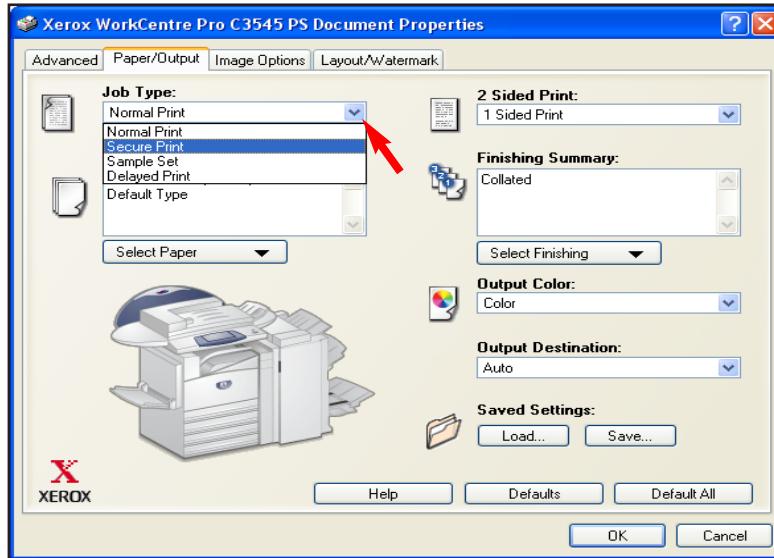


Fig. 1-4
Click on the down arrow in the **Job Type** field then select **Secure Print**.

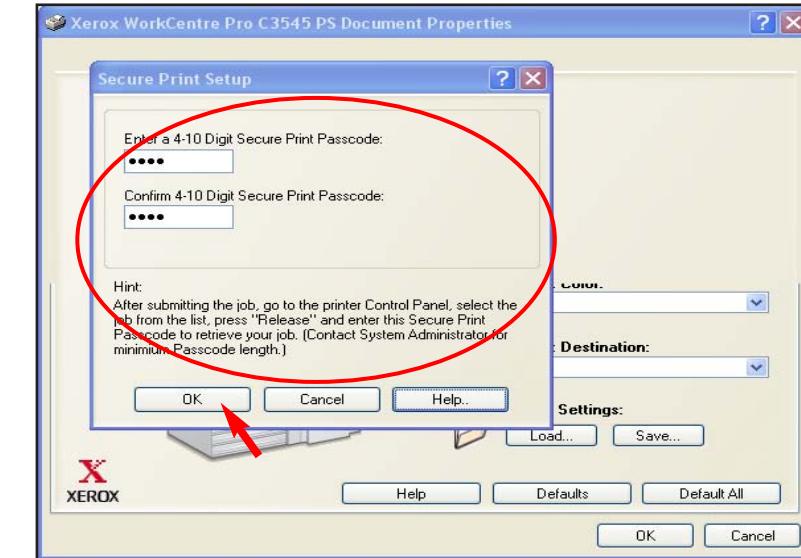


Fig. 1-6
Enter a 4-10 Digit Secure Print Passcode. Click **OK**.

Note: By default the passcode is 4 digits in length.

Quick Start Guide

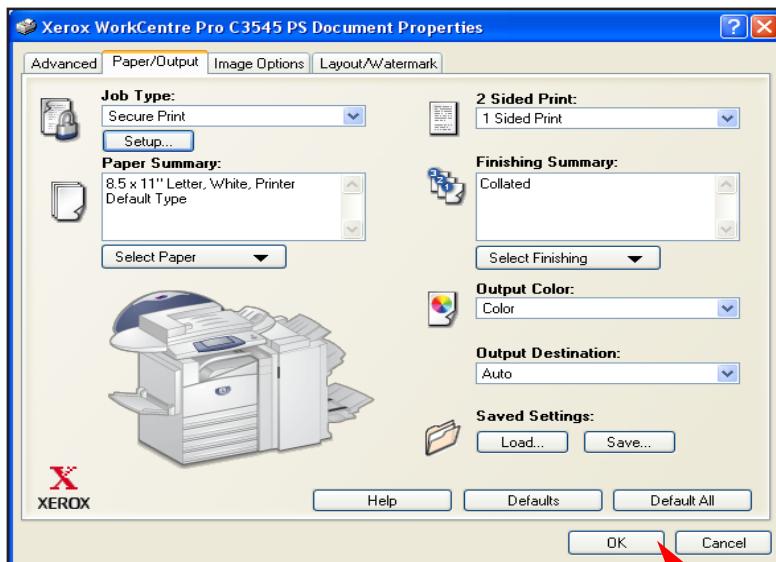


Fig. 1-7
Click **OK**.

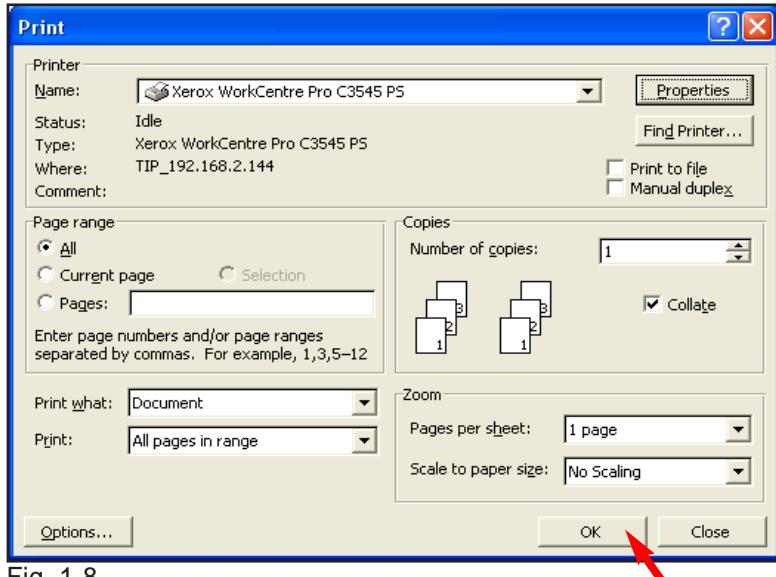


Fig. 1-8
Click **OK**.
Continue with Secure Print pamphlet Part 2 of 2.



WorkCentre Pro
C2128/C2636/C3545

XEROX®
Secure Print - 2 of 4



Fig. 2-1
Press **Job Status**

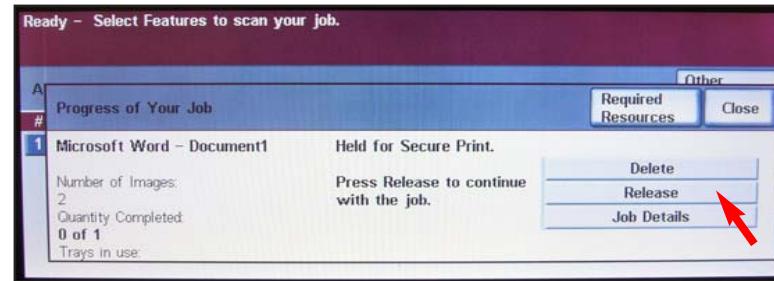


Fig. 2-3
Press **Release**.

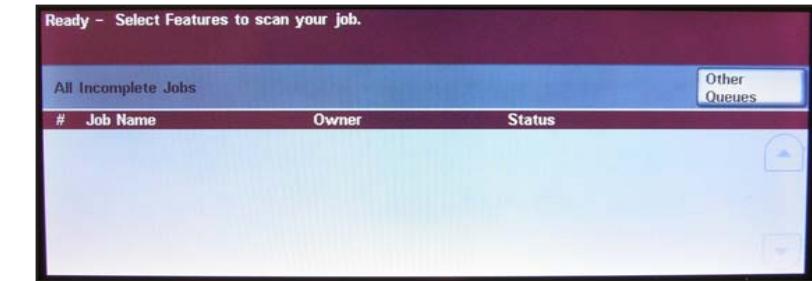


Fig. 2-6
Print is completed.



Fig. 2-4
Enter **Secure Print ID**. Press **Enter**.

Note: See Fig. 1-6 for Secure Print ID.

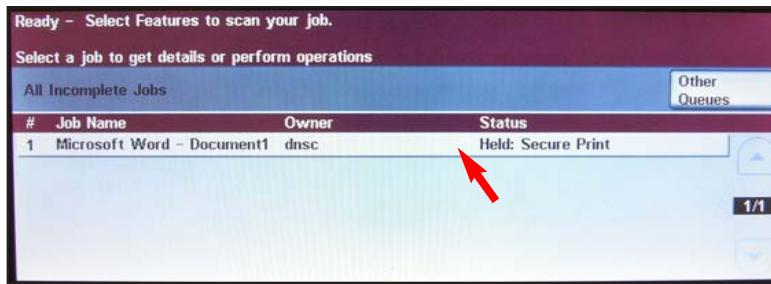


Fig. 2-2
Press **"Your print job"**

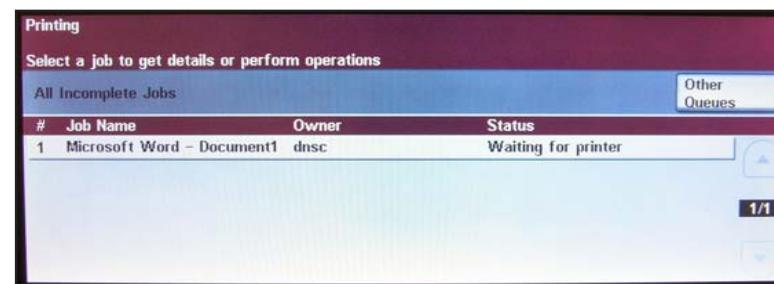


Fig. 2-5
Waiting for printer.



Fig. 2-7
Depending on the machine configuration and features selection the job will be delivered to one of the output trays available.

Quick Start Guide

Secure Print
Part 2 of 2



WorkCentre Pro
C2128/C2636/C3545

XEROX®
Secure Print - 4 of 4