

After installing the Creo Print Driver for LPR Printing

Make sure to complete the following steps:

1. On the client right click on the installed printer, select Properties and then the Printer Driver tab. In the **Server Hostname** box, type the Creo Color server name or IP address and click O.K.
2. Verify that under Print Driver tab, the Enable enhanced User interface is set to **On**.

