

Customer Release Notes

Xerox Color C60/C70

General Release 60.10.41

Revision Date: December 15, 2014
dc14rn3344crn

Software Release Details

System Software	Version
System Software	60.10.41
Controller Software	1.200.22
IOT Software	67.22.0



Purpose


This release provides the following enhancements:

- Alignment Adjustment can now be used successfully
- Now able to populate metro app, when opening 'Xerox Printer Properties' and synchronizing it with device when using V4 drive
- Printing continues when non-source tray is opened (fix for EFI[®] configuration)
- Printing resumes after paper jam is cleared (fix for EFI[®] configuration)
- Finisher reliability enhancements
- When using the Scan to File feature a single page PDF file is now correctly added to a xxx.XSM folder.

Installation Instructions

The software is located at

1. Print a configuration report at the Xerox Color C60/C70 Local User Interface (LUI) by selecting Machine Status → Print Reports → Printer Reports → Configuration Report.
2. Extract / unzip the .bin file from the zip file you downloaded from Xerox.com to a known location.
3. If an Integrated Fiery controller or standalone EX C60/C70 Fiery Print server is connected to the Xerox Color C60/C70, proceed to step 4. Otherwise, proceed to step 5.
4. Access the Fiery controller's Web Tools web page by entering the Fiery IP address into an Internet browser. Then click on the Xerox CentreWare link in the lower right corner of the Web Tools page to access the Xerox Color C60/C70 CentreWare Internet Services web page.
5. Access the Xerox Color C60/C70 CentreWare Internet Services (CWIS) webpage by entering the device IP address into an Internet browser.
6. Click on the Properties tab. If prompted, enter the User Name (default is admin) and the Password (default is 1111).
7. Click on Services → Machine Software → Upgrades, place a check in the Enabled box and click Apply.
8. Select the Properties tab → Services → Machine Software → Manual Upgrade. The following screen will appear.

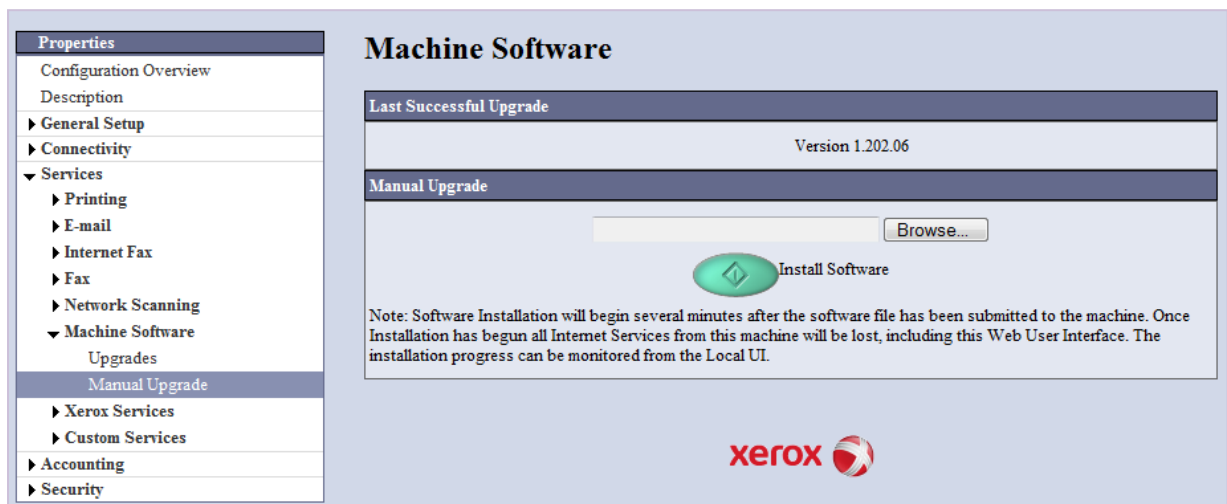

9. Browse to the location to where you extracted the .bin file in step 2 and select it.
10. Select the Install Software button.
11. The software will download to the device. The upgrade will take approximately 10 to 15 minutes. The device's Local User Interface will indicate that the upgrade is being performed. Once the download is complete the device will reboot.
12. Print a Configuration Report at the device's LUI by selecting Machine Status → Print Reports → Printer Reports → Configuration Report.
13. Ensure that the software version listed on page 1 of the configuration report next to "System" is the software you just installed.

Software Release Details

Software and installation instructions are available from <http://www.xerox.com>.

© 2014 Xerox Corporation. All Rights Reserved. Xerox®, and Xerox and Design® are trademarks of Xerox Corporation in the United States and/or other countries.

Other company trademarks are also acknowledged.