

Xerox Corporation
701 S. Aviation Boulevard
El Segundo, CA 90245

© 1994 by Xerox Corporation. All rights reserved

Copyright protection claimed includes all forms and matters of copyrightable material and information now allowed by statutory or judicial law or hereinafter granted, including without limitation, material generated from the software programs which are displayed on the screen, such as icons, screen displays, looks, etc.

Printed in the United States of America

XEROX® and all Xerox products mentioned in this publication are trademarks of XEROX CORPORATION. Adobe ® and PostScript® are trademarks of Adobe Systems, Incorporated. AS/400 ® is a trademark of the IBM Corporation.

CS Triumvirate and CS Triumvirate Condensed are trademarks of Agfa Division of Miles Inc. CS Century Schoolbook, CS Courier, CS Letter Gothic, CS Omega, CS Palacio, CS Times, are licensed to Xerox Corporation by Agfa Division of Miles Inc. ITC Avant Garde Gothic®, ITC Bookman®, ITC Garamond®, ITC Korinna®, ITC New Baskerville®, ITC Souvenir®, ITC Zapf Chancery® and ITC Zapf Dingbats® are trademarks licensed to Xerox Corporation by International Typeface Corporation.

Helvetica®, Palatino®, Times, and Univers® are trademarks of Linotype-Hell AG and/or its subsidiaries. Monotype Bodoni is a trademark of the Monotype Corporation plc. Other product names used herein are trademarks of their respective owners.

Some excerpts from definitions and charts of

<

cut top 2"

cut 1">

26 *Quick Start*

DIIIIIIIHHHHHHHHIIIIIIIIIIII

Step 5. Load the paper into the tray with the corners of the long edge of the paper under the right and left corner tabs.

NOTE: Do not load the paper above the fill line

Figure 21. Loading Paper into the Tray

Step 6. Place the plastic tray cover over the paper

<

cut top 2"

cut 1">

34 *Quick Start*

DIIIIIIIHHHHHHHHIIIIIIIIIIII

Step 8. The following message displays at the control panel indicating the printer is performing an initial diagnostic test.

DIIIIIIIHHHHHHHHIIIIIIIIIIII

CONTROL PANEL

The control panel is located on the front of the printer in the upper left corner. For access to the keys, press and release the upper right corner of the closed keypad. Figure 29

Figure 29. Control Panel Display and Keypad

