


# Phaser® 6121MFP Toner Cartridge

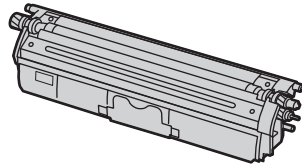

Cartouche de toner • Cartuccia di toner • Tonermodul • Cartucho de tóner • Cartucho de toner • Tonercassette • Tonerkassett • Fargepulverkassett • Tonerpatron • Värikasseti • Картридж с тонером • Kazeta s tonerem • Wkład toneru • Festékkazetta • Toner Kartuşu • Κασέτα γραφίτη

**1**

1.1

1.2

Print Menu Map  
Print Config Page  
Information  
**Replace Toner** OK

Remplacer toner  
Sostituisci toner  
Toner ersetzen  
Sustituir tóner  
Substituir toner  
Toner vervangen  
Byt ut toner  
Udskift toner  
Замените тонер  
Vyměňte toner  
Wymień toner  
Cseréljen Tonert  
Toneri Değiştir

**Replace Toner**  
Toner Status  
**Toner Change** OK

Changer toner  
Sostituz. toner  
Tonerwechsel  
Sust. tóner  
Alteração toner  
Tonerwijziging  
Tonerbyte  
Tonerudskiftn.  
Замена тонера  
Změna toneru  
Zmiana toneru  
Tonercsere  
Toner Değişimi

**Toner Change**

C  
M  
Y  
K

OK

**2**

**3**

3.1

3.2


[www.xerox.com/gwa](http://www.xerox.com/gwa)

**4**


6x

**5**


5

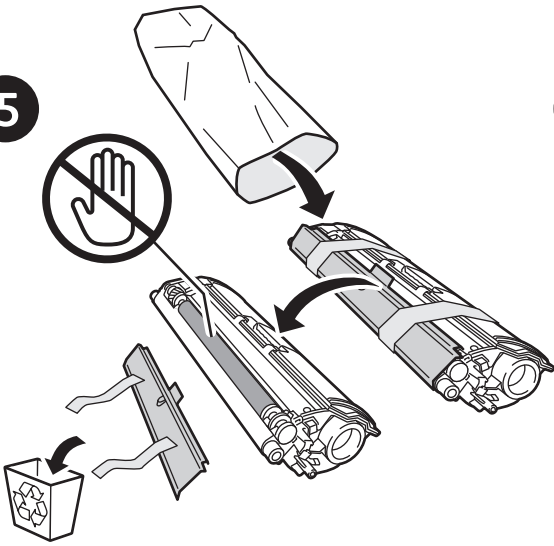


6

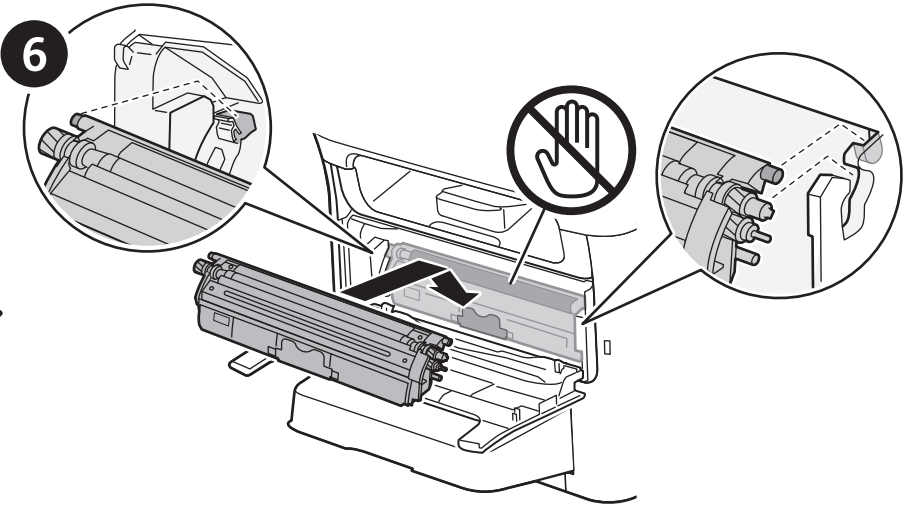

7

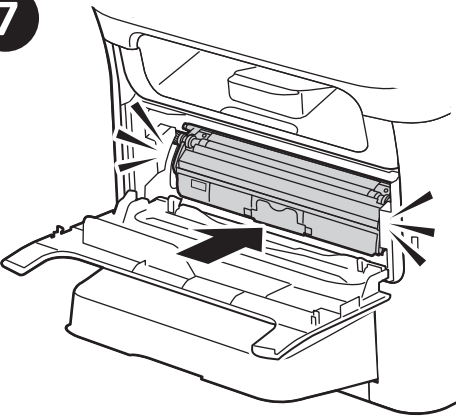


8

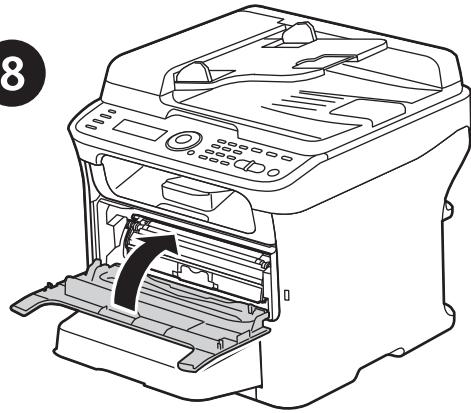

9



@_	ABC	DEF			
1	2	3			
GHI	JKL	MNO			
4	5	6			
PQRS	TUV	WXYZ			
7	8	9			
abc/123	* #	+ & -			
*	0	#			

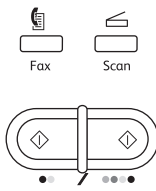

Stop/Reset

