

































 
 



Xerox® Phaser® 6500


 



 



Printer Symbols



Symbol	Description
	Warning: Indicates a hazard that can cause serious injury or death if not avoided.
	Hot Warning: Hot surface on or in the printer. Use caution to avoid personal injury.
	Pinch Hazard: This warning symbol alerts users to areas where there is the possibility of personal injury.
	Caution: Indicates a mandatory action to take to avoid damage to the property.
	Do not touch the part or area of the printer.
	Do not touch the part or area of the printer.
	Do not expose the item to direct sunlight.
	Do not expose the item to light.
	Do not burn the item.
	Do not burn the toner cartridges.
	Pinch Hazard: To avoid personal injury, use caution in this area.

Symbol	Description
	<p>To avoid print-quality problems or damage to the belt, do not touch the transfer belt with your fingers or with sharp objects.</p>
	<p>To avoid print-quality problems or damage to the belt, do not place or drop any object on the transfer belt.</p>
	<p>Hot surface. Wait for the indicated time before handling.</p>
	<p>On</p>
	<p>Off</p>
	<p>Standby</p>
	<p>Do not use paper attached with staples or any form of binding clip.</p>
	<p>Do not use folded, creased, curled, or wrinkled paper.</p>
	<p>Do not load or use inkjet paper.</p>
	<p>Do not reload paper previously printed on or used.</p>
	<p>Do not use postcards.</p>
	<p>Do not use envelopes.</p>
	<p>Do not copy money.</p>

Symbol	Description
	Add paper or media.
	Paper Jam
	Lock
	Unlock
	Paper Clip
	Cooling
	Elapsed Time
	Supply Paper
	Hole-punched Paper
	Transparency
	Load letterhead face up.
	Load letterhead face down.
	Load labels face down.

Symbol	Description
	USB Universal Serial Bus
	LAN Local Area Network
	Weight
	Cancel Button
	Wake Up/Power Saver Button
	Back Button
	Menu Button
	Error Status Indicator
	This item can be recycled.