 
 
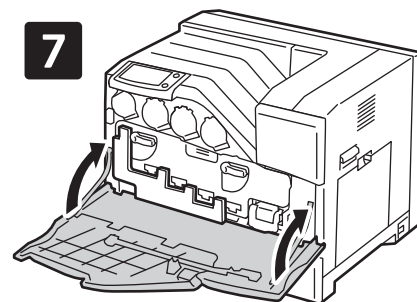 
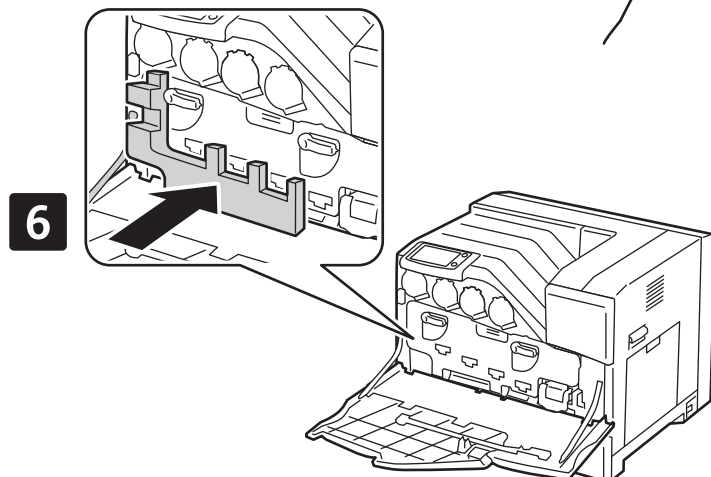 
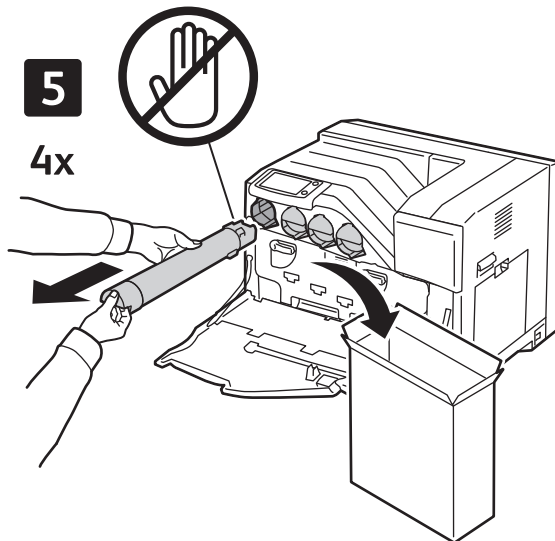 
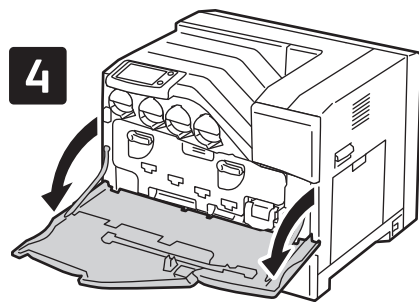 
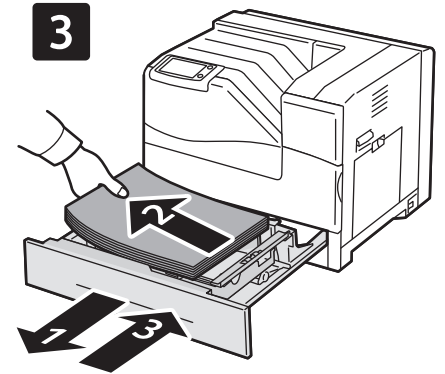 
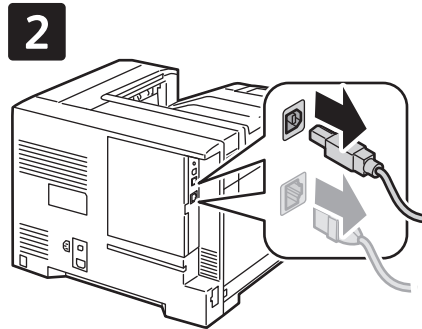 
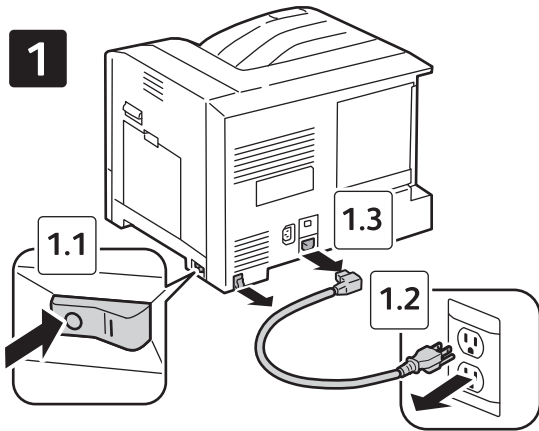 
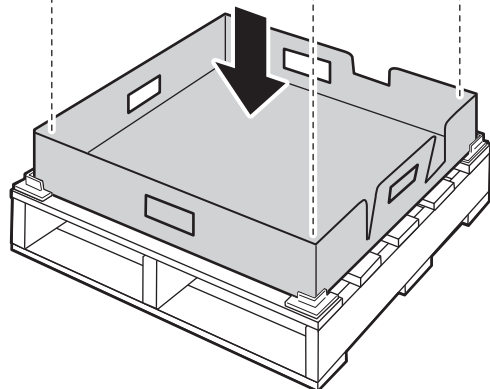 
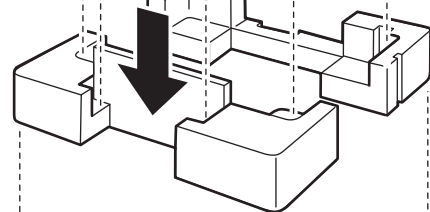 
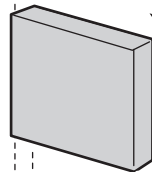 


Xerox® Phaser® 6700

 
Repacking Instructions • Instructions d'emballage • Istruzioni per l'imballaggio • Hinweise für das Verpacken
Instrucciones de reembalaje • Instruções para reembalagem • Instructies voor opnieuw inpakken
Instruktioner för ompaketering • Instruksjoner for pakking • Instruksjoner om genindpakning • Instruksjoner for pakking
Instruksjoner om genindpakning akkausohjeet • Инструкции по повторной упаковке • Pokyny pro opětovné zabalení
Instrukcje przepakowywania • Csomagolási útmutató • Yeniden Paketleme Yönergeleri • Οδηγίες επιστροφής προϊόντος
重新包装说明 • 重新包装说明 • 재포장 지침

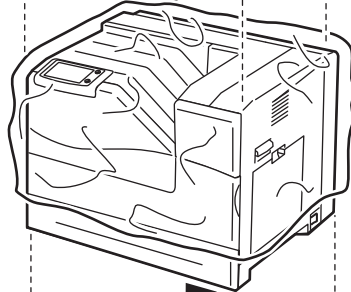

8

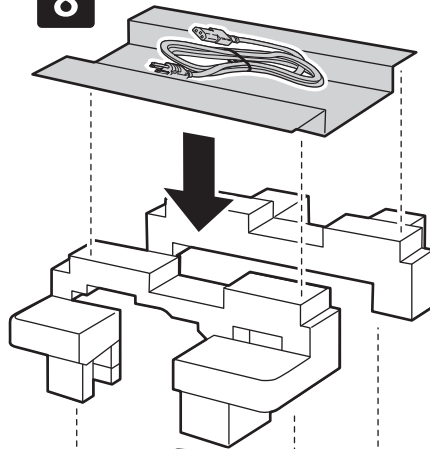

9

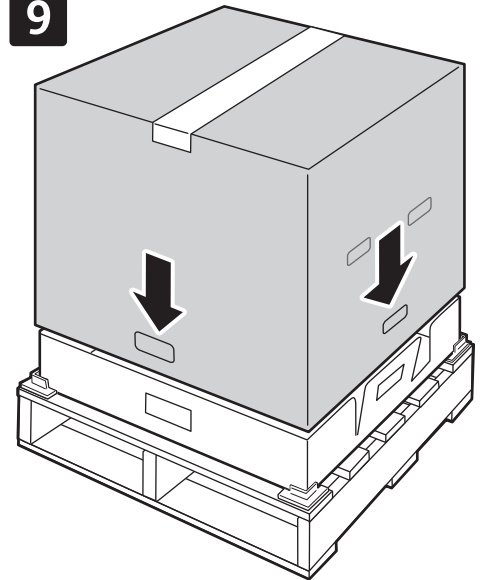

10

