


























Xerox® Phaser® 7500


 



Printer Symbols



Symbol	Description
	Warning: Indicates a hazard that can cause serious injury or death if not avoided.
	Hot Warning: Hot surface on or in the printer. Use caution to avoid personal injury.
	Pinch Hazard: This warning symbol alerts users to areas where there is the possibility of personal injury.
	Electrostatic sensitive devices Verify that you are properly grounded before making contact with the printer. Ignoring this caution may cause damage to the property.
	Caution: Indicates a mandatory action to take to avoid damage to the property.
	Do not touch the part or area of the printer.
	Do not touch the part or area of the printer.
	Do not expose the imaging unit to direct sunlight.
	Do not burn the item.
	Do not burn the toner cartridges.
	Do not burn the imaging unit.

Symbol	Description
	Do not burn the waste container.
	Do not expose the imaging unit to direct sunlight.
	Do not expose the item to light.
	Do not expose the imaging unit to light for more than 10 minutes.
	Pinch Hazard: To avoid personal injury, use caution in this area.
	Do not disassemble the part or printer.
	Hot surface. Wait for the indicated time before handling.
	On
	Off
	Standby
	Do not use paper attached with staples or any form of binding clip.
	Do not use folded, creased, curled, or wrinkled paper.
	Do not load or use inkjet paper.

Symbol	Description
	Do not use transparencies or overhead projector sheets.
	Do not reload paper previously printed on or used.
	Do not use envelopes.
	Add paper or media.
	Paper Jam
	Lock
	Unlock
	Paper Clip
	Cooling
	Elapsed Time
	Supply Paper
	Hole-punched Paper

Symbol	Description
	USB Universal Serial Bus
	LAN Local Area Network
	Weight
	Power Saver Button
	This item can be recycled.