

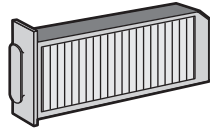
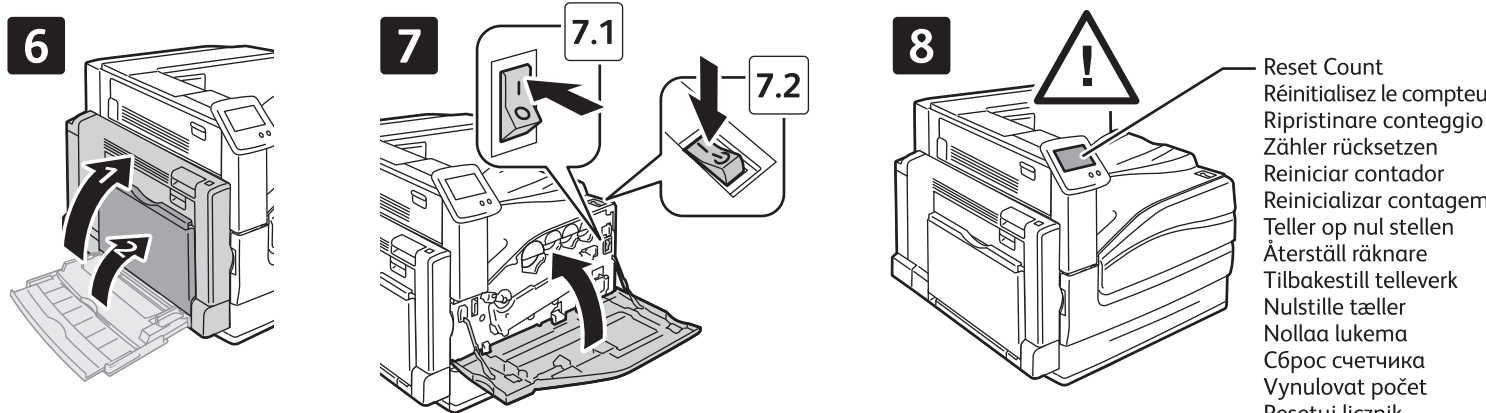


Xerox® Phaser® 7800

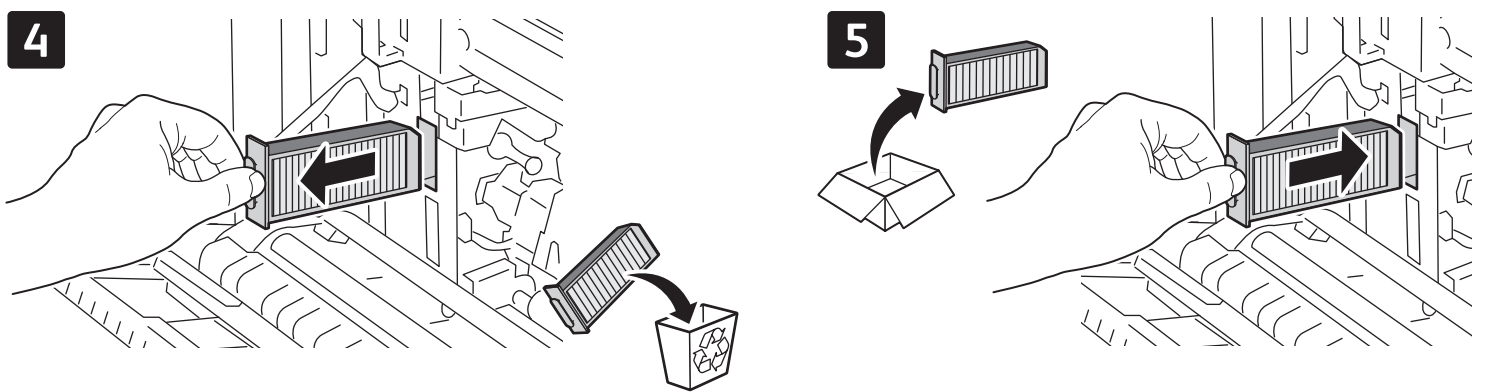

Filter • Filtre • Filtro • Filter • Filtro • Filtro • Filter • Filter • Filter • Filter • Suodatin • Фильтр • Filtr • Filtr • Szűrő
 Filtre • Φίλτρο • 过滤器 • 過濾器 • 천공 설정 선택

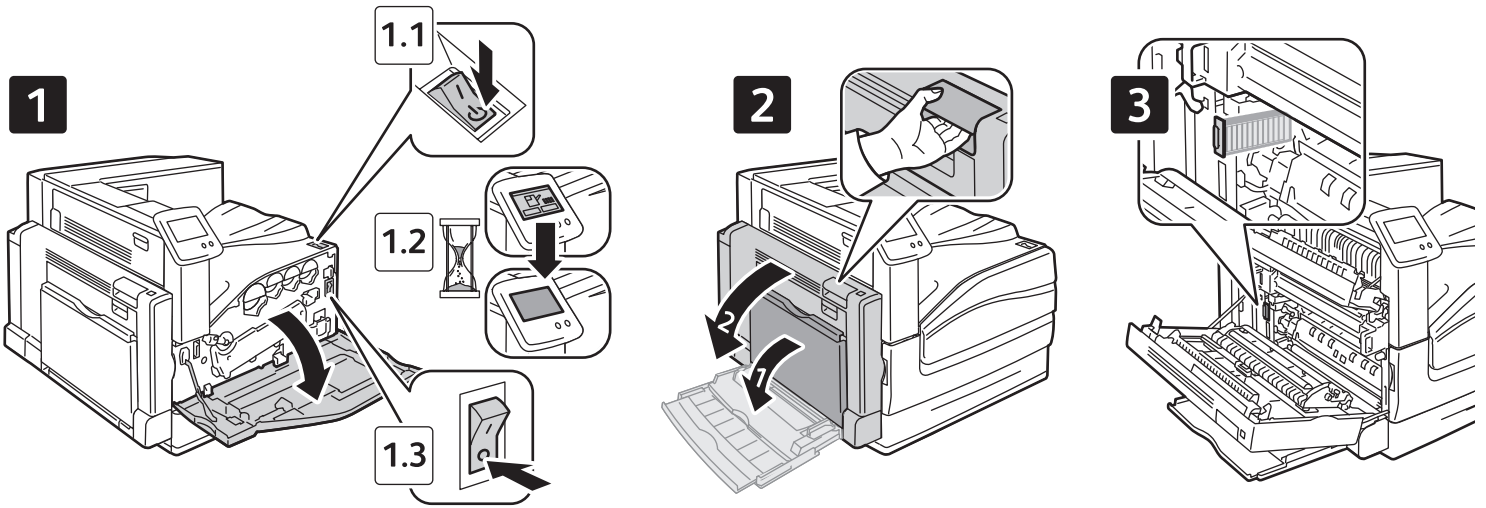

Reset Count
 Réinitialisez le compteur
 Ripristinare conteggio
 Zähler rücksetzen
 Reiniciar contador
 Reinicializar contagem
 Teller op nul stellen
 Återställ räknare
 Tilbakestill telleverk
 Nulstille tæller
 Nollaa lukema
 Сброс счетчика
 Vynulovat počet
 Resetuj licznik
 Számláló nullázása
 Sayıyı Sıfırla
 Μηδενισμός μετρητή
 重设计数
 重設總計
 리셋 횟수