# **Firmware Installation Instructions**

### **Overview**

The purpose of this document is to define the procedures on downloading device firmware via the device's Embedded Web Server and USB

### **Supported Products:**

Xerox® C320 Printers

Xerox® C325 Printers

## **Installation Instructions**

Upgrade can be done using the below 2 methods.

#### Method 1:

#### Manual upgrade using Internet Services

This section provides instructions to upgrade machine software over the network via Embedded Web Server.

#### **Upgrade Steps:**

- From a Web browser, enter the Xerox® device's IP address to access the device's Embedded Web Server. When prompted, login as Admin.
- Go to Settings  $\rightarrow$  Device  $\rightarrow$  Software Update  $\rightarrow$  Upload a Software File.

Search		Import Configuration	Export Configuration
	Settings > Device		
Select Option	Device		
Status			
Settings	≈ Eco-Mode		
Device Print Paper Copy Fax E-mail FTP USB Drive Network/Ports Security Renorts	Remote Operator Panel		
	Notifications		
	Restore Factory Defaults		
	Maintenance		
	∀ Visible Home Screen Icons		
	Site Map		
	Software Update		
	Remote Services Data Upload		
Shortcuts	> About this Printer		

• Press [Browse] to locate the software file.

tware Update			
Status			
Current Version	CXTGV.230.091		Check Now
Remote Services Poli	cies		
Allow device to receive	e updates 🔽		
Daily Check Time	12:00 PM		
Installation Schedule	Daily ~		
Time	09:00 PM		
	Save		
Unload a Coftwara Fi			
upioad a Software Fil	e		
BLOMSE LOL UIG		Browse	
	Upload		

- Press [Upload]
- Device prompts the below popup where "xxx" shows the current version in the device and "yyy" shows the new version for which device will upgrade.



• Press [Proceed]. Once the firmware upload is successful, below prompt displays.

Upload successful.
ОК

Note: Software Installation will begin several minutes after the software file has been submitted to the machine. The installation progress can be monitored from the Local UI.

#### Method 2: Upgrade Using USB:

If your device is equipped with a front USB port the firmware can be updated through that port.

- Prepare the USB drive by formatting and wiping the drive
- Load the firmware onto the USB drive
- Insert the USB drive into the Front USB port of the device

• Once the USB is inserted, device displays with below options.



• On clicking the three dots, below options will be displayed.



• Click [Update Code] option and then [Proceed] option. The file should begin transferring to the target device.







Note: Please do not power off the device until the firmware update is complete. This process could take several minutes to complete. Once the firmware update is completed, device comes up with new firmware.