



xerox™

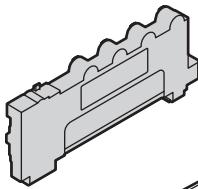


Xerox® C310




Xerox® C315

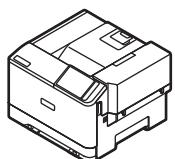


Xerox® C410

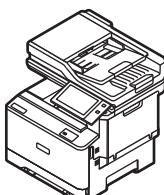


Xerox® VersaLink® C415

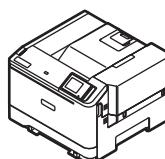


Xerox® C320

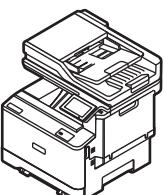


Xerox® C325

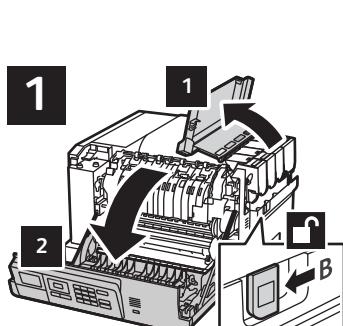

Xerox® 310

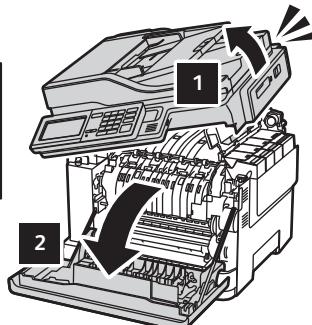


Xerox® C315

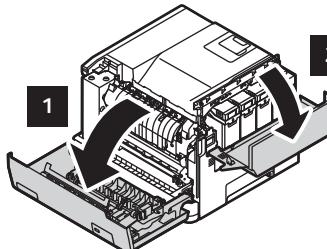





Xerox® C410

Xerox® C320

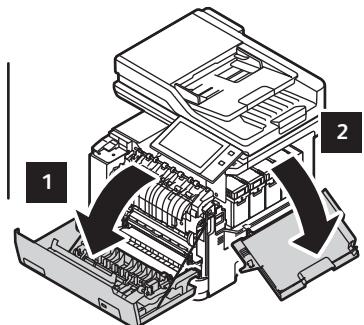

Xerox® VersaLink® C415

Xerox® C325

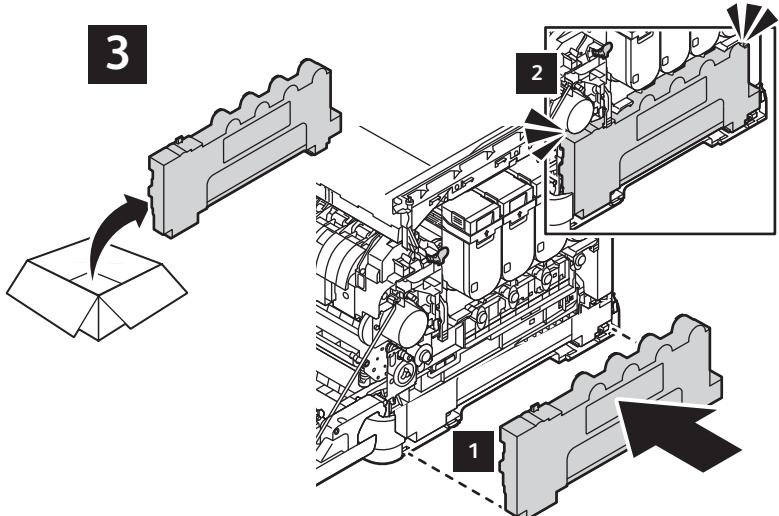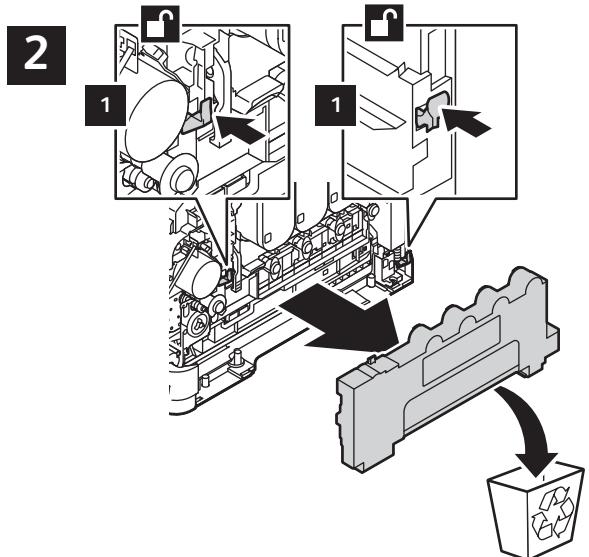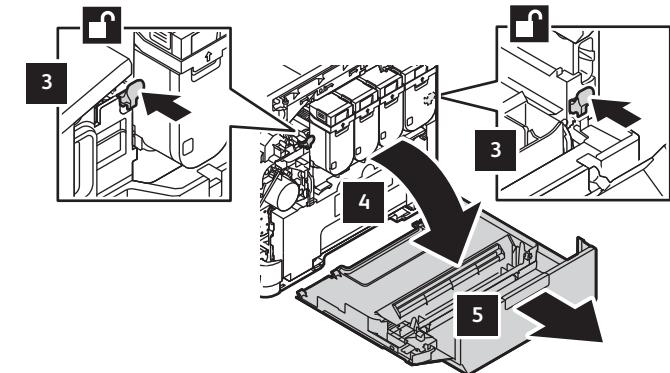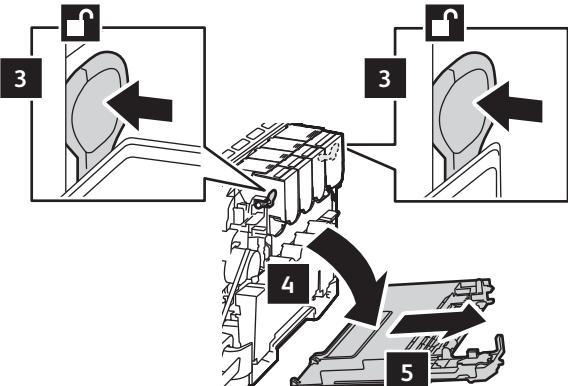

4 →



