

Xerox® Color C60/C70 Printer

 
Printer Symbols



| Symbol | Description |
|--------|---|
| | Warning: Indicates a hazard that can cause serious injury or death if not avoided. |
| | Hot Warning: Hot surface on or in the printer. Use caution to avoid personal injury. |
| | Pinch Hazard: This warning symbol alerts users to areas where there is the possibility of personal injury. |
| | Caution: Indicates a mandatory action to take to avoid damage to the property. |
| | Do not touch the part or area of the printer. |
| | Do not touch the part or area of the printer. |
| | Do not expose the drum cartridges to direct sunlight. |
| | Do not burn the item. |
| | Do not burn the toner cartridges. |
| | Do not burn the drum cartridges. |
| | Do not burn the waste cartridge. |
| | Do not touch the surface of the drum cartridge. |

| Symbol | Description |
|---|---|
|   | To avoid damage to the printer, do not open the document feeder wider than 40° maximum. |
|  | Hot surface. Wait for the indicated time before handling. |
|  | On |
|  | Off |
|  | Standby |
|  | Do not use paper attached with staples or any form of binding clip. |
|  | Do not use folded, creased, curled, or wrinkled paper. |
|  | Do not load or use inkjet paper. |
|  | Do not reload paper previously printed on or used. |
|  | Do not use postcards. |
|  | Do not use envelopes. |
|  | Do not use transparencies or overhead projector sheets. |
|  | Do not copy money. |
|  | Add paper or media. |

| Symbol | Description |
|---|---|
|  | Paper Jam |
|  | Lock |
|  | Unlock |
|  | Paper Clip |
|  | Cooling |
|  | Elapsed Time |
|  | Supply Paper |
|  | Supply Paper Face Down |
|  | 1-Sided Original |
|  | Hole-punched Paper |
|  | Indicates the direction to feed paper. |
|  | Envelope print side up, flap down and closed. |

| Symbol | Description |
|---|---|
|  | Heavy weight paper is equal to or greater than 117 g/m ² . |
|  | Toner Waste Container |
|  | USB Universal Serial Bus |
|  | LAN Local Area Network |
|  | Fax |
|  | Clean the indicated area or part. |
|  | Weight |
|  | Start Button |
|  | Stop Button |
|  | Pause Printing Button |
|  | Log In/Out Button |
|  | Help Button |
|  | Services Home Button |
|  | Services Button |
|  | Job Status Button |

| Symbol | Description |
|---|----------------------------|
|  | Printer Status Button |
|  | Language Button |
|  | Power Saver Button |
|  | Sleep Mode |
|  | Clear All Button |
|  | Dial Pause Button |
|  | This item can be recycled. |

