Xerox® ColorQube® 8700/8900 Printer Symbols



Symbol	Description
<u>^</u>	Warning: Indicates a hazard that can cause serious injury or death if not avoided.
	Hot Warning: Hot surface on or in the printer. Use caution to avoid personal injury.
	Pinch Hazard: This warning symbol alerts users to areas where there is the possibility of personal injury.
•	Caution: Indicates a mandatory action to take to avoid damage to the property.
	Do not touch the part or area of the printer.
	Do not burn the item.
	Oil from the cleaning kit can stain clothing and material. Do not tip the cleaning kit because oil can drip from the tray. Do not let the cleaning kit contact your clothing.
	Do not tip the printer. It can cause ink to spill.
	Do not look into the scanner during operation.
<u></u>	After turning it off, wait 30 minutes for the printer to cool before moving or tilting it.
®	Do not use paper attached with staples or any form of binding clip.

Symbol	Description
	Do not use folded, creased, curled, or wrinkled paper.
	Do not reload paper previously printed on or used.
	Do not copy money.
↓ 8 ••••••••••••••••••••••••••••••••	Add paper or media.
81	Paper Jam
8	Lock
3	Unlock
0	Paper Clip
*	Cooling
\bigcirc	Elapsed Time
	Supply Paper
	1-Sided Original
	Hole-punched Paper

Symbol	Description
	Transparency
	Load letterhead face up.
	Load letterhead face down.
	Load labels face down.
₩	USB Universal Serial Bus
2 33	LAN Local Area Network
	Telephone Line
	Weight
(Start Button
igorplus	Stop Button
命	Services Home Button
	Services Button
1	Job Status Button
i	Printer Status Button

Symbol	Description
Ø	Power Saver Button
CA //	Clear All Button
<u>₹</u> ⁄	Pause Printing Button
©~~	Log In/Out Button
?	Help Button
3 &	Language Button
	This item can be recycled.

