

THE DOCUMENT COMPANY

XEROX

DC230LP TCP/IP® (LPR Spooling) Quick Install

Installation Requirements:

To install the DC230LP in a DHCP environment, exclude the addresses assigned to the DC230LP at the DHCP server.

Before Installation:

Record the following information for use during setup at the DC230LP:

TCP/IP Address: _____

Gateway Address: _____

Subnet Mask: _____

 
Broadcast Address: _____

 
Host Name: _____


This installation procedure assumes that you know how to navigate through the menu system on the DC230LP Control Panel. Refer to the quick reference card, *Using the Menu System*, (701P96834) for assistance.

 
1. Connect the DC230LP to your network outlet or cable.

2. Access the System Administration menus:

a) Press [**Online**] to take the printer off line.  displays.

 
b) Press [**Menu**].  displays.

c) Press [**▶**], then press [**▲**] or [**▼**] until  displays.

d) Press [**▶**].  displays.

 
e) Use the [**▲**] and [**▶**] keys to enter **[2222]**.

Note: 2222 is the factory default password and may be changed to suit your needs. Refer to the *DC230LP System Administration Guide, Network Installation and Troubleshooting*.


f) Press [**Enter**].  displays.

3. Access the TCP/IP menus:


a) Press [**▶**].  displays.

b) Press [**▼**] until  displays.

c) Press [**▶**].  displays.

d) Press [**▶**].  displays.

4. IP Address Setup (skip this step if using RARP):

 
a) Press [**▶**].  displays.

Note: Use zeros to supplement each address segment if fewer than 3 digits are used; e.g., 13.252.25.08 = 013.252.025.008.

b) Use the [**▲**] or [**▼**] key to enter the first digit of the IP Address.

c) Press [**▶**] to move to the next digit. Repeat this procedure to enter the entire IP Address.

d) Press [**Enter**]. ****SAVED**** displays momentarily, followed by

.

 
5. RARP Setup:

Note: If you used a static IP Address, leave the RARP setting at *Disabled*.

 
THE DOCUMENT COMPANY


XEROX

DC230LP TCP/IP® (LPR Spooling) Quick Install


a) To change the RARP setting, press [▼] until the current setting displays .


b) Press [▶].  displays.

c) Press [▼] until the required setting displays .

d) Press [Enter]. **SAVED** displays momentarily, followed by .

6. Enter the Gateway Address:

a) Press [▼] until  displays.

b) Press [▶].  displays.

Note: Use zeros to supplement each address segment if fewer than 3 digits are used; e.g., 13.252.25.08 = 013.252.025.008.


c) Use the [▲] or [▼] keys to select the first digit in the Gateway Address.


d) Press [▶] to move to the next digit. Repeat this procedure to enter the entire Gateway Address.

e) Press [Enter]. **SAVED** displays momentarily, followed by

.

7. Enter the Subnet Mask:

 
a) Press [▼] until  displays.

b) Press [▶].  displays.

c) Use the [▲] or [▼] key to select the first digit of the Subnet Mask for your network.

 
d) Press [▶] to move to the next digit. Repeat this procedure to enter the entire Subnet Mask.


e) Press [Enter]. **SAVED** displays momentarily, followed by

.

8. Enter the Broadcast Address:


Note: Broadcast Address is where all the host bits are set to either zeros (0) or ones (1).

a) Press [▼] until  displays.

b) Press [▶].  displays.

 
c) Use the [▲] or [▼] key to select the first digit in the Broadcast Address.

 
d) Press [▶] to move to the next digit. Repeat this procedure to enter the entire Broadcast Address.

e) Press [Enter]. **SAVED** displays momentarily, followed by .

9. Enter the Printer (Host) Name:

Note: It is recommended that the Printer (Host) Name be the same as your Share Name.

a) Press [▼] until  displays.

 
b) Press [▶].  displays.

c) Press [▶] repeatedly until the cursor reaches the last character. A tone sounds indicating when the last character has been reached.

THE DOCUMENT COMPANY XEROX


DC230LP TCP/IP® (LPR Spooling) Quick Install


- d) Press **[Enter]**. ****SAVED**** displays momentarily, followed by

 


 
10. Enable the Line Printer Daemon (LPD):

 
- a) Press **[Escape]** to move back a level in the menu system.

 displays.

 
- b) Press **[▼]** until  displays.

- c) Press **[▶]**.  displays.

- d) Press **[▶]**.  displays.


- e) Press **[▼]** until  displays.


- f) Press **[Enter]**. ****SAVED**** displays momentarily, followed by

.

Note: The next menu, *Port Setting*, has a fixed setting for the LPD (515) and cannot be changed.

11. Save all settings:

- a) Press **[Online]**.  displays.

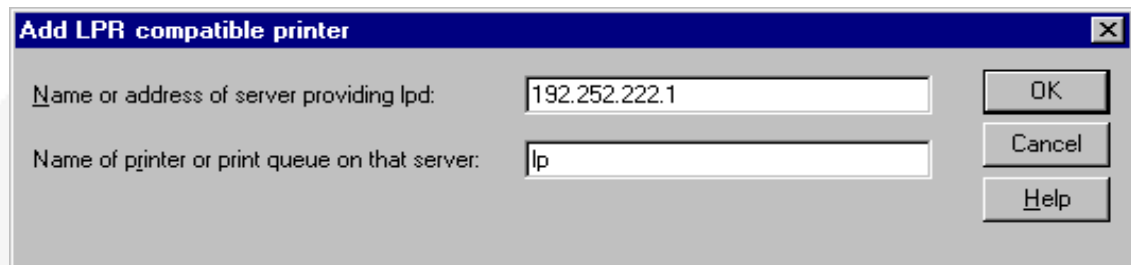
- b) Press **[Enter]**.  displays. The DC230LP will reboot, save the settings entered, and print a Configuration Report in approximately 3 minutes.

12. Check the settings on the Configuration Report against those that were entered to be sure they are correct.

13. At the client, install print drivers and map the printer in the usual manner. Refer to the CentreWare® manual, *Getting Started with Print and Fax Services*, for additional information.

14. The remote print server name or print queue must be set to **[lp]** (lower case). Refer to the screen sample below.

Additional information on the Windows NT TCP/IP setup can be found in the *DC230LP System Administration Guide, Network Installation and Troubleshooting*.



Add LPR compatible printer

Name or address of server providing lpd: 192.252.222.1

Name of printer or print queue on that server: lp

OK Cancel Help

THE DOCUMENT COMPANY
XEROX

DC230LP TCP/IP® (LPR Spooling) Quick Install

