

The Document Company

XEROX

DC220/230ST Windows NT® 4.0 NetBIOS/IP Quick Install

Installation Requirements:

To install the DC220/230 into a DHCP environment, exclude the addresses assigned to the DC220/230 at the DHCP server.

Before Installation:

Record the following information for use during setup at the DC220/230:

TCP/IP:

TCP/IP Address: _____

Gateway Address: _____

Subnet Mask: _____

Broadcast Address: _____

Host Name: _____

NetBIOS:

Host Name: _____

Printer Name: _____

Workgroup: _____

1. Connect the DC220/230 to your network outlet or cable.
2. Enter System Administration Setups:

a) Press the **[Access]** button on the Control Panel.

b) Enter the System Administrator password by typing **#22222** (# key and 22222) on the keypad and pressing **[Enter]** on the screen.

Note: #22222 is the factory default password and may be changed by your Xerox service representative to suit your needs.

c) On the screen display, press **[Print Setups]**.

d) Press **[Network Setups]**.

Note: If TCP/IP has been installed, go to step 4. If TCP/IP has **not** been installed, continue with step 3.

3. Access the TCP/IP Network Setups screens:

a) Press **[TCP/IP]**.

b) **IP Address setup (skip this step if using RARP):** Press **[IP Address]**, then press **[Edit]** and use the keyboard on the display screen to enter the static IP address for the DC220/230. This number is assigned by the System Administrator

OR

b) **RARP setup (skip this step if using a static IP address):** Press **[RARP]**, then press **[Enabled]**.

c) Press **[Save]**.

d) Press **[Gateway Address]**, then press **[Edit]** and use the keyboard on the display screen to enter the Gateway address of your network.

e) Press **[Save]**.

f) Press **[Subnet Mask]**, then press **[Edit]** and use the keyboard on the display screen to enter the Subnet Mask for your network (default is 255.255.255.0).

g) Press **[Save]**.

The Document Company

XEROX

DC220/230ST Windows NT® 4.0 NetBIOS/IP Quick Install

- h)** Press **[Broadcast Address]**, then press **[Edit]** and use the keyboard on the screen to enter the Broadcast Address you want your DC220/230 to use.

Note: The Broadcast Address is the address where all the host bits are set to either zero (0) or one (1).

- i)** Press **[Host Name]**, then press **[Edit]** and use the keyboard on the screen to enter the Host Name you want your DC220/230 to use.
- j)** Press **[Save]**.
- k)** Press **[Save]** on the TCP/IP screen to save all the settings.
- 4.** Access the NetBIOS/IP Network Setups screens:
- a)** Press **[NetBIOS/IP]**.
- 5.** Enable NetBIOS/IP:
- a)** Press **[Enablement]**.
- b)** Press **[Enabled]**.

- 6.** Enter the Host Name:
- a)** Press **[Host Name]**, then press **[Edit]** and use the keyboard on the screen to enter the Host Name for your network (14 characters or less).
- b)** Press **[Save]**.
- 7.** Enter the Printer Name:
- a)** Press **[Printer Name]**, then press **[Edit]** and use the keyboard on the screen to enter the Printer Name for your network (15 characters or less).
- b)** Press **[Save]**.
- 8.** Enter the Workgroup name:
- a)** Press **[Workgroup]**, then press **[Edit]** and use the keyboard on the screen to enter the Workgroup Name for your network.
- b)** Press **[Save]**.
- 9.** Press **[Save]** to exit the NetBIOS/IP screen.

- 10.** Press **[Exit]**. The DC220/230 will reboot and print a configuration sheet in approximately 3 minutes.
- 11.** Check the settings on the configuration sheet against those that were entered.
- 12.** At the client, install print drivers and map the printer in the usual manner. Refer to the CentreWare manual, *Getting Started with Print and Fax Services* for additional information.

Additional information on this installation procedure can be found in the DC220/230 System Administration Guide.