



Fig. 1
Using both hands gently open the front cover.



Fig. 3
Pull the toner cartridge indicated in the message on the display out.

Note: “Y” stands for Yellow, “M” for Magenta, “C” for Cyan, and “K” for Black.



Fig. 5
Insert the toner cartridge as far as possible.



Fig. 2
Select the toner cartridge that needs to be replaced.



Fig. 4
Lightly shake the “new” toner cartridge three or four times up and down and to the left and right.



Fig. 6
Be sure the toner cartridge is seated properly.



Fig. 7
Close the front cover.

Type of Consumable/Periodical Replacement Part	Part Number
Black Toner(Western Hemisphere)	006R01219
Yellow Toner [Y] (Western Hemisphere)	006R01220
Magenta Toner [M] (Western Hemisphere)	006R01221
Cyan Toner [C] (Western Hemisphere)	006R01222
Black Toner (Eastern Hemisphere)	006R01223
Yellow Toner [Y] (Eastern Hemisphere)	006R01224
Magenta Toner [M] (Eastern Hemisphere)	006R01225
Cyan Toner [C] (Eastern Hemisphere)	006R01226
Drum Cartridge (Black)	013R00602
Drum Cartridge (Color)	013R00603
Fuser 120V	008R12988
Fuser 220V	008R12989
Waste Toner Container	008R12990
Charge Corotron	013R00604
Staple Refills for Advanced Finisher	008R12941
Staple Cartridge for Advanced Finisher	008R12964
Staple Cart for Professional Finisher	008R12925

XEROX®

DocuColor 240 / 250

Quick Start Guide



Replacing Toner Cartridge