



Online

Indicator lights when data is being received from a client.

Job Memory

Indicator lights when data is stored in the machine's memory.

Features

Allows you to display features settings to program a copy job. It also allows you to alternate between scanning and copying feature screens.

Job Status

Allows you to check or cancel jobs currently executing, or to check or print saved documents.

Machine Status

Allows you to check the machine status, meters, the state of consumables, and output reports.

Access

Use this administrator level feature to change machine default settings, and to setup or modify user accounts.

Numeric Keypad

1 2 3
4 5 6
7 8 9
* 0 #
C

Clear

Clears an incorrect numeric

Numeric Keypad

Is used to enter copy quantity or other numeric information.

Power Saver

Lights up green and is initiated automatically if the machine is left idle for a specific amount of time. Press the Power Saver button to bring the machine back to full power after the warm-up period.

Clear All

Returns the machine to the original Default State. When the Clear All button is selected in Interrupt mode, default settings are applied only to the interrupting job.

Interrupt

Stops the printer/copier during the current job. This allows another job to be run.

Stop

Pressing Stop will halt the copy job in process at the completion of the current activity. A message asking if you want to press Start to continue the job or Clear All to cancel the job is displayed on the Touch Screen.

Start

Initiates a job or continues the copying process.

Quick Start Guide

Control Panel



DocuColor 2240/1632

THE DOCUMENT COMPANY

XEROX