



Fig. 1
Make sure that the machine has stopped before opening the front cover.

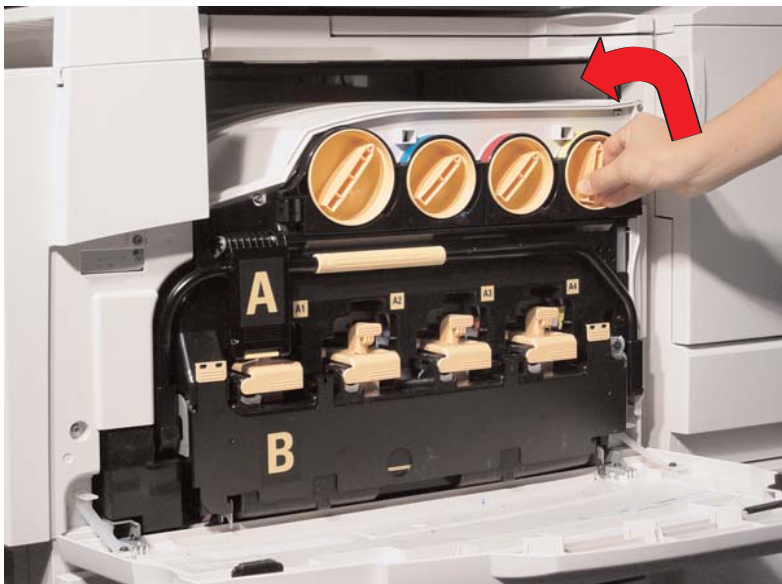


Fig. 2
Turn the toner cartridge of the color indicated in the message to the left up to the key mark (open).

Note: "Y" stands for Yellow, "M" for Magenta, "C" for Cyan, and "K" for Black.

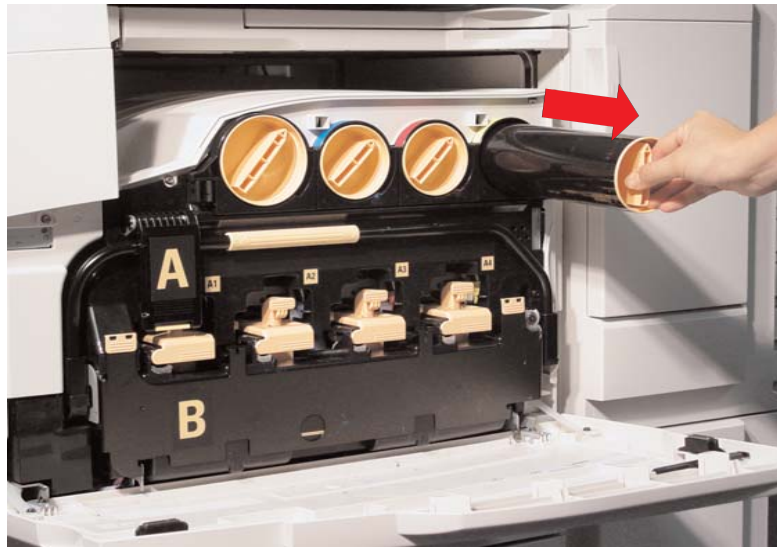


Fig. 3
Gently pull the toner cartridge towards you to remove.

Warning:
Do not throw toner cartridges into an open fire. Toner remaining in the cartridge can cause an explosion and you can get burnt.
Pull out toner cartridges gently.
Otherwise, toner may fly out of the cartridges.



Fig. 4
Lightly shake the new toner cartridge three or four times up and down to the left and right.

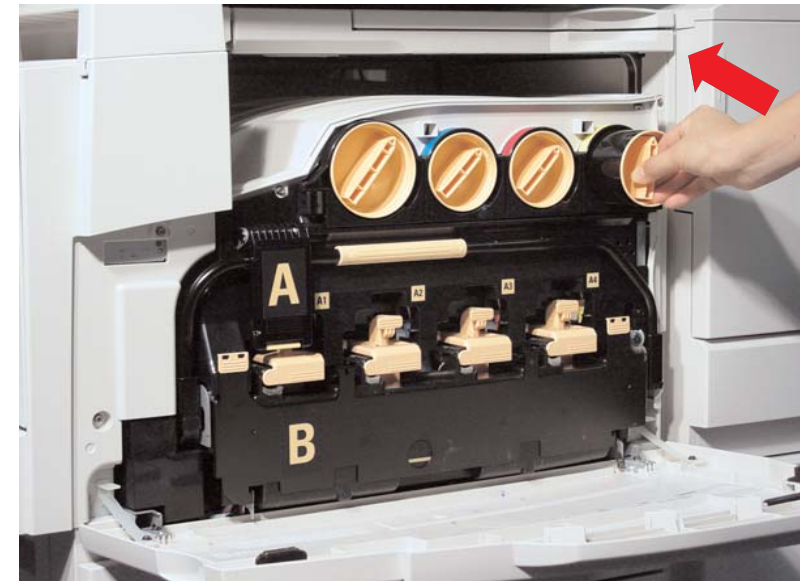


Fig. 5
Insert the toner cartridge as far as possible with the arrow on the cartridge facing up.



Fig. 6
Turn the toner cartridge to the right down to the key (closed).



Fig. 7
Close the front door.

Note:
A message will be displayed and the machine will not operate if the front cover is even slightly open.

Quick Start Guide

Replacing Toner Cartridges



THE DOCUMENT COMPANY

XEROX

Replacing Toner Cartridges - 2 of 2

DocuColor 3535