

VERSION 1.0
SEPTEMBER 2023
702P09146

HOW TO INSTALL FIERY PATCHES AND UPDATE THE FIERY API

© 2023 Xerox Corporation. All rights reserved. Xerox® is a trademark of Xerox Corporation in the United States and/or other countries. BR39314

Document Version: 1.0 (September 2023).

Contents

Installing Fiery Patches and Updating the Fiery API.....	1
Installing Fiery Patches.....	1
Installing from System Updates.....	1
Installing from Command WorkStation.....	1
Manually Installing Fiery Patches.....	1
Updating the Fiery API	2

Installing Fiery Patches and Updating the Fiery API

Note: These installation instructions do not apply to the Fiery XIJPS.

Installing Fiery Patches

INSTALLING FROM SYSTEM UPDATES

To launch the application on the Print Server, click on the Windows **Start** menu, then click **Fiery > System Updates**, and click on **Check Now**. Allow the system to check for updates, then select the patches. The application will walk the user through the patch installation process.

Note: The Print Server may reboot multiple times to complete the patches installation.

INSTALLING FROM COMMAND WORKSTATION

1. On a client computer or the Print Server, launch **Command WorkStation** and login to the Print Server with **Administrator** privileges. The default username is **Administrator** or **Admin**, and the password is the password of the administrator set by the site administrator.
2. From the Server menu, select **Device Center**.
3. Click **Fiery Updates > Patches** on the left side of Device Center.
If System Updates is scheduled to automatically check for updates, Fiery Updates displays a message for disabling the scheduled automatic updates in System Updates. To disable the scheduled automatic updates in System Updates and to enable the Fiery Updates in Command WorkStation, click **Continue**.
4. Select the patches. Any required previous patches will automatically be selected.
5. Click **Update > Continue** to reboot the Print Server and install patches.
6. To confirm the installed patch, check the Configuration page of Print Server.

Note: The Print Server may reboot multiple times to complete the patches installation.

MANUALLY INSTALLING FIERY PATCHES

EXE Patch Instructions

1. Ensure that the Fiery printer controller reaches **Idle**.
2. Execute the EXE patch and follow the instructions in the Fiery Patch Downloader.
3. Notes about the Fiery Patch Downloader
 - a. Login must be **Admin**. This cannot be modified.
 - b. The password is the Fiery administrator login password.
 - c. The hostname can be the IP address or the Fiery Server name.
4. After the patch is downloaded, and when prompted by the Fiery Patch Downloader, choose **Reboot**. If you choose to Restart later, ensure that you manually reboot the server. Otherwise, the changes will not take effect.
5. Wait until the Fiery controller reaches **Idle** and print the **Configuration** page.
6. Verify that the System Updates Log section contains the patch number that was just installed.

Postscript Patch Instructions

1. Ensure that the Fiery printer controller reaches **Idle**.
2. Import the Postscript patch file using Command Workstation to the **Direct** connection.
3. Wait until the file finishes processing and the Command Workstation or the LCD will show **Idle**.
4. From Command Workstation, choose **Server, Reboot Server**, or from the Fiery LCD, select **Shut down, Reboot System**.
5. Wait until the Fiery controller reaches **Idle** and print the **Configuration** page.
6. Verify that the System Updates Log section contains the patch number that was just installed.

Updating the Fiery API

1. On a client computer or the Print Server, launch **Command WorkStation** and login to the Print Server with **Administrator** privileges. The default username is **Administrator** or **Admin**, and the password is the password of the administrator set by the site administrator.
2. From the Server menu, select **Device Center**.
3. Click **Fiery Updates > Updates** on the left side of the Device Center.
4. Select the API patch. Any required previous patches will automatically be selected.
5. Click **Update > Continue** to reboot the Print Server and install patches.
6. To confirm the installed patch, check the Configuration page of Print Server.

Note: The Print Server may reboot multiple times to complete the patches installation.