

VERSION 1.0  
DECEMBER 2024

# Xerox® PrimeLink® C9265/C9275/C9281 Printers Installation Instructions


© 2024 Xerox Corporation. All rights reserved. Xerox® and PrimeLink® are trademarks of Xerox Corporation in the United States and/or other countries. BR40900

Other company trademarks are also acknowledged.

Document Version: 1.0 (December 2024).

# Installation Instructions

1. Print a configuration report at the Xerox® PrimeLink® C9265/C9275/C9281 Local User Interface (LUI) by selecting Settings/Gear icon ->Device status -> Print Reports-> Printer Reports -> Configuration Report -> Print.
2. Extract / unzip the .bin file from the zip file you downloaded from Xerox.com to a known location.
3. If an Integrated Fiery controller or standalone EX C9265/C9275/C9281 Fiery Print server is connected to the Xerox PrimeLink C9265/C9275/C9281, proceed to step 4. Otherwise, proceed to step 5.
4. Access the Fiery controller's Web Tools web page by entering the Fiery IP address into an Internet browser. Then click on the Xerox Embedded Web Server link in the upper right corner of the Web Tools page to access the Xerox PrimeLink C9265/C9275/C9281 Embedded Web Services web page. Then proceed to step 6.
5. Access the Xerox PrimeLink C9265/C9275/C9281 Embedded Web Services (EWS) webpage by entering the device IP address into an Internet browser.
6. Click on Login button and enter the Username and Password.
7. Click on System-> Software Upgrade. If the Software Update is disabled, then click on Enable button. When prompted to restart, click Restart button.
8. Once the device comes up, under "Specify File for Software Update" click the Browse button as shown in the below screenshot.

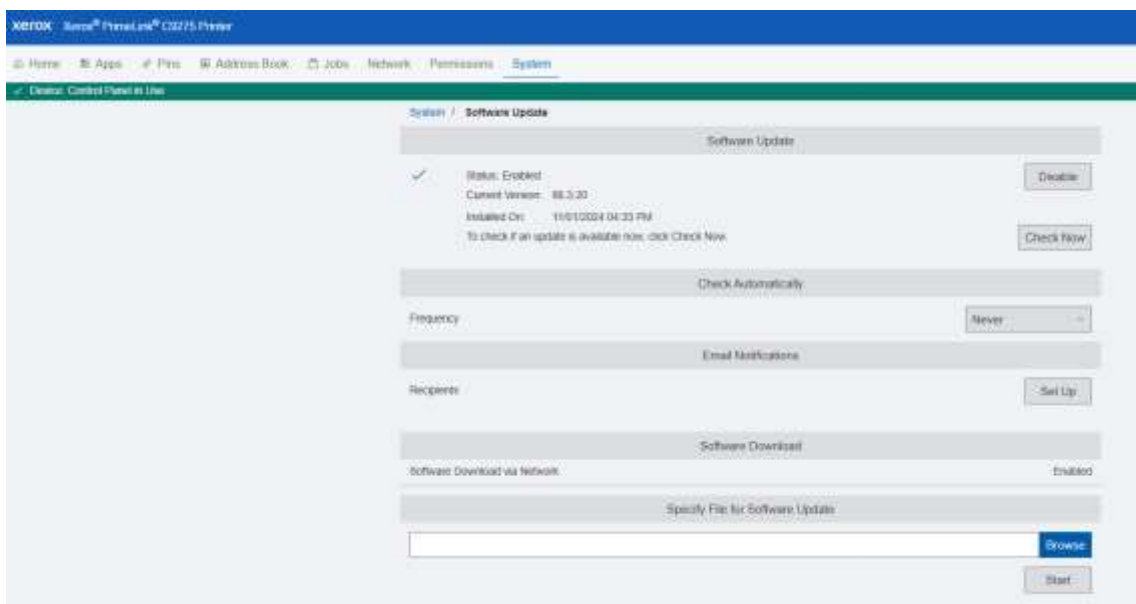

9. Browse to the location to where you extracted the .bin file in step 2 and select it.
10. Select the "Start" button.
11. The software will download to the device. The upgrade will take approximately 10 to 15 minutes. The device's Local User Interface will indicate that the upgrade is being performed. Once the download is complete the device will reboot.
12. Print a Configuration Report at the device's LUI by selecting Settings/Gear icon ->Device status -> Print Reports-> Printer Reports -> Configuration Report -> Print.
13. Ensure that the software version listed on page 1 of the configuration report next to "System" is the software you just installed.