

 
 
 
Xerox® VersaLink® C625




Xerox® VersaLink® C415
Xerox® C325




Xerox® VersaLink® B415

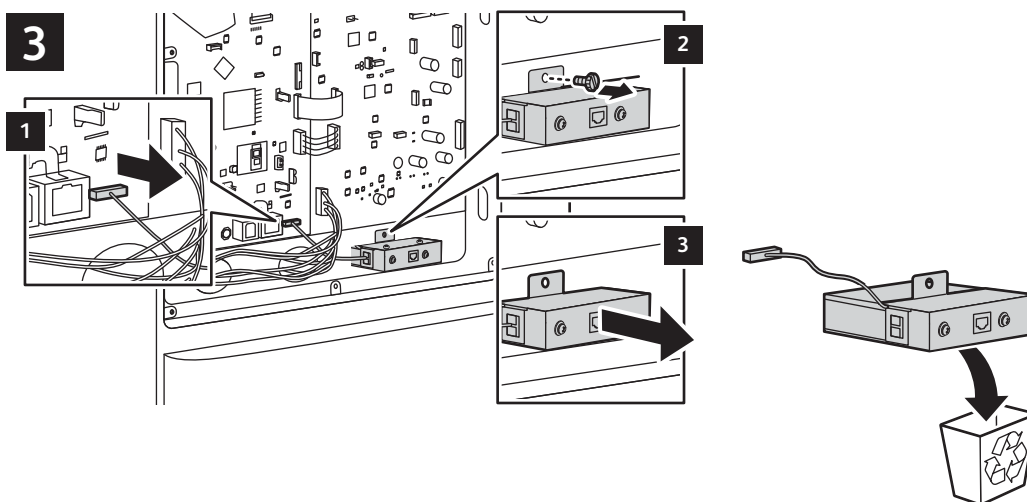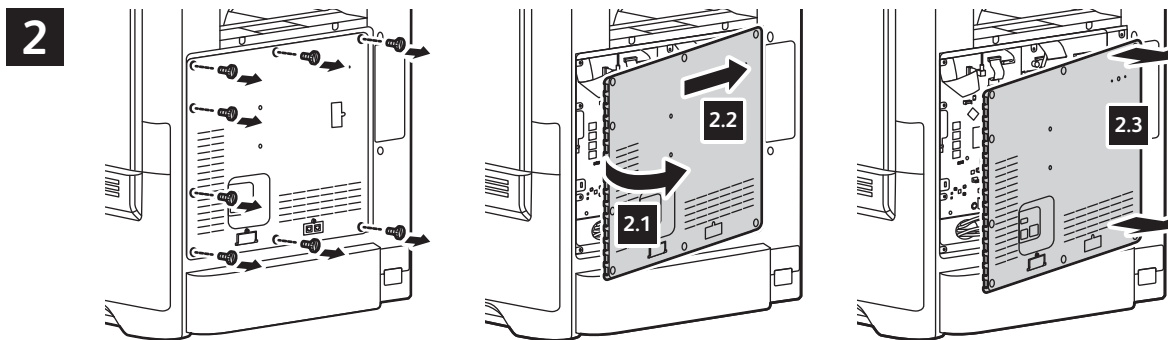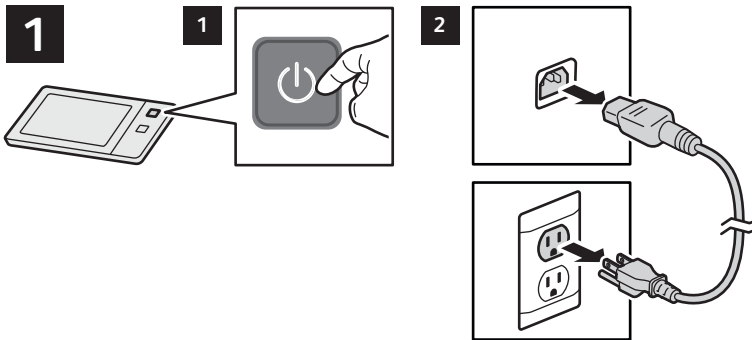

4

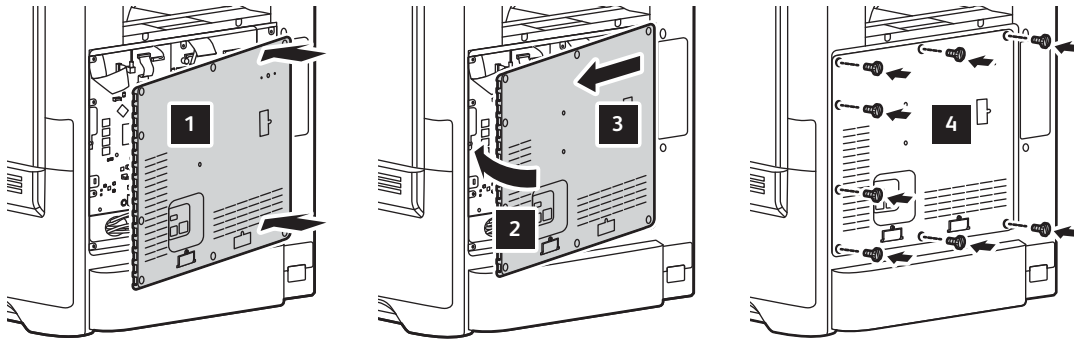 


5

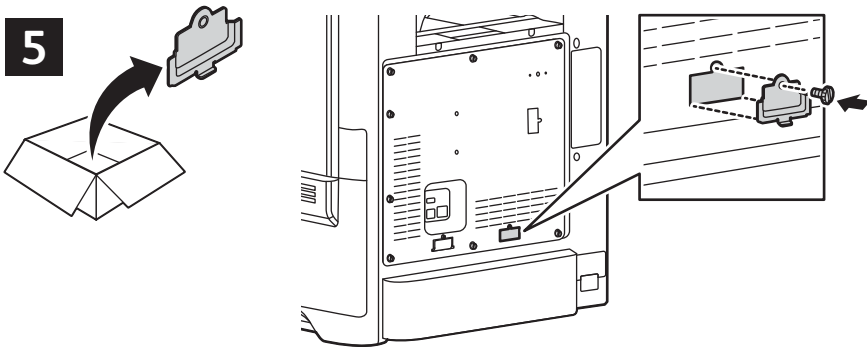 


6

 1

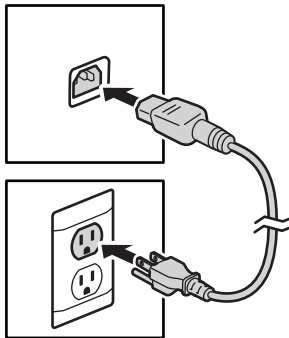

2





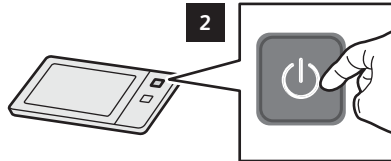 


Xerox® VersaLink® C415
Xerox® C325



Xerox® VersaLink® C415

     Xerox® C325

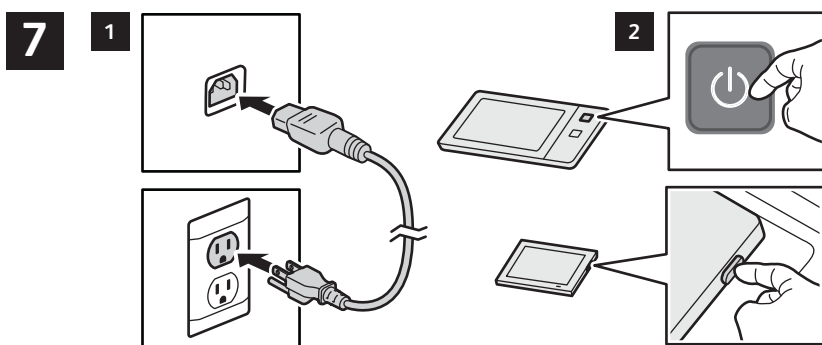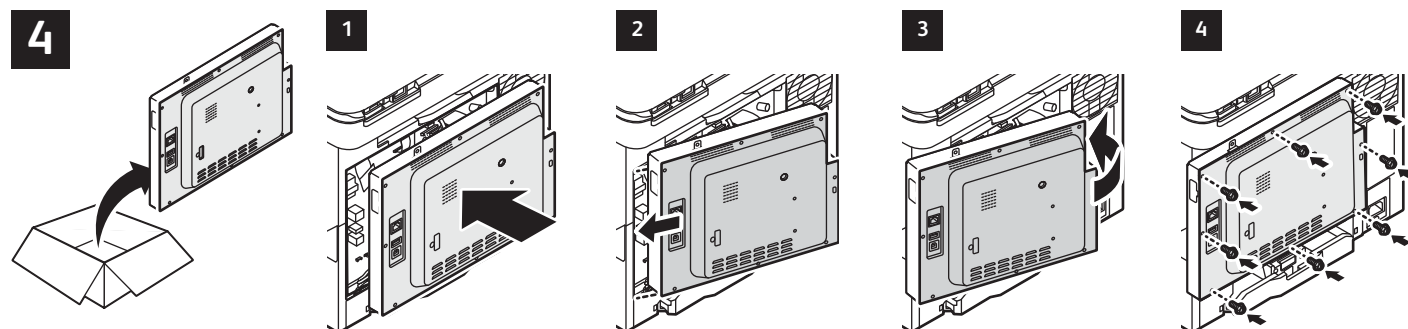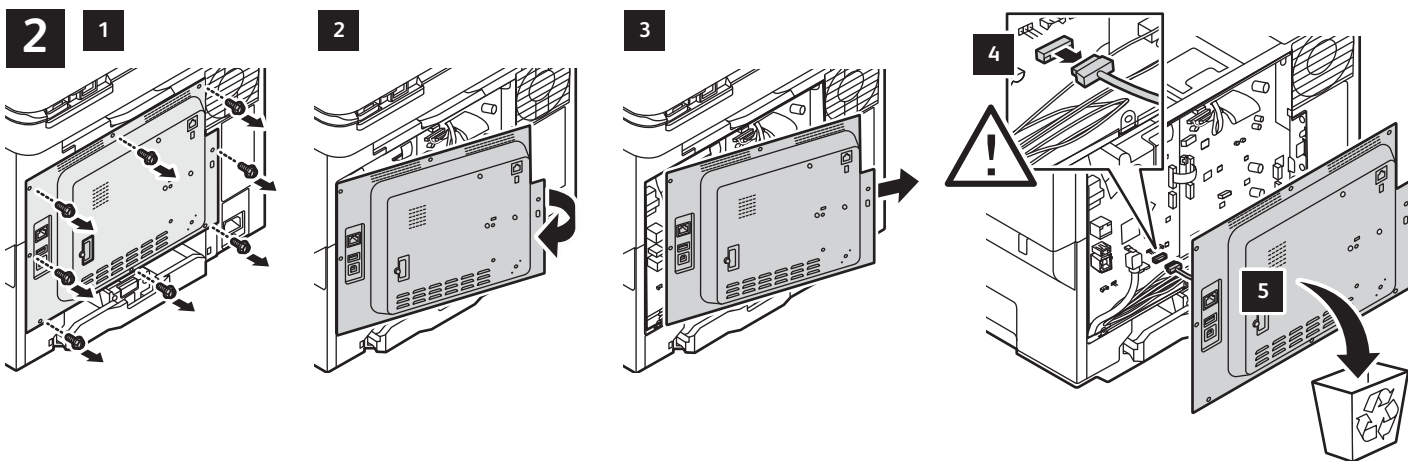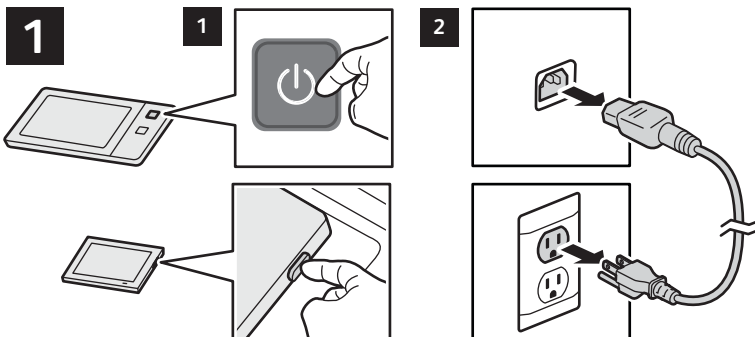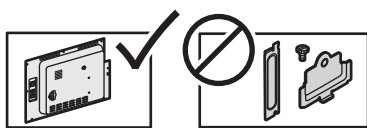

Xerox® VersaLink® B415



PUB1570-004



Xerox® VersaLink® B415

