























 



Xerox® VersaLink® C400/C405










 
 
 


 
 
Printer Symbols









Symbol	Description
	Warning: Indicates a hazard that can cause serious injury or death if not avoided.
	Hot Warning: Hot surface on or in the printer. Use caution to avoid personal injury.
	Pinch Hazard: This warning symbol alerts users to areas where there is the possibility of personal injury.
	Caution: Indicates a mandatory action to take to avoid damage to the property.
	Do not touch the part or area of the printer.
	Do not touch the part or area of the printer.
	Do not expose the drum cartridges to direct sunlight.
	Do not burn the item.
	Do not burn the toner cartridges.
	Do not burn the drum cartridges.
	Pinch Hazard: To avoid personal injury, use caution in this area.

Symbol	Description
	Do not disassemble the part or printer.
	Hot surface. Wait for the indicated time before handling.
	On
	Off
	Do not use paper attached with staples or any form of binding clip.
	Do not use folded, creased, curled, or wrinkled paper.
	Do not load or use inkjet paper.
	Do not use transparencies or overhead projector sheets.
	Do not reload paper previously printed on or used.
	Do not use envelopes.
	Do not copy money.
	Add paper or media.
	Paper Jam

Symbol	Description
	Lock
	Unlock
	Paper Clip
	Cooling
	Elapsed Time
	Supply Paper
	1-Sided Original
	Hole-punched Paper
	USB Universal Serial Bus
	LAN Local Area Network
	Telephone Line
	Modem Line
	Weight

Symbol	Description
	Tilt icon
	Power On/Off Button
	Start Button
	Stop Button
	Services Home Button
	Services Button
	Job Status Button
	Printer Status Button
	Pause Printing Button
	Clear Button
	Power Saver Button
	This item can be recycled.
	Maximum Fill Line Do not load media above this line
	Position Indicator
	Down Direction Indicator
	Up Direction Indicator

Symbol	Description
	Left Direction Indicator
	Extension Lever arrow
	Cyan toner icon
	Magenta toner icon
	Yellow toner icon
	Black toner icon

