 



Drum Cartridge • Module photorécepteur • Cartuccia fotoricettore • Trommeleinheit • Cartucho del cilindro
Cartutx de tambor • Cartucho de fotorreceptor • Afdrukmodule • Trumkassett • Trommelkassett • Tromlemodul
Rumpukasetti • Принт-картридж • Tisková jednotka • Wkład bębna • Dobkazetta • Cartuş cilindru • Tambur Kartuşu
Φύσιγγα τυμπάνου

Xerox® VersaLink® C7120 / C7125 / C7130

Color Multifunction Printer • Imprimante multifonction couleur • Stampante multifunzione a colori • Farbmultifunktionsdrucker • Equipo multifunción de color
Impressora multifuncional d'impressió en color • Impressora multifuncional em cores • Multifunctionele kleurenprinter • Flerfunktionsskrivare med färg
Flerfunksjons fargeskriver • Multifunktionel farveprinter • Värimonitoimitustoin • Многофункциональное цветное устройство • Barevná multifunkční tiskárna
Wielofunkcyjna drukarka kolorowa • Színes többfunkciós nyomtató • Imprimantă multifuncțională color • Renkli Çok İşlevli Yazıcı
Έγχρωμος πολυλειτουργικός εκτυπωτής

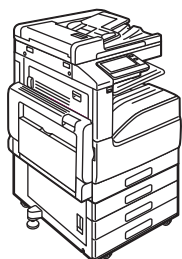

 
Xerox® VersaLink®
C7120 / C7125 / C7130

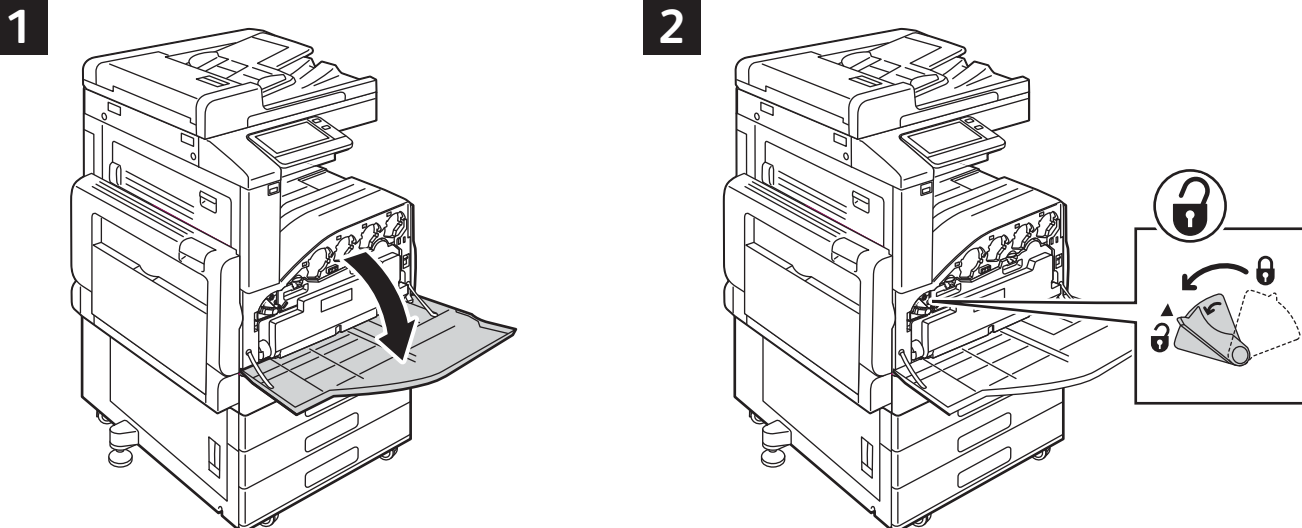


3

3

 
3.1

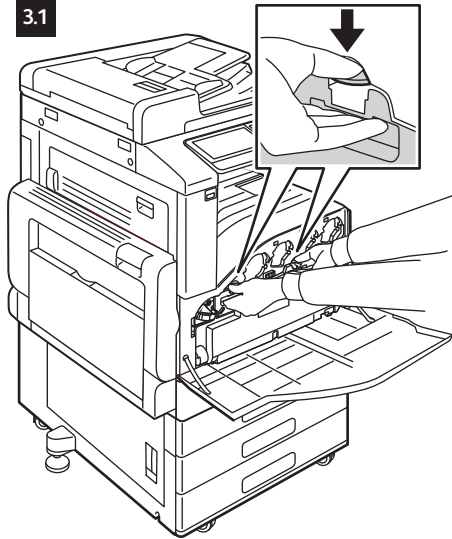

 
3.2

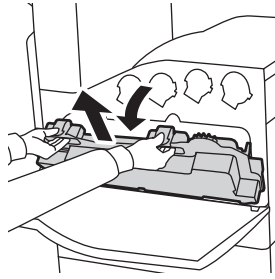

 
3.3

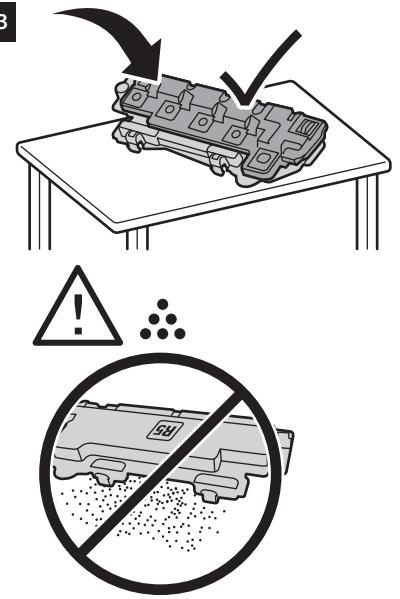

4

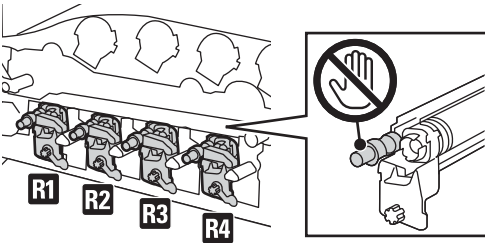 


5

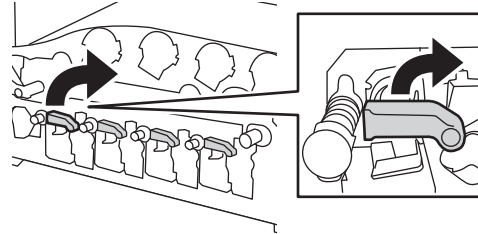 


6

 
6.1

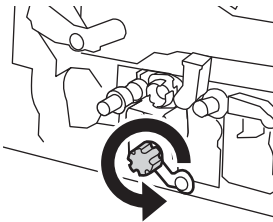

 6.2

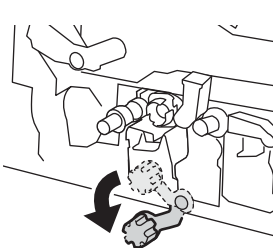


7

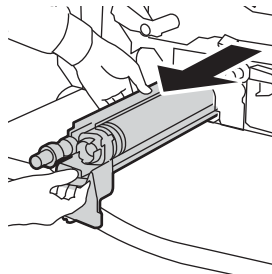 


8

 8.1

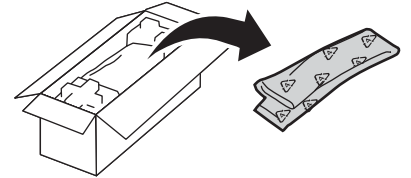


 8.2

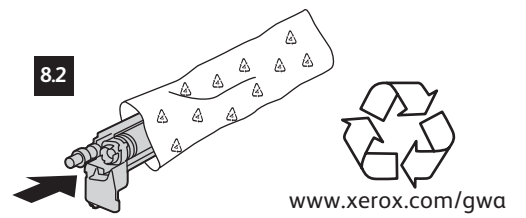


9


 
9.1

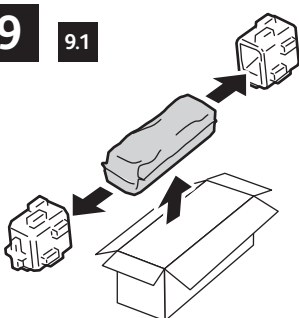

 
9.2

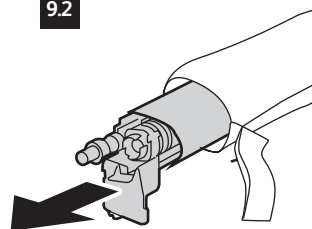

  
9.3

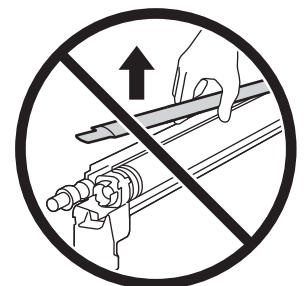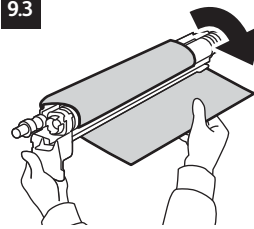


10 10.1

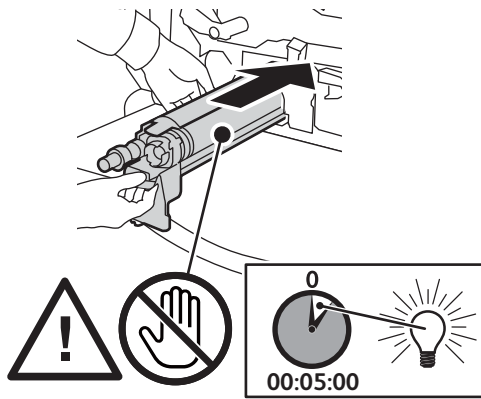 

 
10.2

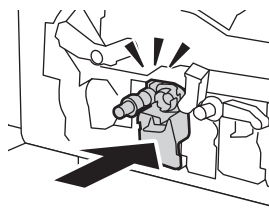


11 11.1

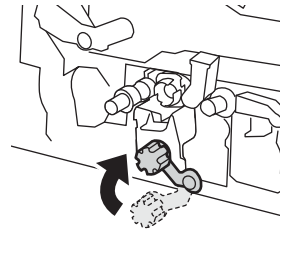 

 
11.2

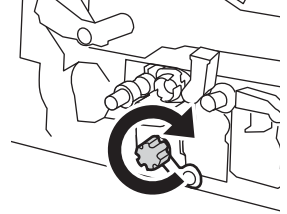


12

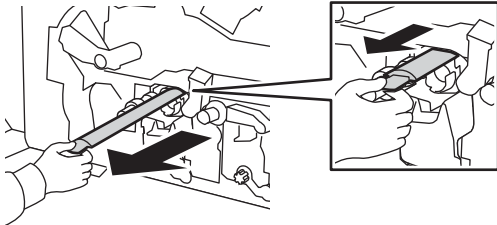 


13

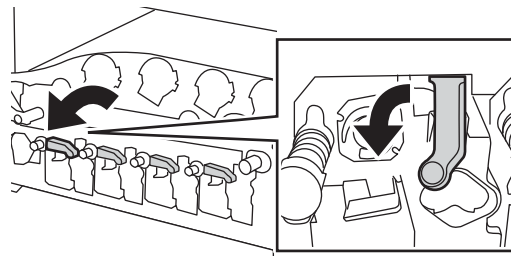 


14

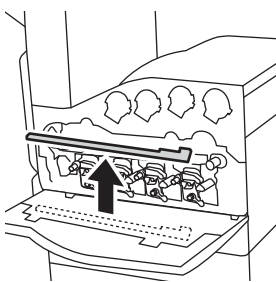 


15 15.1

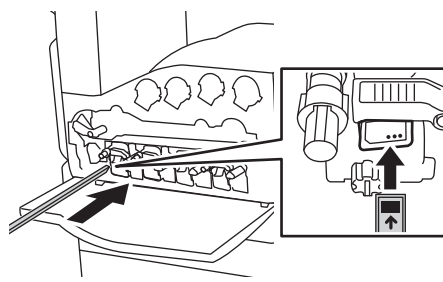 

 15.2

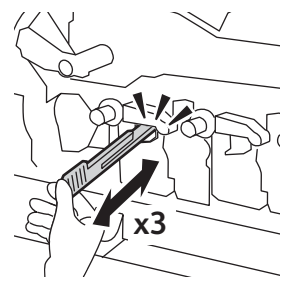

16

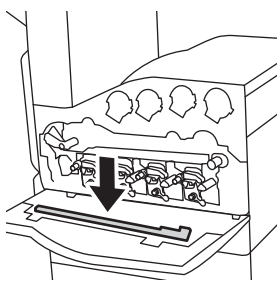 

17

