

xerox™

 
Transfer Belt • Courroie de transfert • Cinghia di trasferimento • Übertragungsband • Correa de transferencia
Cinta de transferência • Correia de transferência • Afdrukband • Överföringsband • Overføringsbelte • Transportbælte
Siirtohihna • Ремень переноса • Přenosový pás • Taśma transferowa • Továbbító szíj • Bandă de transfer • Aktarım Şeridi
Ιμάντας μεταφοράς

Xerox® VersaLink® C7000


Color Printer • Imprimante couleur • Stampante a colori • Farbdrucker • Impresora de color • Impressora de color • Impressora em cores • Kleurenprinter
Färgskrivare • Fargeskriver • Farveprinter • Väritulostin • Цветной принтер • Barevná tiskárna • Drukarka kolorowa • Színes nyomtató • Imprimantă color
Renkli Yazıcı • Έγχρωμος εκτυπωτής

Xerox® VersaLink® C7020 / C7025 / C7030 / C7120 / C7125 / C7130



Color Multifunction Printer • Imprimante multifonction couleur • Stampante multifunzione a colori • Farbmultifunktionsdrucker • Equipo multifunción de color
Impressora multifuncional d'impressió en color • Impressora multifuncional em cores • Multifunctionele kleurenprinter • Flerfunktionsskrivare med färg
Flerfunksjons fargeskriver • Multifunktionel farveprinter • Värimonitoimitulostin • Многофункциональное цветное устройство • Barevná multifunkční tiskárna
Wielofunkcyjna drukarka kolorowa • Színes többfunkciós nyomtató • Imprimantă multifuncțională color • Renkli Çok İşlevli Yazıcı
Έγχρωμος πολυλειτουργικός εκτυπωτής

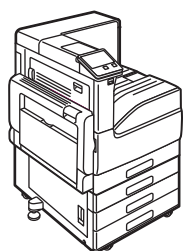

Xerox® VersaLink®
C7000

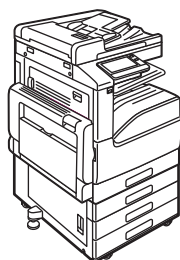 


  Xerox® VersaLink®
C7020 / C7025 / C7030
C7120 / C7125 / C7130

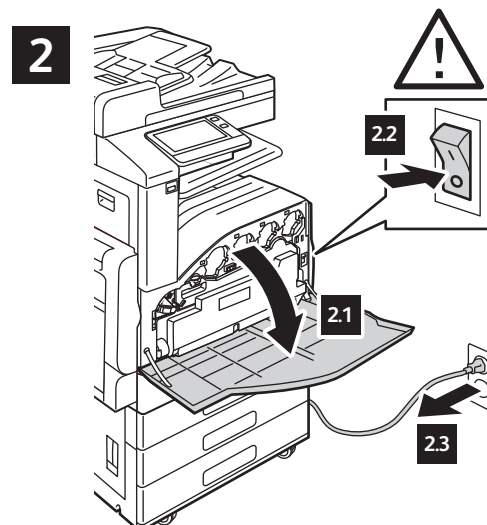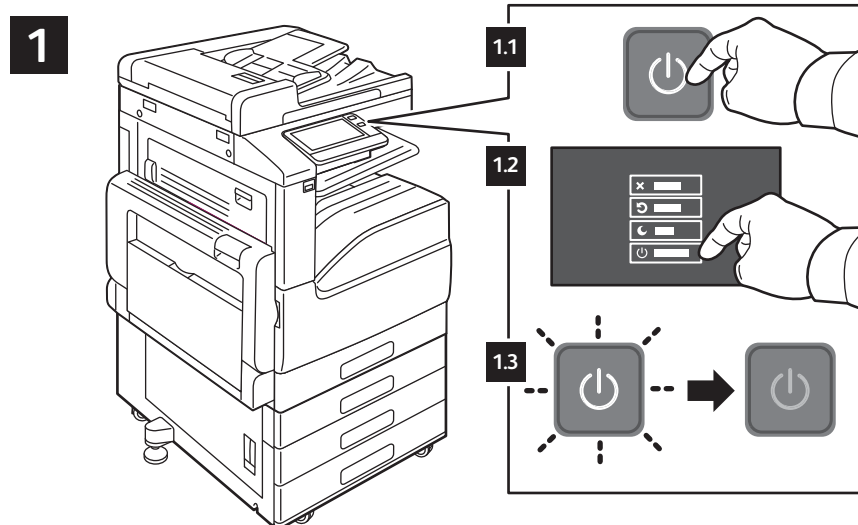


3

 3

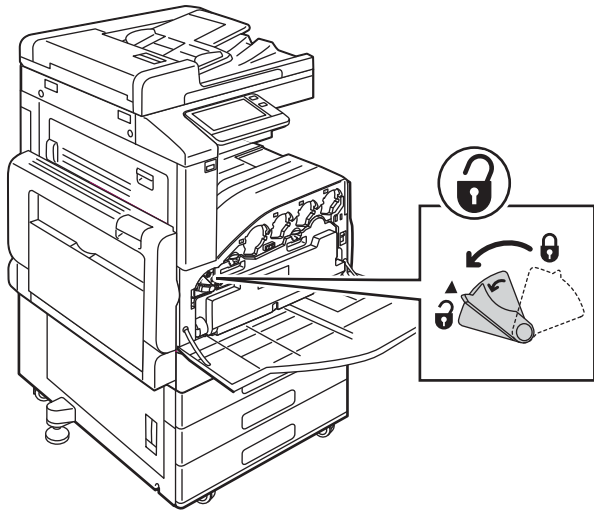


4

 
4.1

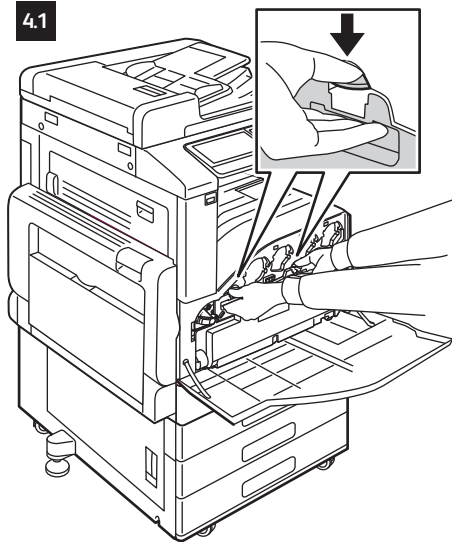

 4.2

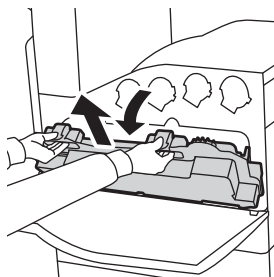


 4.3

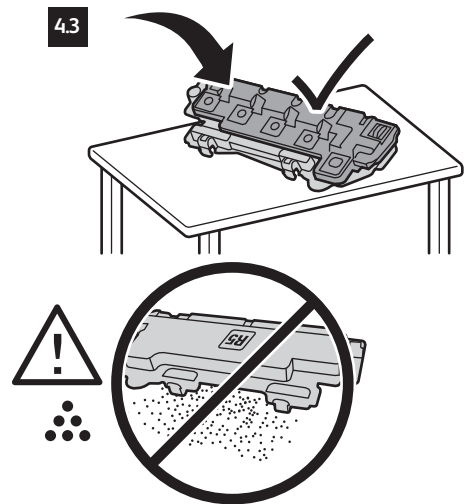


5

 5.1

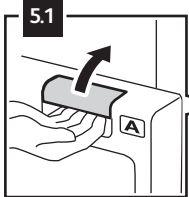

 5.2

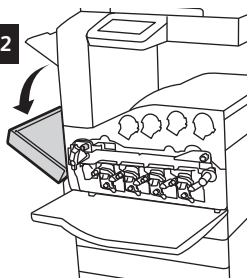


6

6.1




 6.2



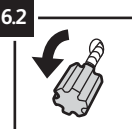






7



 
7.1

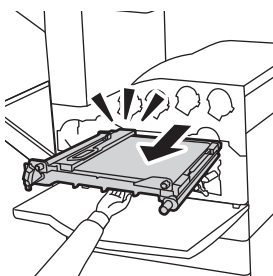

          7.2

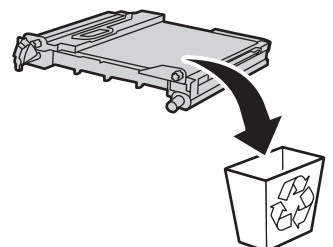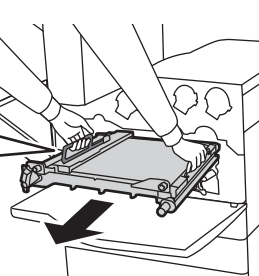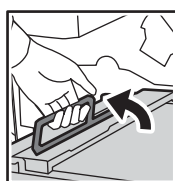

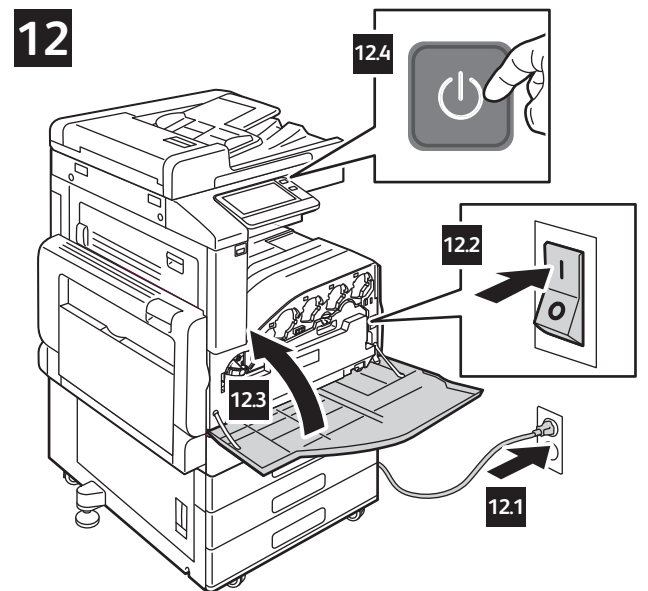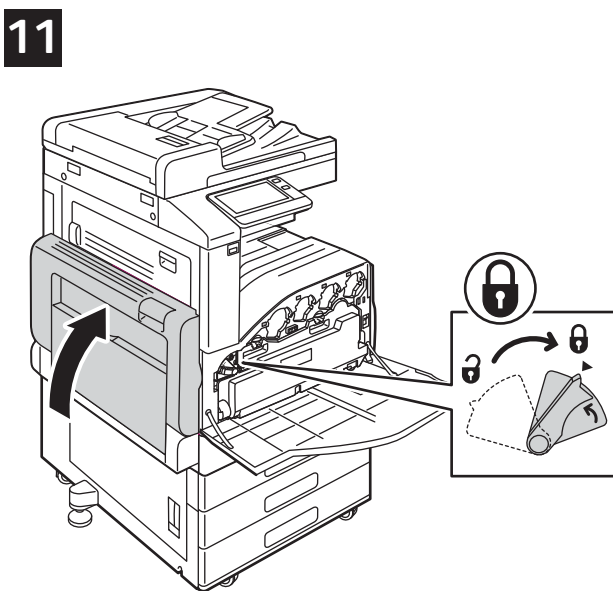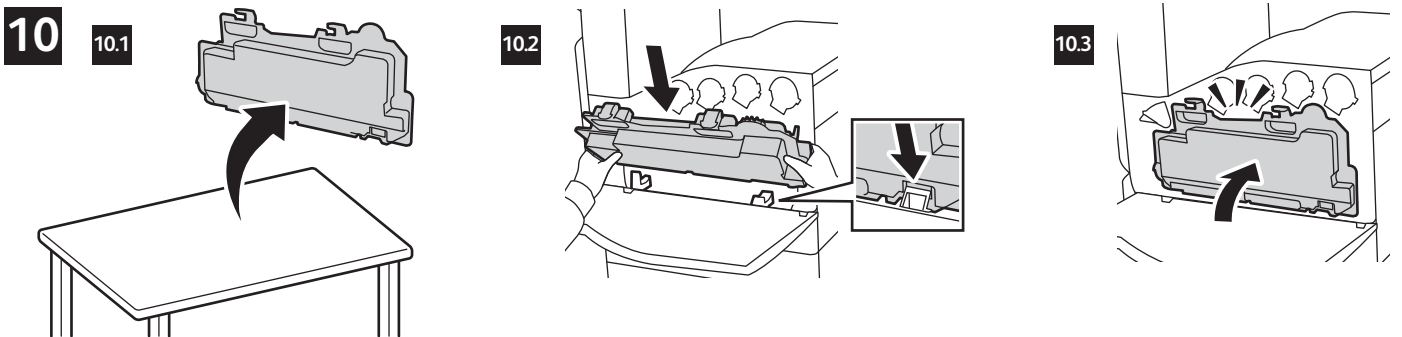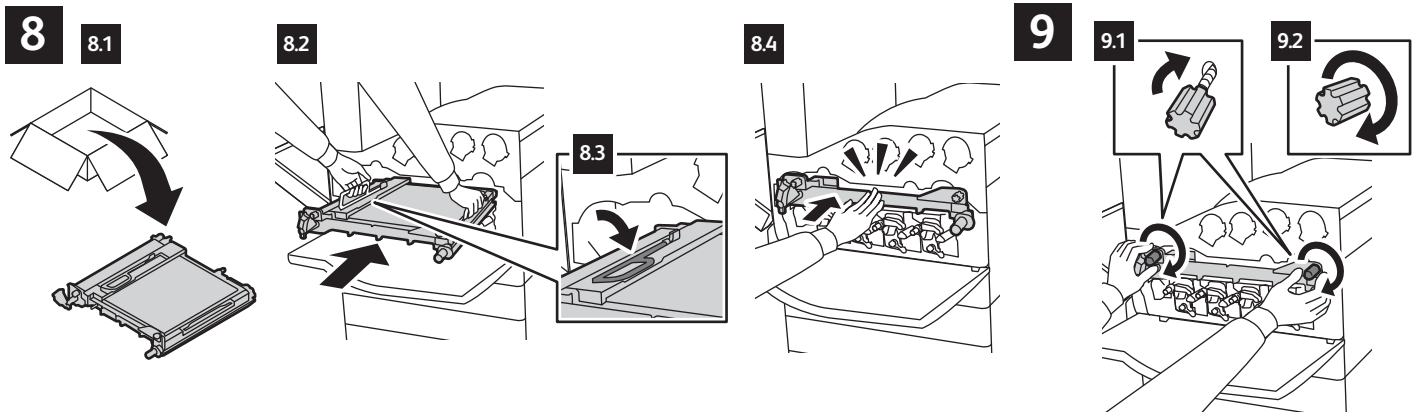

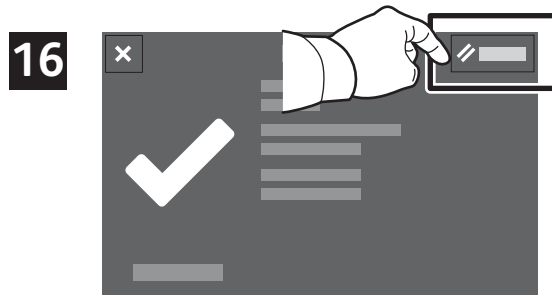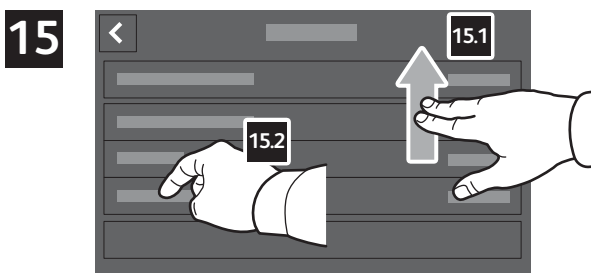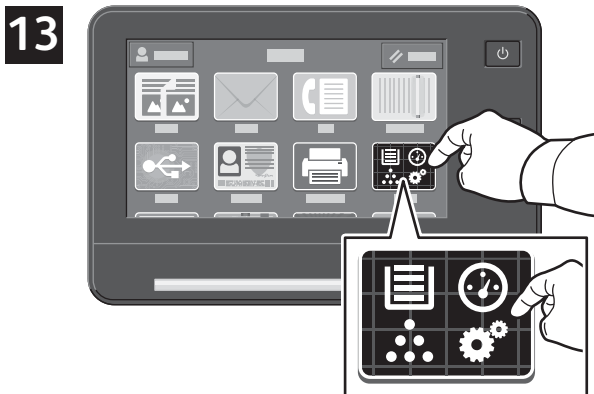

- EN** To reset the counter, touch **Transfer Belt**.
- FR** Pour réinitialiser le compteur, appuyer sur **Courroie de transfert**.
- IT** Per ripristinare il contatore, premere **Cinghia di trasferimento**.
- DE** Zum Zurücksetzen des Zählers **Transferband** antippen.
- ES** Para restaurar el contador, toque **Correa de transferencia**.
- CA** Per restaurar el comptador, toqueu **Cinta de transferència**.
- PT** Para restaurar o contador, toque em **Correia de transferência**.
- NL** Raak **Afdrukband**. aan om de teller op nul te zetten.
- SV** Tryck på **Överföringsband** för att nollställa räkneverket.
- NO** Trykk på **Overføringsbelte** for å tilbakestille telleren.
- DA** Tryk på **Overførbælte** for at nulstille tælleren.
- FI** Nollaa laskuri valitsemalla **Siirtohihna**.
- RU** Для сброса счетчика нажмите **Ремень переноса**.
- CS** Chcete-li vynulovat počítadlo, stiskněte položku **Přenosový pás**.
- PL** Aby zresetować licznik, naciśnij pozycję **Taśma transferowa**.
- HU** A számláló visszaállításához érintse meg a **Továbbító szíj** opciót.
- RO** Pentru a reseta contorul, atingeți **Banda de Transfer**.
- TR** Sayacı sıfırlamak için **Aktarım Şeridi**'ne dokununuz.
- EL** Για την επαναφορά του μετρητή, επιλέξτε **Ιμάντας μεταφοράς**.

