

 
Waste Cartridge • Bac de récupération • Contenitore residui • Sammelbehälter
 Cartucho de residuos • Cartutx de residus • Cartucho de resíduos • Afvalcontainer • Spillkassett
 Avfallsbeholder • Beholder til brugt toner • Hukkavärikasetti • Сборник отходов
 Odpadní nádobka • Wkład odpadów • Hulladékgyűjtő • Cartuş de toner rezidual • Atık Kartuşu
 Περιέκτης υπολειμμάτων

Xerox® VersaLink® C7000


Color Printer • Imprimante couleur • Stampante a colori • Farbdrucker • Impresora de color • Impressora de color • Impressora em cores • Kleurenprinter
 Färgskrivare • Fargeskriver • Farveprinter • Väritulostin • Цветной принтер • Barevná tiskárna • Drukarka kolorowa • Színes nyomtató • Imprimantă color
 Renkli Yazıcı • Έγχρωμος εκτυπωτής

Xerox® VersaLink® C7020 / C7025 / C7030 / C7120 / C7125 / C7130

Color Multifunction Printer • Imprimante multifonction couleur • Stampante multifunzione a colori • Farbmultifunktionsdrucker • Equipo multifunción de color
 Impressora multifuncional d'impressió en color • Impressora multifuncional em cores • Multifunctionele kleurenprinter • Flerfunktionsskrivare med färg
 Flerfunksjons fargeskriver • Multifunktionel farveprinter • Värimonitoimitulostin • Многофункциональное цветное устройство • Barevná multifunkční tiskárna
 Wielofunkcyjna drukarka kolorowa • Színes többfunkciós nyomtató • Imprimantă multifuncțională color • Renkli Çok İşlevli Yazıcı
 Έγχρωμος πολυλειτουργικός εκτυπωτής

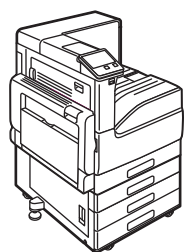


Xerox® VersaLink®
C7000

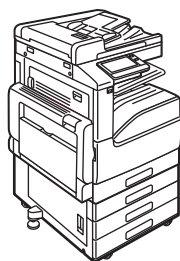 


Xerox® VersaLink®
C7020 / C7025 / C7030
C7120 / C7125 / C7130

 1

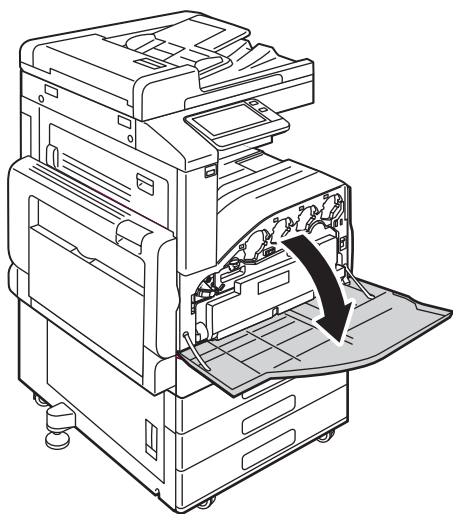


2

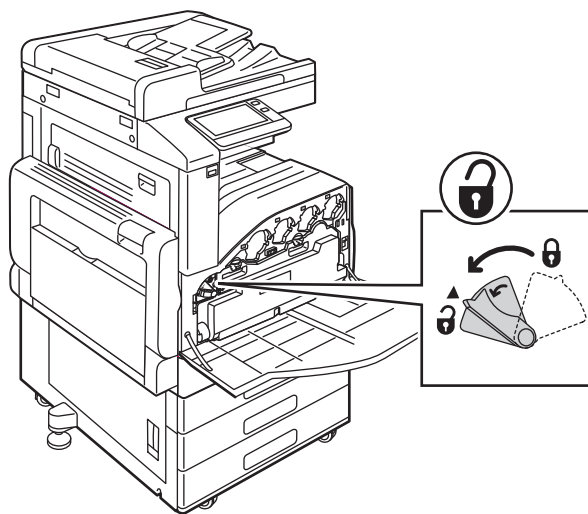 

3

3

 
3.1

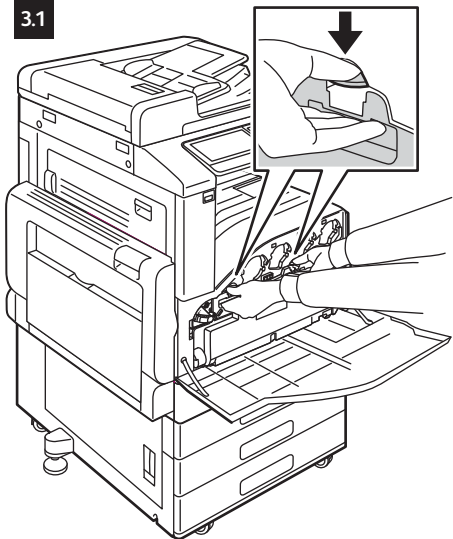

3.2




 3.3

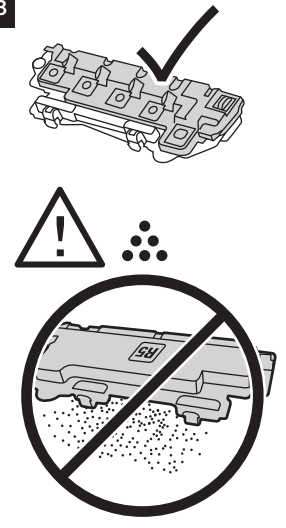


4

 
4.1

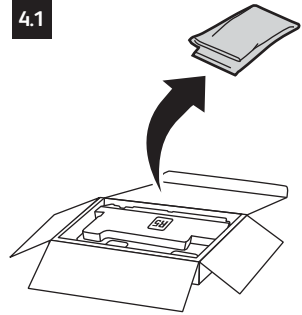

 4.2

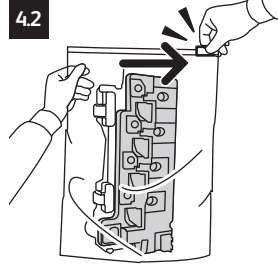


 4.3

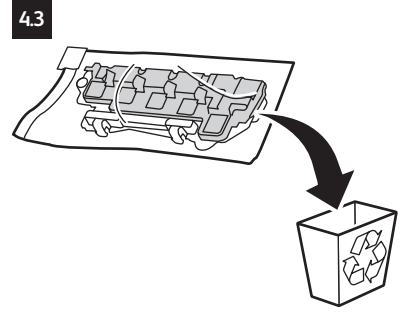


5

 
5.1

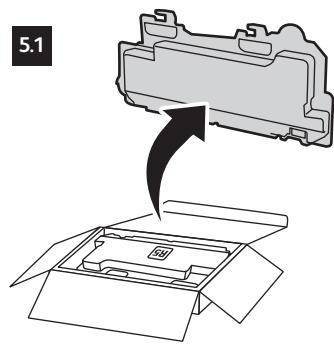

 
5.2

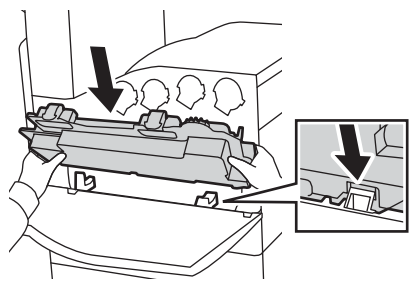

 5.3

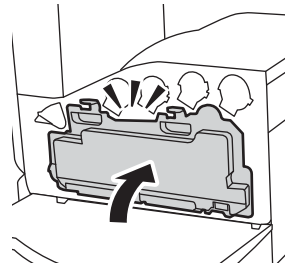

6

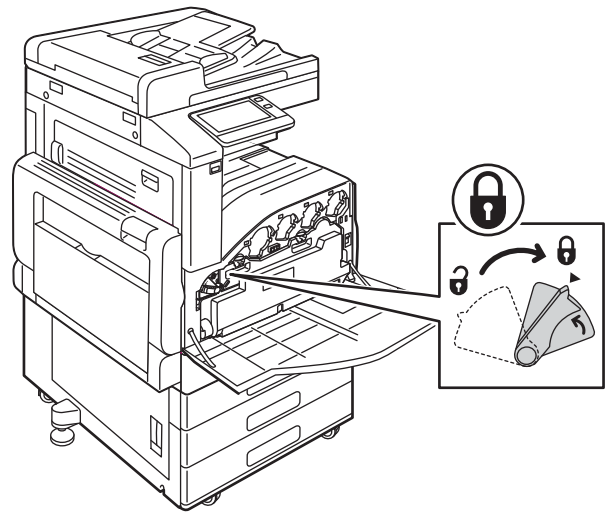 

7

