





















 


 


















 
 
 









 


 

 







# Printer Symbols

Symbol	Description
	Warning: Indicates a hazard that can cause serious injury or death if not avoided.
	Hot Warning: Hot surface on or in the printer. Use caution to avoid personal injury.
	Pinch Hazard: This warning symbol alerts users to areas where there is the possibility of personal injury.
	Caution: Indicates a mandatory action to take to avoid damage to the property.
	Do not touch the part or area of the printer.
	Do not touch the part or area of the printer.
	Do not expose the drum cartridges to direct sunlight.
	Do not burn the item.
	Do not burn the toner cartridges.
	Do not burn the drum cartridges.
	Pinch Hazard: To avoid personal injury, use caution in this area.
	Hot surface. Wait for the indicated time before handling.

Symbol	Description
	On
	Off
	Do not use paper attached with staples or any form of binding clip.
	Do not use folded, creased, curled, or wrinkled paper.
	Do not load or use inkjet paper.
	Do not reload paper previously printed on or used.
	Do not use postcards.
	Do not use envelopes.
	Do not copy money.
	Add paper or media.
	Paper Level Indicator
	Paper Jam
	Document Orientation and Feed Direction

Symbol	Description
	Do not load paper in the tray above the <b>MAX</b> line.
	Clean the document glass as indicated.
	Register the original document on the document glass as indicated.
	Load paper/media in the direction indicated.
	Load paper/media in the bypass tray as indicated.
	Push to open.
	Lock
	Unlock
	Paper Clip
	Cooling
	Elapsed Time
	Direction Indicator
	Supply Paper
	1-Sided Original

Symbol	Description
	Hole-punched Paper
	Transparency
	Load letterhead face up.
	Load letterhead face down.
	Load labels face down.
	USB Universal Serial Bus
	LAN Local Area Network
	Ethernet Port
	Telephone Line
	Wireless
	Weight
	Power On/Off Button
	Start Button
	Stop Button

Symbol	Description
	Copy Button
	Scan Button
	Email Button
	Menu Button
	Back Button
	Address Book Button
	Pause/Redial Button
	Clear Button
	Clear All Button
	Power Saver Button
	Manual Dial Button
	Fax Button
	Printer Status Button
	This item can be recycled.

