



TOUCH SCREEN - Displays all the available features and general machine information

CLEAR ALL - Resets job programming to the default settings

PAUSE - Interrupts current printing job

START - Starts the job

SERVICES: Displays the Services screen to enable selection of job features


JOB STATUS: Displays the job queue information

MACHINE STATUS: Displays machine information

Features* are accessible by touching All Services.



*Some features may not be available on your model.

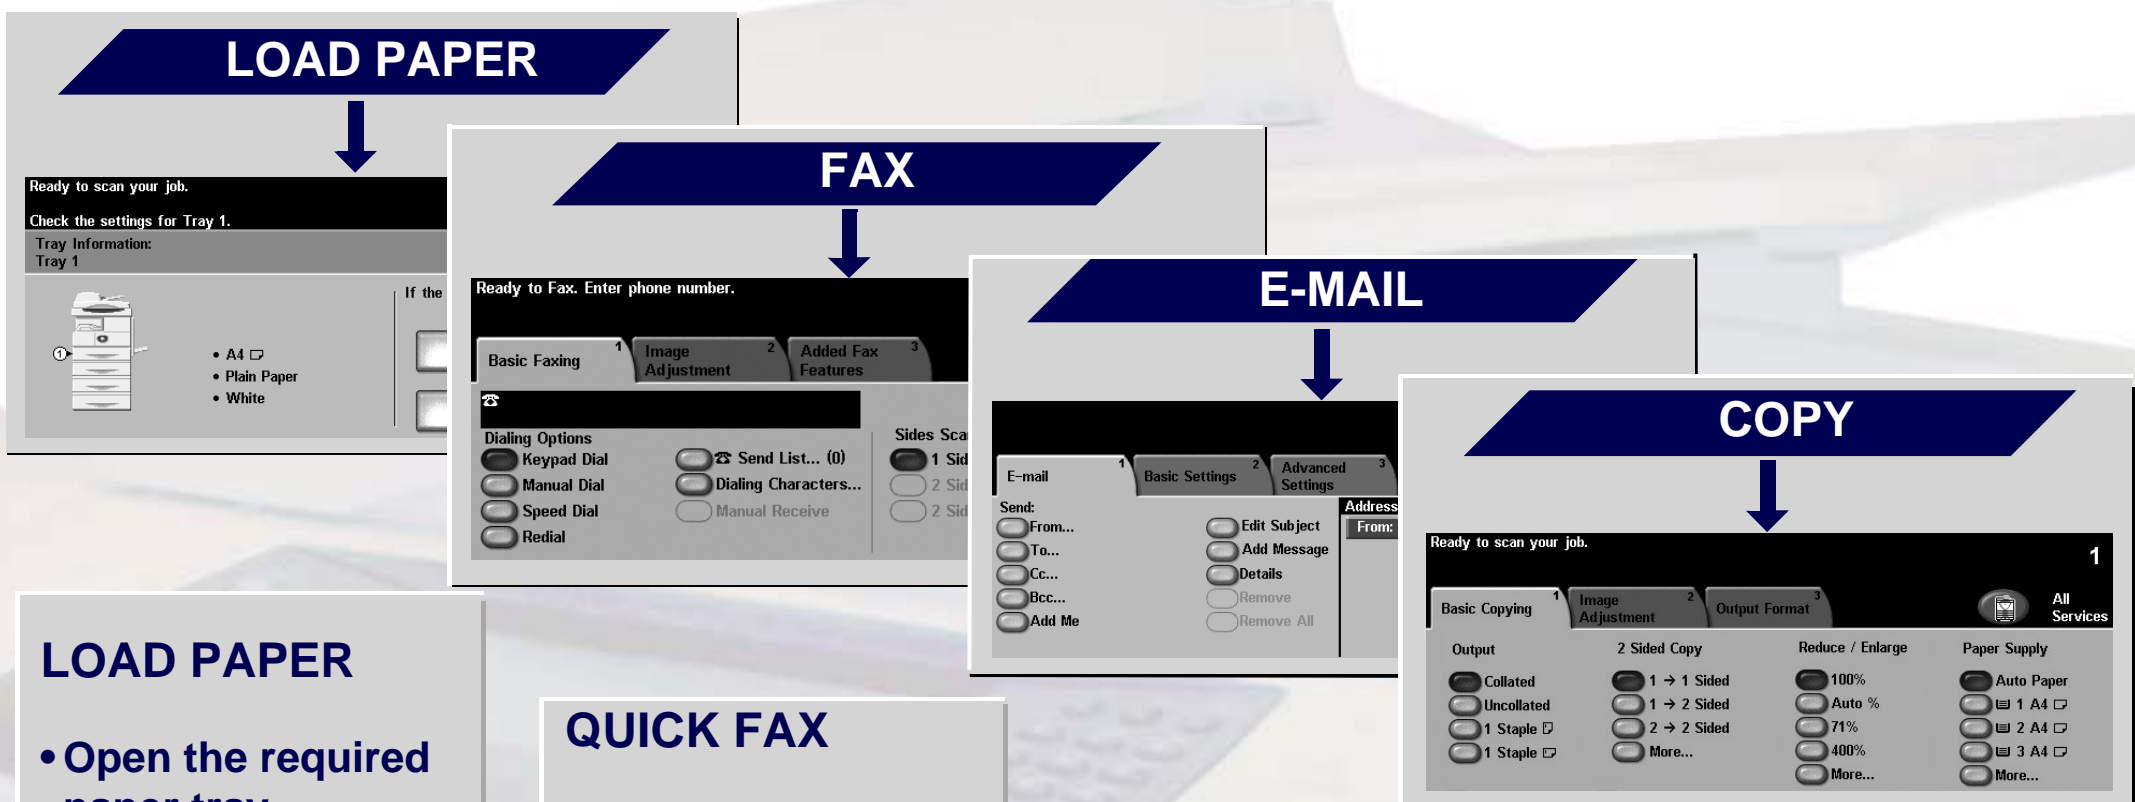

LOAD PAPER

- Open the required paper tray.
- Load the paper, do not load above the maximum fill line.
- Adjust the guides to touch the edge of the paper.
- Close the paper tray, except the Bypass Tray.
- Confirm the paper size/type settings on the user interface.

QUICK FAX

- Load the original face up in the document handler.
- Select FAX from the All Services screen.
- Enter the recipient fax number using the keypad or select the number from the ADDRESS BOOK.
- Touch the screen buttons to make feature selections.
- Press START.

QUICK E-MAIL

- Load the original face up in the document handler.
- Select E-MAIL from the All Services screen.
- Input the E-mail address or make a selection from the ADDRESS BOOK.
- Touch the screen buttons to make feature selections.
- Press START.

QUICK COPY

- Load the original face up in the document handler.
- Select COPY from the All Services screen.
- Touch the screen buttons to make feature selections.
- Press START.

For more information... 1. Press ? on the control panel, 2. refer to the Getting Started Guide, 3. refer to the User Guide on the User Documentation CD, or 4. visit our website on... www.xerox.com/support