



















 
Xerox® WorkCentre® 5945/5955 Series













 
Xerox® WorkCentre® 5945i/5955i Series








 




Printer Symbols




 


 
 












 




 



Symbol	Description
	Warning: Indicates a hazard that can cause serious injury or death if not avoided.
	Hot Warning: Hot surface on or in the printer. Use caution to avoid personal injury.
	Laser Warning: This symbol indicates a laser is being used and alerts the user to refer to the appropriate safety information.
	Pinch Hazard: This warning symbol alerts users to areas where there is the possibility of personal injury.
	Caution: Indicates a mandatory action to take to avoid damage to the property.
	Do not touch the part or area of the printer.
	Do not touch the part or area of the printer.
	Do not expose the drum cartridges to direct sunlight.
	Do not burn the item.
	Do not burn the toner cartridges.






 

Symbol	Description
	Do not burn the drum cartridges.
	Do not burn the waste cartridge.
	Pinch Hazard: To avoid personal injury, use caution in this area.
	To avoid lines on the output, ensure that original documents are loaded correctly in the document feeder.
	To ensure optimum print quality, open the document feeder and inspect the Constant Velocity Transport (CVT) glass for dirt and debris contamination.
	Contamination on the Constant Velocity Transport (CVT) glass.
	Clean the Constant Velocity Transport (CVT) glass with a clean cloth as indicated.
	After cleaning the Constant Velocity Transport (CVT) glass, it is clear of contamination.
	Hot surface. Wait for the indicated time before handling.

Symbol	Description
	On
	Off
	Standby
	Ground/Common/Earth Terminal
	Do not use paper attached with staples or any form of binding clip.
	Do not use folded, creased, curled, or wrinkled paper.
	Do not load or use inkjet paper.
	Do not use transparencies or overhead projector sheets.
	Do not reload paper previously printed on or used.
	Do not use postcards.
	Do not use envelopes.
	Do not use envelopes.
	Do not copy money.

Symbol	Description
	No Knives
	No Scissors
	No Screwdrivers
	No Pens
	Add paper or media.
	Do not load paper in the tray above the MAX line.
	Maximum Paper Level Do not use paper attached with staples or any form of binding clip.
	Load original documents face up in the document feeder in the direction of the arrow as indicated.
	Paper Jam
	Lock
	Unlock
	Load paper/media in the direction indicated.

Symbol	Description
	Paper Clip
	Cooling
	Elapsed Time
	Supply Paper
	Supply Paper Face Down
	1-Sided Original
	Hole-punched Paper
	Transparency
	Load letterhead face up.
	Load letterhead face down.
	Load labels face down.
	Load envelopes with adhesive short-edge flaps print-side down, flaps closed and down, and the flaps going into the printer first.

Symbol	Description
	Load transparencies in the tray in the direction and orientation shown.
	Load envelopes with non-adhesive long-edge flaps print-side down and the flaps open and up.
	Load punch paper in the tray in the direction and orientation shown.
	Load letterhead paper in the tray in the direction and orientation shown.
	Load labels paper in the tray face down and short-edge feed first.
	USB Universal Serial Bus
	LAN Local Area Network
	Telephone Line
	Weight
	Start Button
	Stop Button
	Pause Printing Button
	Log In/Out Button
	Help Button
	Services Home Button

Symbol	Description
	Services Button
	Job Status Button
	Printer Status Button
	Language Button
	Power Saver Button
CA	All Clear Button
	Dial Pause Button
EAC	Eurasia Economic Community
	This item can be recycled.

