










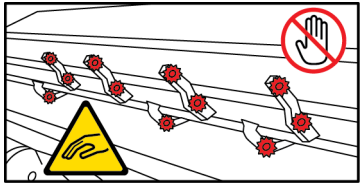




Xerox® Wide Format 6705 System

Product Symbols



Refer to the following table for the product symbols and their definitions.

Symbol	Definition
	Caution This symbol indicates a mandatory action to take in order to avoid damage to these areas.
	Warning This symbol alerts users to areas where there is the possibility of personal injury.
	Hot Warning This symbol alerts users to areas where there are heated surfaces which should not be touched.
	Hot Warning - Burn Hazard This symbol alerts users to areas where there are heated surfaces which should not be touched.
	Laser Warning This symbol indicates a laser is being used and alerts the user to refer to the appropriate safety information.
	Pinch Hazard This warning symbol alerts users to areas where there is the possibility of personal injury.
	Do Not Touch
	Warning, Pinch Warning, and Do Not Touch <ul style="list-style-type: none"> This graphic alerts the user to areas where there is the possibility of personal injury and where it is hot. The user should not touch either the Stripper Fingers or the Fuser area.
	Warning, Hot Warning, and Do Not Touch <ul style="list-style-type: none"> This graphic alerts the user to the fuser area where it is hot. Do not touch these hot areas as personal injury may occur.

Symbol	Definition
	<p>Pinch Warning and Do Not Touch</p> <ul style="list-style-type: none"> • This graphic alerts the user to the Stripper Fingers area where there is the possibility of personal injury. • The user should not touch this area.
	<p>On This symbol indicates the main power switch is in the ON position.</p>
	<p>Off This symbol indicates the main power switch is in the OFF position.</p>
	<p>Standby This symbol indicates the secondary power switch is in the Standby position.</p>
	<p>Do Not Dispose in Normal Household Waste Stream</p> <ul style="list-style-type: none"> • Application of this symbol is confirmation that you should not dispose of items, such as Customer Replaceable Units (CRUs), in the normal household waste stream. You must dispose of these items in compliance with agreed national procedures. • This symbol often accompanies batteries and indicates that used electrical and electronic products and batteries should not be mixed with general household waste. • For more information about collection and recycling, please contact your local municipality, your waste disposal service, or the point of sale where you purchased the items.