

Note: You will not need this pamphlet if you do not have the Faxing Option with your machine. To purchase the Faxing Option please contact your local Xerox sales representative for details.

Please use this pamphlet to set up your Local Terminal Information if your machine is equipped with the Faxing Option.

Fig. 1-1

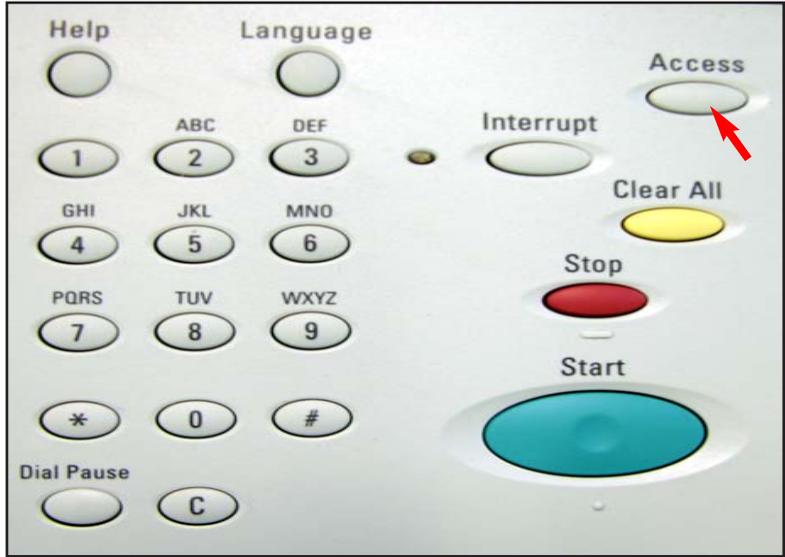


Fig. 1-4
Select **Access**.

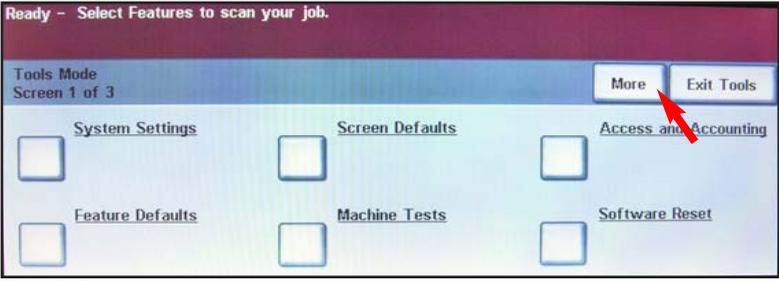


Fig. 1-6
Press **More**.

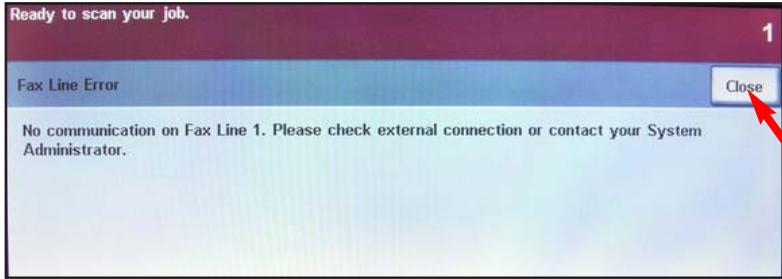


Fig. 1-2
The Fax Line Error screen will display during initial Power-Up when you do not have a fax line connected to the machine. Press **Close**. If the machine detects the fax line Fig. 1-3 will display on your screen.

Note: If the error is received, please make sure that the fax line is properly connected to the machine.

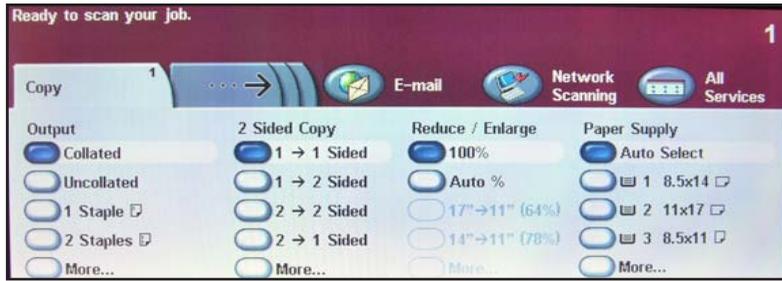


Fig. 1-3
Ready to fax.

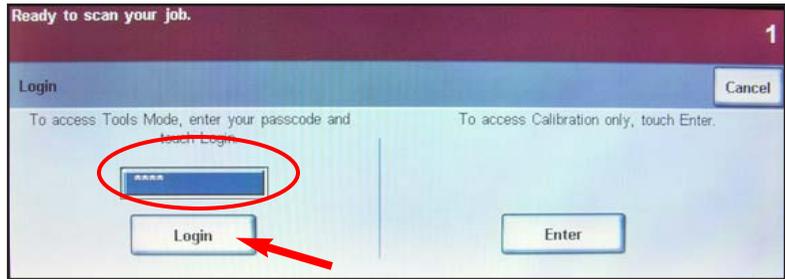


Fig. 1-5
Enter the password. Press **Login**. (See System Administrator CD for the default password)

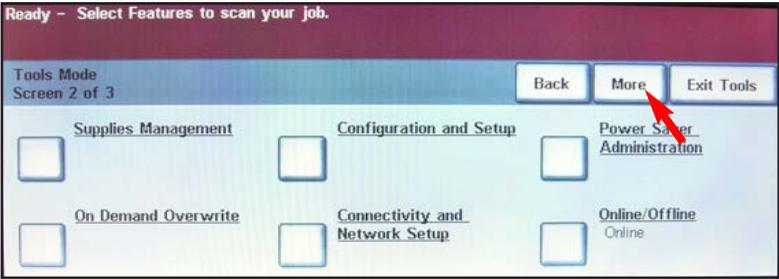


Fig. 1-7
Press **More**.

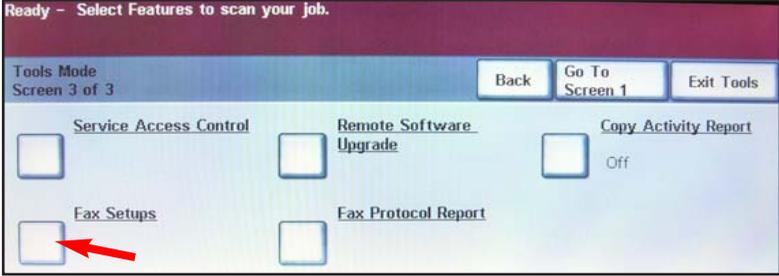


Fig. 1-8
Press **Fax Setups**.

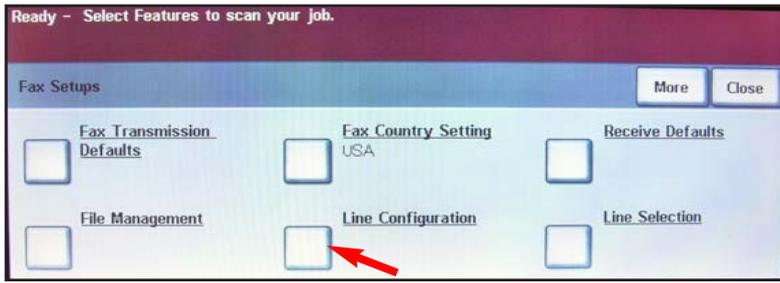


Fig. 1-9
Press **Line Configuration**.

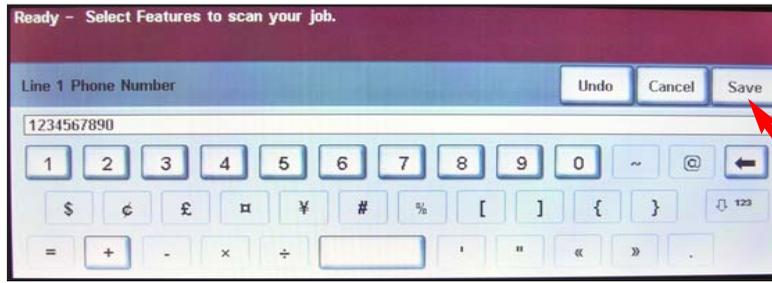


Fig. 1-12
Enter the fax number using the the keyboard on the screen and press **Save**.

Quick Start Guide

Entering Local Terminal Information Part 1 of 2

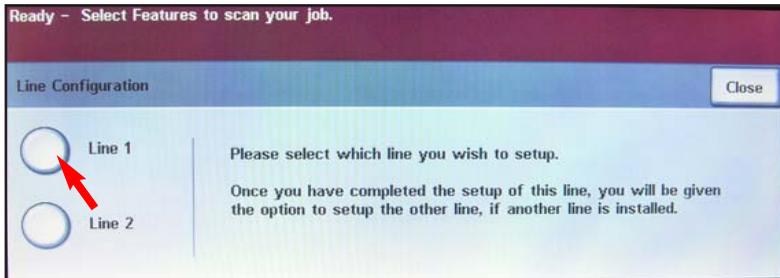


Fig. 1-10
Press **Line 1**.

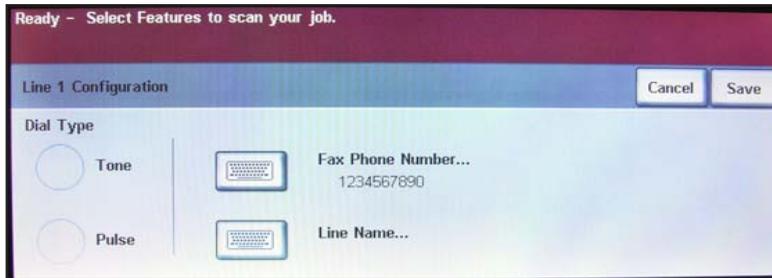


Fig. 1-13
Continue with Entering Local Terminal Information pamphlet Part 2 of 2.

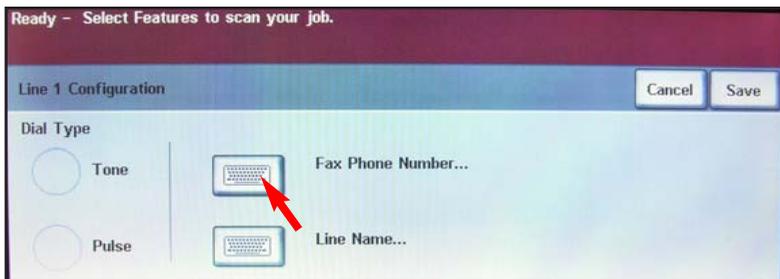


Fig. 1-11
Press **Fax Phone Number...**



WorkCentre Pro C2128/C2636/C3545

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device, including FAX machines, to send any message unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business or other entity, or other individual sending the message and the telephone number of the sending machine or such business, other entity, or individual. To enter the telephone number identifying the machine, the header text information (business name), the date and time please refer to "Entering Local Terminal Information" pamphlet.



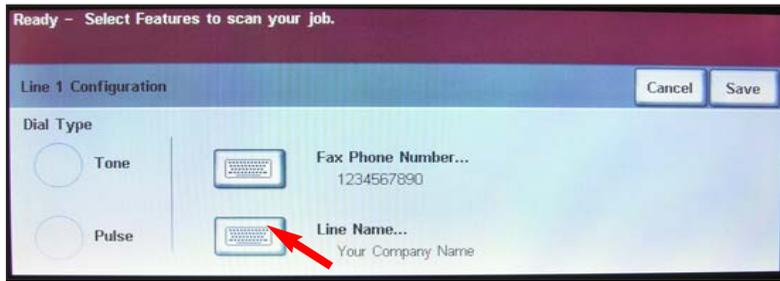


Fig. 2-1
Press **Line Name...**

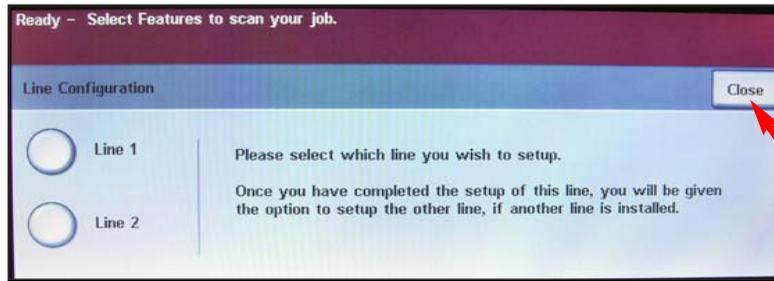


Fig. 2-4
Press **Close**.

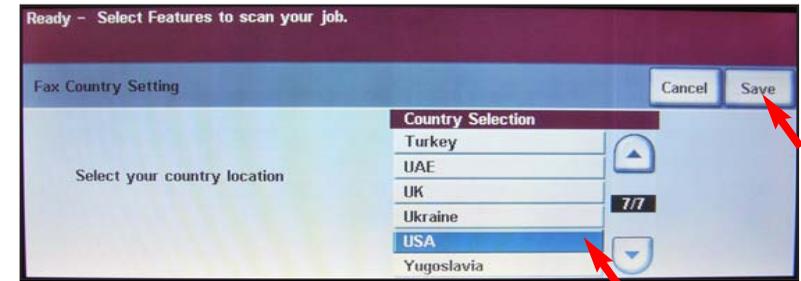


Fig. 2-7
Select desired country. Press **Save**.

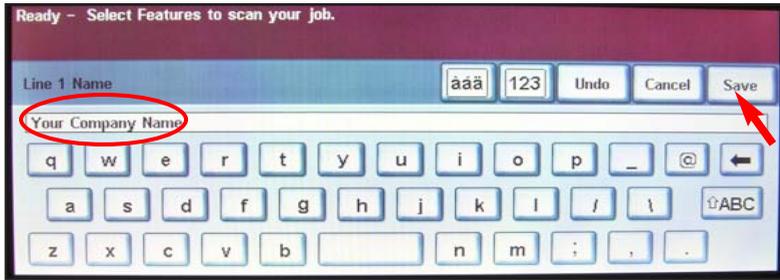


Fig. 2-2
Enter the name. Press **Save**.

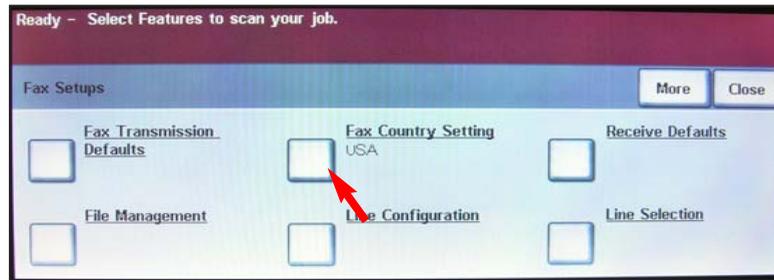


Fig. 2-5
Press **Fax Country Setting**.

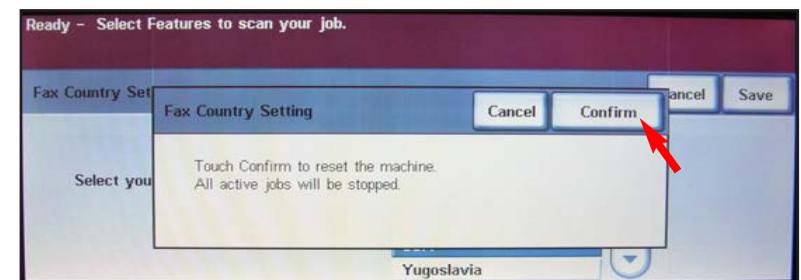


Fig. 2-8
Press **Confirm**.

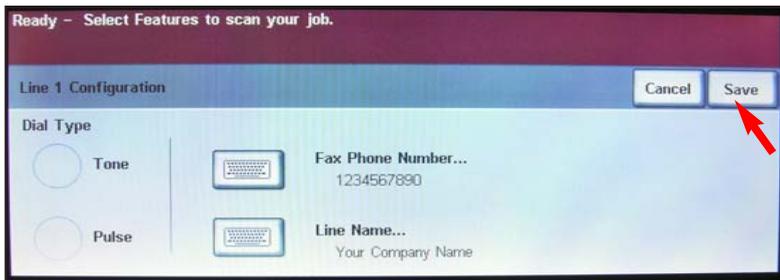


Fig. 2-3
Press **Save**.



Fig. 2-6
Scroll down till desired country is visible.

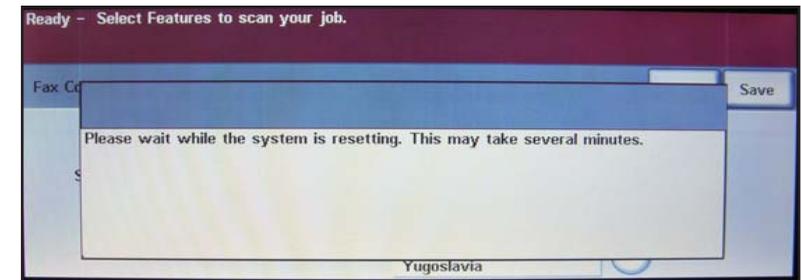


Fig. 2-9
Wait for the system to reset. After the machine resets, repeat steps in Fig. 1-4 and Fig. 1-5. On Fig. 1-6, press **System Settings**.

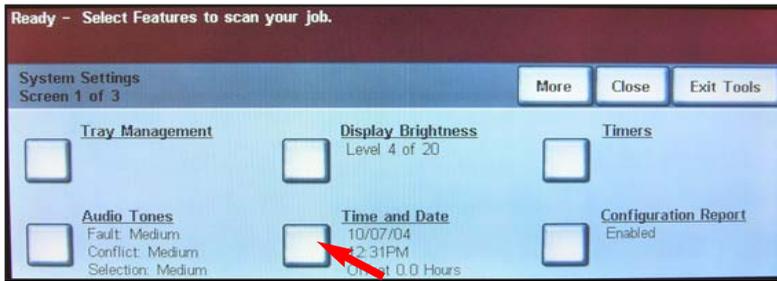


Fig. 2-10
Press **Time and Date**.

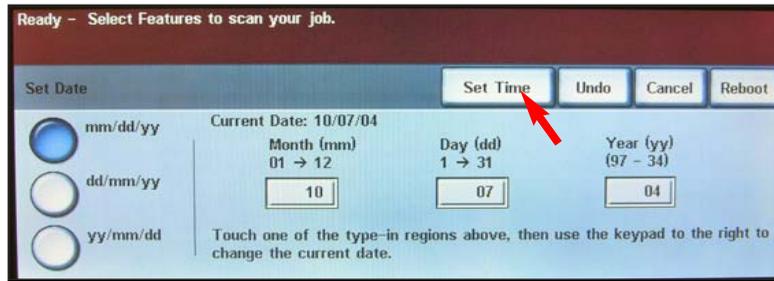


Fig. 2-13
Enter correct date and press **Set Time**.

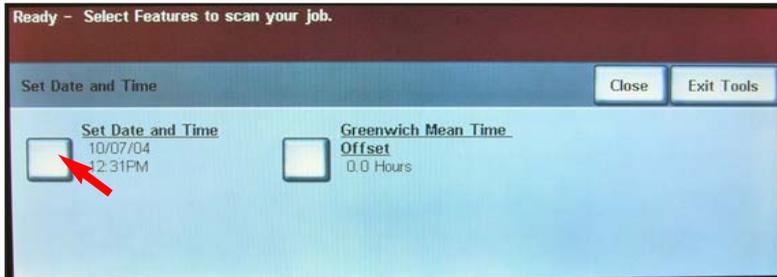


Fig. 2-11
Press **Set Date and Time**.

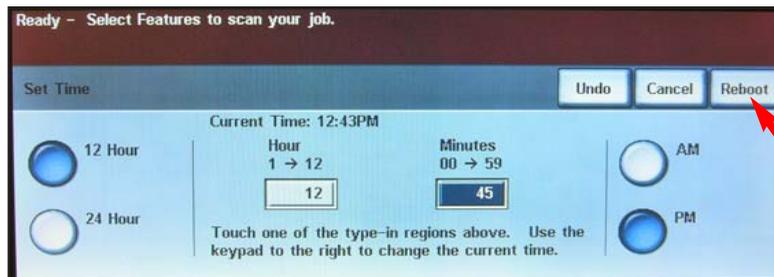


Fig. 2-14
Enter correct time and press **Reboot**. After machine resets, you are ready to fax.


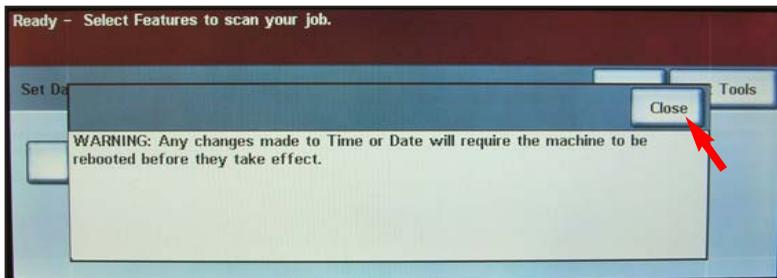


Fig. 2-12
Press **Close**.

Quick Start Guide

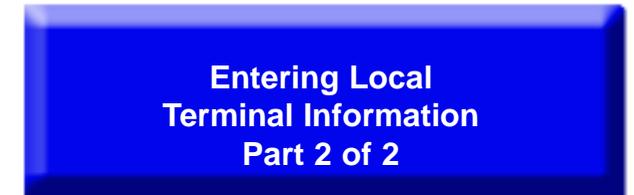

WorkCentre Pro C2128/C2636/C3545

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device, including FAX machines, to send any message unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business or other entity, or other individual sending the message and the telephone number of the sending machine or such business, other entity, or individual. To enter the telephone number identifying the machine, the header text information (business name), the date and time please refer to "Entering Local Terminal Information" pamphlet.

XEROX®

Entering Local Terminal Information - 4 of 4