Before Installation:

Record the following information for use during setup at the DC230LP:

AppleTalk Printer Name:_____

Note: The DC230LP will attach itself to the default zone of the local segment where it is connected.

This installation procedure assumes that you know how to navigate through the menu system on the DC230LP Control Panel. Refer to the quick reference card, *Using the Menu System,* (701P96834) for assistance.

1. Connect the DC230LP to your network outlet or cable.

2. Access the System Administration menus:

a) Press **[Online]** to take the printer off line. `Printer Off Line >` displays**.**

b) Press **[Menu]**. `Main Menu >` displays.

c) Press **[►]**, then press **[▲]** or [▼] until `System Administration >` displays.

d) Press **[►]**. `Enter Password >` displays.

e) Use the **[▲]** and **[►]** keys to enter **[2222]**.

Note: 2222 is the factory default password and may be changed to suit your needs. Refer to the *DC230LP System Administration Guide, Network Installation and Troubleshooting*.

f) Press **[Enter]**. `System Admin >` displays.

3. Access the AppleTalk menus:

a) Press **[►]**. `Port Setup >` displays.

b) Press **[▼]** until `Network Setup >` displays.

c) Press **[►]**. `TCP/IP >` displays.

d) Press [▼] until `AppleTalk >` displays.

4. Enable AppleTalk

a) Press **[►]**. `Enablement >` / `Disabled` displays.

b) Press **[►]**. `Enablement =` / `Disabled *` displays.

c) Press **[▼]**. `Enablement =` / `Enabled` displays.

d) Press **[Enter]**. `**SAVED**` is displayed momentarily, followed by `Enablement >` / `Enabled`.
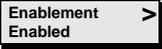
5. Enter the Printer Name:

a) Press **[▼]** until `Printer Name >` / `(current entry)` displays.

b) Press **[►]**. `Printer Name =` / `(current entry) *` displays.

c) Press **[►]** repeatedly until the cursor reaches the end of the entry. A tone sounds indicating when the last character has been reached.

d) Press **[◄]** repeatedly to delete the current entry.

e) Use the **[▲]** or **[▼]** key to enter the first character in the Printer Name.

f) Press **[►]** to move to the next character. Repeat this procedure to enter the entire Printer Name.

g) Press **[Enter]**. `**SAVED**` is displayed momentarily, followed by

> Printer Name   >
> *(your entry)*

.

6. Save all the settings:

a) Press **[Online]**.
> Reset Required
> Press ENTER key

displays.

b) Press **[Enter]**.
> Warming Up   >
> Please Wait . . .

displays. The DC230LP will reboot, save the settings entered, and print a Configuration Report in approximately 3 minutes.

7. Check the settings on the Configuration Report against those entered to be sure they are correct.

8. To install the DC230LP Macintosh® PPD:

a) Copy the DC230LP Macintosh PPD from the CentreWare® CD to the System Folder/Extensions/Printer Descriptions Folder.

b) Set up and configure the Print Driver via the Chooser.

9. Refer to the CentreWare manual, *Getting Started with Print and Fax Services,* for additional information.

Additional information on the AppleTalk setup can be found in the *DC230LP System Administration Guide, Network Installation and Troubleshooting*.