Firmware Installation Instructions

Overview

The purpose of this document is to define the procedures on installing device firmware via the device's Embedded Web Server and USB.

Supported Products:

Xerox® B410 Printers

Xerox® C410 Printers


Installation Instructions

Upgrade Instructions

Caution :

- EC3.5 upgrade depends on how (or if) the "Admin" account has been setup in the device.
- If the Admin account was setup in the device using the Install Wizard, then the device would have changed settings that will prevent upgrading the device directly to EC3.5 version. In this case, please install the Bridge version first and then upgrade to the EC3.5 230.xxx (or higher) version.

Note: If you try upgrading the device to EC3.5 directly without the Bridge version, you will get the below mentioned errors while upgrading through EWS webpage or through USB. Device will then restart and come up with the original version in the device.

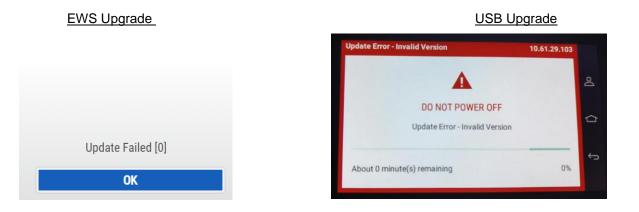


• If the Admin account is NOT setup in the device using Install Wizard, then the device can be directly upgraded to EC3.5 230.xxx version.

Note:

To install EC3.5, Import/ Export All Settings must be enabled.

- From EWS go to Settings → Security → Manage Permissions → Access Controls → Device Management
 -> "Import/ Export All Settings"

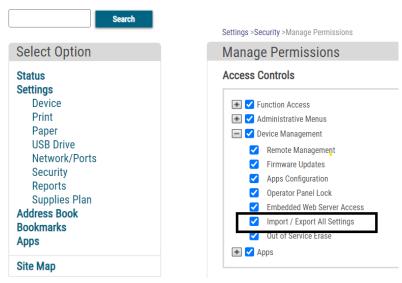

Downgrade Instructions:

• Devices at Firmware level XXXXX.230.XXX or higher cannot be downgraded. If you attempt to downgrade you will receive a "Cannot Downgrade Error" message.

Upgrade can be done using the below 2 methods.

Method 1:

Manual upgrade using Internet Services

This section provides instructions to upgrade machine software over the network via Embedded Web Server.

Upgrade Steps:

• From a Web browser, enter the Xerox® device's IP address to access the device's Embedded Web Server. When prompted, login as Admin.

• Go to Settings \rightarrow Device \rightarrow Software Update \rightarrow Upload a Software File.

Search	Settings > Device Export Configuration
Select Option	Device
Status Settings Device Print Paper Copy Fax E-mail FTP USB Drive Network/Ports Security Reports Shortouts	
	Remote Operator Panel
	∀ Visible Home Screen Icons
	Site Map
	Software Update

Press [Browse] to locate the software file.

Status			
Current Version	MXLSG.075.024		Check Now
Remote Services Polic	ies		
Allow device to receive	updates 🔽		
Daily Check Time	12:00 PM		
Installation Schedule	Daily 🗸		
Time	09:00 PM		
	Save	Reset	
Upload a Software File			
Browse for file		Browse	
	Upload		

- Press [Upload]
- Device prompts the below popup where "xxx" shows the current version in the device and "yyy" shows the new version for which device will upgrade

Update Firmware:	XXX →	ууу
This operation will:		
Update the printer firmware codeReboot the printer		
Do you still want to start this operation?		
Cancel		Start

• Press [Start]. Once the firmware upload is successful, below prompt displays.



Note: Software Installation will begin several minutes after the software file has been submitted to the machine. The installation progress can be monitored from the Local UI.

Method 2: Upgrade Using USB:

If your device is equipped with a front USB port the firmware can be updated through that port.

- Prepare the USB drive by formatting and wiping the drive
- Load the firmware onto the USB drive
- Insert the USB drive into the Front USB port of the device
- Once the USB is inserted, device displays with below options.



• On clicking the three dots, below options will be displayed.



• Click "Update Code" option. The file should begin transferring to the target device.





Note: Please do not power off the device until the firmware update is complete. This process could take several minutes to complete. Once the firmware update is completed, device comes up with new firmware.