



Fig. 1
Select **Access**.



Fig. 4
Select **Auditron Administration**.

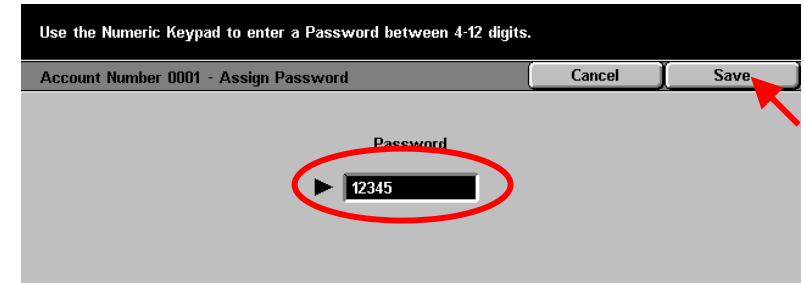


Fig. 7
Use the Numeric Keypad to enter the password. (ie. 12345) Then press **Save**.



Fig. 2
Enter the System Administrator Password from the Numeric Keypad and then press **Confirm**. (See Machine Administration User Guide for default password)

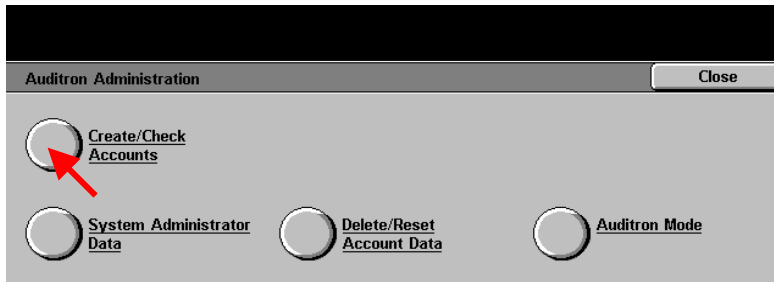


Fig. 5
Select **Create/Check Accounts**.

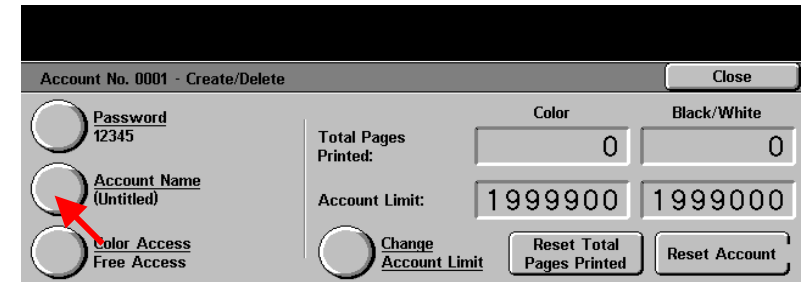


Fig. 8
Press **Account Name**.

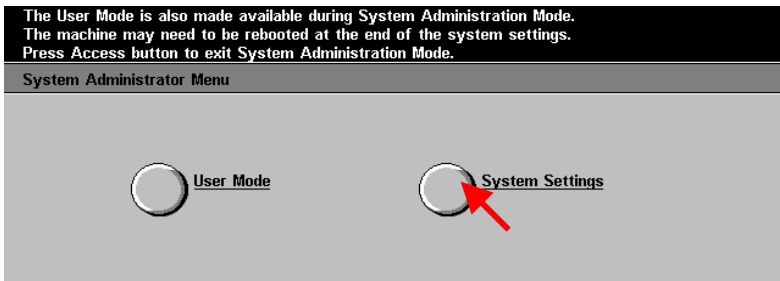


Fig. 3
Select **System Settings**.

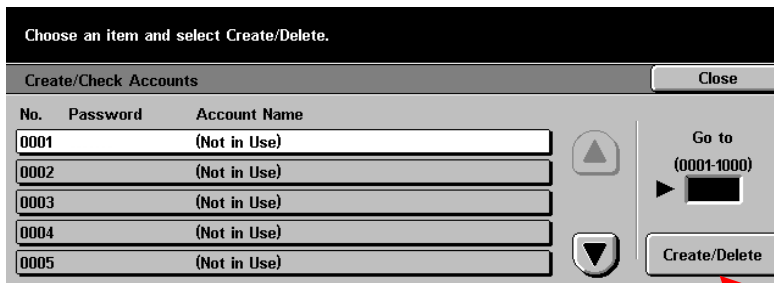


Fig. 6
Select the Auditron Account to be setup. Press **Create/Delete**.

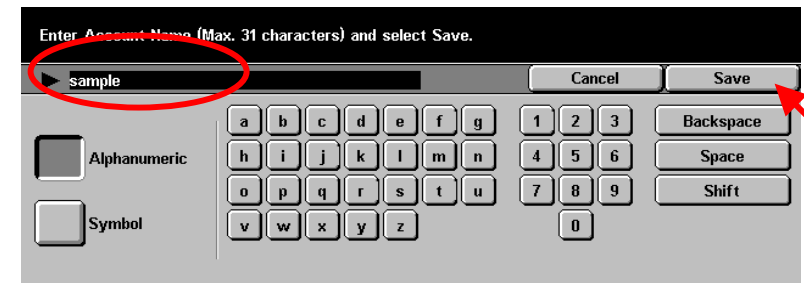


Fig. 9
Enter Account Name and press **Save**.

Continue with Auditron Setting for Copy Part 2 of 2.

Quick Start Guide

Auditron Setting for Copy
Part 1 of 2



DocuColor 2240/1632

THE DOCUMENT COMPANY
XEROX

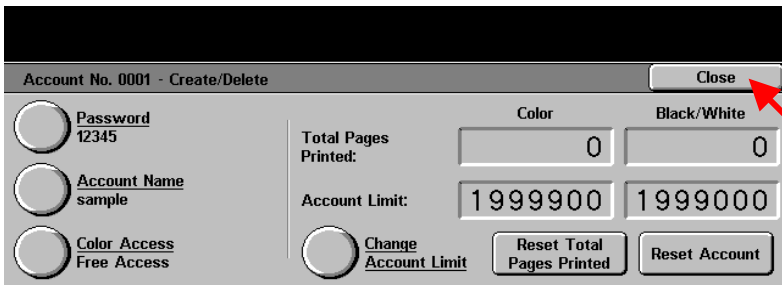


Fig. 10
Press **Close**.
Note: Password, Color Access, Change Account Limit may be set at this time.

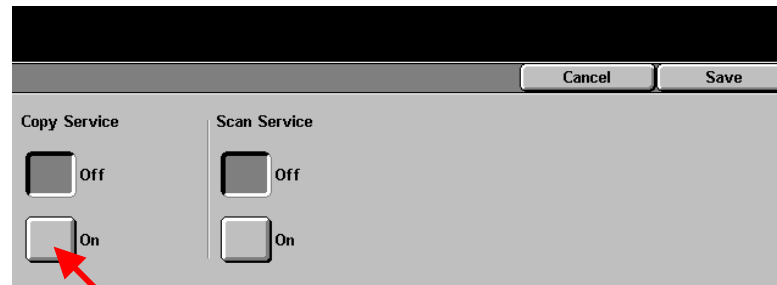


Fig. 13
Select **On** for Copy Service.



Fig. 16
Press **Exit**.

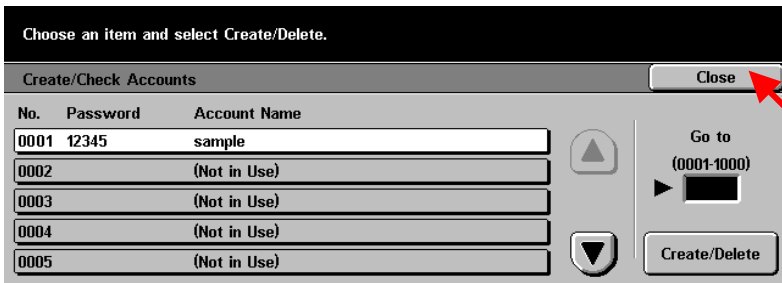


Fig. 11
Press **Close**.

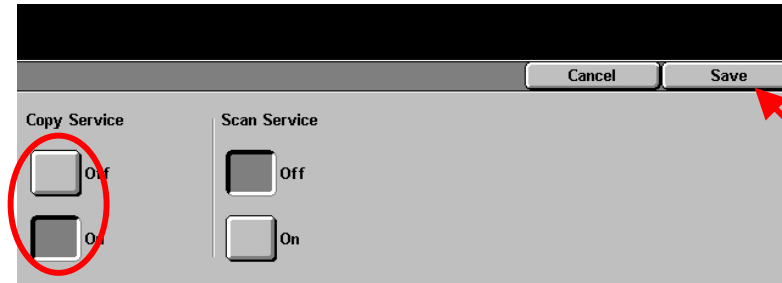


Fig. 14
Press **Save**.

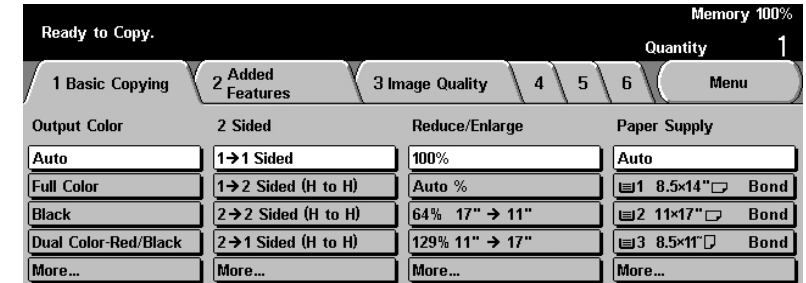


Fig. 17
Changes have been completed and you are ready to use the Copy Auditron.

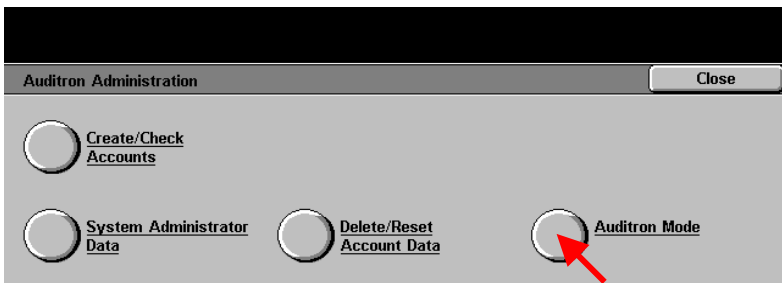


Fig. 12
Select **Auditron Mode**.

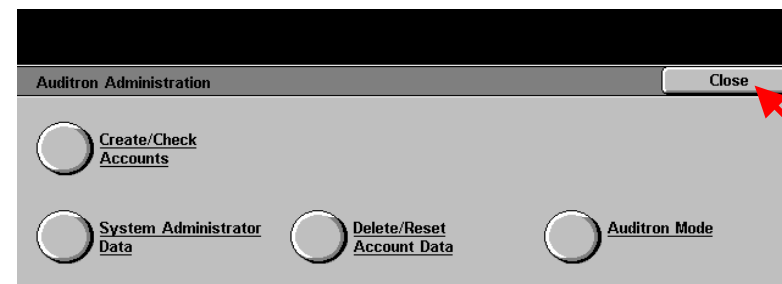


Fig. 15
Press **Close**.

Note:

When the Copy Auditron is enabled only users that input a valid user account name and password will be able to copy.

Quick Start Guide

Auditron Setting for Copy
Part 2 of 2



DocuColor 2240/1632

THE DOCUMENT COMPANY

XEROX