



# **DocuColor 2045/2060 Operator Manual**



©1999, 2000, 2001 Xerox Corporation. All rights reserved.

Copyright protection claimed includes all forms and matters of copyrightable material and information now allowed by statutory or judicial law or hereinafter granted, including without limitation, material generated from the software programs that are displayed on the screen such as styles, templates, icons, screen displays, looks, etc.

Xerox<sup>®</sup>, The Document Company<sup>®</sup>, the digital X<sup>®</sup>, and all Xerox product names and product numbers mentioned in this publication are registered trademarks of Xerox Corporation. Xerox Canada is a licensee of all the trademarks. Other company brands and product names may be trademarks or registered trademarks of their respective companies and are also acknowledged.

Changes are periodically made to this document. Technical updates will be included in subsequent editions.

Printed in the United States of America.

# Table of Contents

## Safety Notes xv

Electrical Safety . . . . .	xv
Disconnect Device. . . . .	xvi
Laser Safety . . . . .	xvii
Maintenance Safety . . . . .	xviii
Operational Safety . . . . .	xix
Ozone Safety . . . . .	xx

## Notices xxi

Radio Frequency Emissions . . . . .	xxi
FCC in the USA . . . . .	xxi
In Canada . . . . .	xxi
Safety Extra Low Voltage Approval . . . . .	xxii
Certifications in Europe . . . . .	xxii
It's Illegal in the USA . . . . .	xxiii
It's Illegal in Canada. . . . .	xxv
Environmental Notices for the USA . . . . .	xxvi
Environmental Notices for Canada . . . . .	xxvi

## Conventions xxvii

Symbols . . . . .	xxvii
Writing Style Conventions . . . . .	xxviii

<b>About Color Printing</b>	<b>1-1</b>
Overview . . . . .	1-1
Image Quality . . . . .	1-2
Quality Starts with the Original . . . . .	1-2
How Input Determines Output . . . . .	1-3
Image Key . . . . .	1-4
Grain/Image Size . . . . .	1-5
Getting the Color You Expect . . . . .	1-5
Color Gamut . . . . .	1-7
Color Models . . . . .	1-8
Adding and Replacing Gray to Improve Color . . . . .	1-9
Color Management . . . . .	1-10
Halftone Dots and Screen Angles . . . . .	1-10
Halftone Screens . . . . .	1-10
Halftone Dots . . . . .	1-11
Halftone Dot Shapes . . . . .	1-11
Solid Background Printing . . . . .	1-11
Electronic Digital File . . . . .	1-12
Calibration . . . . .	1-12
Digital Image Manipulation . . . . .	1-13
Sizing . . . . .	1-13
Sharpening . . . . .	1-13
Color Cast . . . . .	1-13
Important Additional Tips . . . . .	1-13
Output Considerations . . . . .	1-14
Mottle . . . . .	1-14
Registration . . . . .	1-14
Trapping . . . . .	1-15
Halo . . . . .	1-15
Opacity . . . . .	1-15
Anti-aliasing . . . . .	1-16
Knockout . . . . .	1-16
Overprint . . . . .	1-16
Duplex Settings . . . . .	1-17
File Formats . . . . .	1-17
Resolution . . . . .	1-17



Raster Image Processors .....	1-18
Finishing .....	1-19
Folding Techniques .....	1-19
Parallel Fold .....	1-19
Right Angle Fold .....	1-19
Accordion Fold .....	1-19
Gate Fold .....	1-19
Binding Preparation .....	1-20
Nested Signature and Binders Creep .....	1-20
Gathered Signature .....	1-20
Bottling .....	1-20
Binding Methods .....	1-21
Saddle Stitching .....	1-21
Perfect Binding .....	1-21
Mechanical Binding .....	1-21
Looseleaf Binding .....	1-21
Final Finishing Touches .....	1-22
Die Cutting .....	1-22
Lamination .....	1-22
Varnish .....	1-22
Embossing .....	1-22

## Overview 2-1

Identifying the External Parts .....	2-2
Ecology Module .....	2-5
Electrical Module .....	2-6
Dry Ink/Toner Waste Bottle .....	2-7
Ground Fault Indicator (GFI) Circuit Breaker .....	2-8
Touch Screen .....	2-9
Message Area .....	2-9
Tabs/Buttons/Icons .....	2-9
Touch Screen Button Types and Functions .....	2-11

Control Panel . . . . .	2-13
Features . . . . .	2-18
Job Status . . . . .	2-19
Power Saver . . . . .	2-21
Language . . . . .	2-21
Access . . . . .	2-21
Machine Status . . . . .	2-22
Meters . . . . .	2-23
Review . . . . .	2-26
Help . . . . .	2-29
Clear All . . . . .	2-29
Interrupt . . . . .	2-29
Pause . . . . .	2-29
Job Monitor . . . . .	2-30
Audio Tones . . . . .	2-31
Alert Screens . . . . .	2-32
Maintenance . . . . .	2-33
Duplex Automatic Document Feeder (DADF) . . . . .	2-34
Document Glass . . . . .	2-35
Identifying the Internal Parts . . . . .	2-36
Dry Ink/Toner Cartridges . . . . .	2-36
Serial Number Label . . . . .	2-36
Upper Door . . . . .	2-37
Transport Module . . . . .	2-38
Paper Path in the Digital Press . . . . .	2-39
Exit Module . . . . .	2-40
Relocating the DocuColor 2060/2045 . . . . .	2-41

## **Paper and Paper Trays** **3-1**

Recommended Papers and Special Materials . . . . .	3-1
Paper Handling . . . . .	3-1
Paper Trays 1, 2, and 3 . . . . .	3-3
Paper Guidelines . . . . .	3-5
Paper Tray Special Features . . . . .	3-7
Tray Capacity . . . . .	3-8
Curl . . . . .	3-8
Duplexing . . . . .	3-8
Transparency Guidelines . . . . .	3-9
Tabbed Inserts . . . . .	3-9
Drilled Paper . . . . .	3-10
Simplex Print Jobs . . . . .	3-10
Duplex Print Jobs . . . . .	3-10
Letterhead . . . . .	3-11
Non-standard Size Paper . . . . .	3-11
Oversize Paper . . . . .	3-11
Auto Tray Switching . . . . .	3-12
Auto Paper . . . . .	3-12
Loading Paper . . . . .	3-13
Paper Weight Conversion Tables . . . . .	3-17
Specific Weight Conversion . . . . .	3-17
Weight Conversion Ranges . . . . .	3-18

## **Scanner** **4-1**

Scanning . . . . .	4-1
Basic Scanning Steps . . . . .	4-2
Duplex Automatic Document Feeder (DADF) . . . . .	4-4
Document Specifications . . . . .	4-4
Identifying Duplex Automatic Document Feeder (DADF) Parts . . . . .	4-5
Using the Duplex Automatic Document Feeder (DADF) . . . . .	4-6
Clearing a DADF Jam . . . . .	4-7
Auto Image Rotation . . . . .	4-8
White Border Edges on Copies . . . . .	4-8
Touch Screen . . . . .	4-9
Message Area . . . . .	4-9
Tabs/Buttons/Icons . . . . .	4-10
Touch Screen Button Types and Functions . . . . .	4-11

Features (Digital Press with Scanner Only) . . . . .	4-13
Basic Features . . . . .	4-13
Color Mode . . . . .	4-14
Auto . . . . .	4-14
Full Color . . . . .	4-15
3 Pass Color . . . . .	4-15
Black Only . . . . .	4-15
Single Color . . . . .	4-16
Output . . . . .	4-18
Collated . . . . .	4-18
Uncollated . . . . .	4-18
More... . . . .	4-18
Reduce/Enlarge . . . . .	4-19
100% . . . . .	4-20
Auto% . . . . .	4-20
Third Button . . . . .	4-20
Fourth Button . . . . .	4-20
More... . . . .	4-21
Common Percentage Conversions . . . . .	4-26
Paper Supply . . . . .	4-27
Auto Paper . . . . .	4-27
Added Features . . . . .	4-28
2 Sided Output . . . . .	4-28
1-1 . . . . .	4-29
1-2 . . . . .	4-29
2-1 . . . . .	4-30
2-2 . . . . .	4-31
Image Shift . . . . .	4-32
No Shift . . . . .	4-32
Auto Center . . . . .	4-33
Margin Shift . . . . .	4-34
Unrestricted Shift . . . . .	4-35
Corner Shift . . . . .	4-36
Original Input . . . . .	4-37
Auto . . . . .	4-37
Manual Input . . . . .	4-38
Mixed Size Originals . . . . .	4-39
Bound Originals . . . . .	4-40

Edge Erase . . . . .	4-43
Edge Erase for Drilled Paper . . . . .	4-44
Border Erase . . . . .	4-45
Edge/Center Erase . . . . .	4-46
Stored Programming . . . . .	4-48
Store Programming. . . . .	4-48
Recall Programming . . . . .	4-49
Delete Programming. . . . .	4-50
Image Quality . . . . .	4-51
Original Type . . . . .	4-52
Auto Photo & Text . . . . .	4-53
Text. . . . .	4-54
Photo. . . . .	4-55
Map . . . . .	4-56
Dark Edges . . . . .	4-57
Define Area . . . . .	4-59
Lighten/Darken . . . . .	4-63
Sharpness . . . . .	4-64
Image Tone Presets . . . . .	4-65
Normal . . . . .	4-65
Lively. . . . .	4-66
Sharp . . . . .	4-66
Warm . . . . .	4-67
Cool. . . . .	4-67
Background Erase. . . . .	4-68
Color Balance. . . . .	4-69
Color Shift . . . . .	4-70
Chroma. . . . .	4-71
Color Bar . . . . .	4-72
More.... . . . .	4-73

Output Format . . . . .	4-73
Covers . . . . .	4-74
Inserts . . . . .	4-78
N-Up . . . . .	4-80
Transparency Options . . . . .	4-82
Booklet Creation . . . . .	4-85
Mirror Image . . . . .	4-89
Negative Image . . . . .	4-90
Repeat Image . . . . .	4-91
Poster . . . . .	4-93
Job Assembly . . . . .	4-96
Build Job . . . . .	4-97
Proof Set . . . . .	4-100
Back . . . . .	4-101

---

**Accessories****5-1**

Tray 4 . . . . .	5-1
Identifying Tray 4 Parts . . . . .	5-1
Control Panel . . . . .	5-3
Paper Stock Specifications . . . . .	5-5
Tray 4 Special Features . . . . .	5-7
Loading Special Stock in Tray 4 . . . . .	5-7
Tabbed Inserts . . . . .	5-7
Non-standard Size Paper . . . . .	5-8
Letterhead . . . . .	5-8
Coated Paper . . . . .	5-8
Loading Paper in Tray 4 . . . . .	5-9
Selecting Tray 4 . . . . .	5-12
Jam Clearance . . . . .	5-13
Digital Press Paper Reliability . . . . .	5-14
Tray 4 Maintenance . . . . .	5-14
Cleaning Tray 4 . . . . .	5-14
Problem Solving . . . . .	5-15
Loss of Power . . . . .	5-18
Tray 4 Specifications . . . . .	5-19
Electrical Requirements . . . . .	5-19
Power Consumption . . . . .	5-19
Heat Output . . . . .	5-19

Environmental Requirements .....	5-20
Atmosphere Requirements .....	5-20
Noise Levels .....	5-20
Ozone Emissions .....	5-20
Dust .....	5-20
Capabilities .....	5-21
Tray Capacity .....	5-21
Throughput .....	5-21
Physical Characteristics .....	5-21
Tray 4 Size .....	5-21
Tray 4 Weight .....	5-21
Floor Space Requirements .....	5-21
High Capacity Stacker (HCS) .....	5-22
Identifying High Capacity Stacker Parts .....	5-22
Control Panel .....	5-23
Paper Stock Specifications .....	5-25
Selecting High Capacity Stacker Features .....	5-27
Stacker Mode .....	5-29
Offset Mode .....	5-29
Top Tray Mode .....	5-29
Unloading the High Capacity Stacker .....	5-30
Jam Clearance .....	5-32
High Capacity Stacker Maintenance .....	5-33
Cleaning the High Capacity Stacker .....	5-33
Problem Solving .....	5-34
Loss of Power .....	5-35
High Capacity Stacker Stapler (HCSS) .....	5-36
Identifying High Capacity Stacker Stapler Parts .....	5-36
Control Panel .....	5-37
Electrical/Environmental Requirements .....	5-38
Paper Stock Specifications .....	5-38
Paper Path .....	5-40

Using the High Capacity Stacker Stapler . . . . .	5-41
Hints and Tips . . . . .	5-41
Stapling Hints . . . . .	5-41
Feeding 3 Hole Drilled Paper . . . . .	5-44
Stapling from the Fiery EX2000 . . . . .	5-45
Paper Specifications for Stapling . . . . .	5-46
Stapling Capacity for Different Paper Types and Weights . . . . .	5-47
Unloading the High Capacity Stacker Stapler . . . . .	5-47
Jam Clearance . . . . .	5-48
Ordering and Loading Staples . . . . .	5-49
High Capacity Stacker Stapler Maintenance . . . . .	5-50
Cleaning the High Capacity Stacker Stapler . . . . .	5-50
Problem Solving . . . . .	5-51
Loss of Power . . . . .	5-53

---

## **Problem Solving** **6-1**

General Problems . . . . .	6-1
Jam Clearance . . . . .	6-14
DADF Jam Clearance . . . . .	6-15
Left Side Door Jam . . . . .	6-17
Trays 1, 2 and 3 Jams . . . . .	6-18
Upper Door Jam . . . . .	6-20
Transport Module Jam . . . . .	6-21
Exit Module Jams . . . . .	6-23
Right/Left Door Paper Path Jams . . . . .	6-25
Registration, Vacuum Transport and Fuser . . . . .	6-25
Horizontal Transport (2-Sided Printing Only) . . . . .	6-28
Fault Codes . . . . .	6-29

---

## **Technical Data** **7-1**

Raster Image Processor (RIP) . . . . .	7-1
Digital Press Specifications . . . . .	7-1
Electrical Power Requirements (200/240 - 50/60 Hz) . . . . .	7-1
Specifications . . . . .	7-1
Power Consumption . . . . .	7-1
Heat Output . . . . .	7-2
Air Exchange Rate . . . . .	7-2
Energy Star/Sleep Mode . . . . .	7-2



Environmental Requirements . . . . .	7-2
Altitude . . . . .	7-2
Noise Levels . . . . .	7-3
Ozone Emissions . . . . .	7-3
Dust . . . . .	7-3
Capabilities . . . . .	7-3
Tray Capacity . . . . .	7-3
Throughput . . . . .	7-3
Warm-up Time . . . . .	7-3
First Print Out Time . . . . .	7-3
Print Rates . . . . .	7-4
Physical Characteristics . . . . .	7-5
Digital Press Size . . . . .	7-5
Digital Press Weight . . . . .	7-5
Floor Space Requirements . . . . .	7-5
Duplex Automatic Document Feeder (DADF) Specifications . . . . .	7-5
Document Feeding Method . . . . .	7-5
Sizes . . . . .	7-5
DADF Capacity . . . . .	7-5
Speed . . . . .	7-6
Power Source . . . . .	7-6
Noise . . . . .	7-6
Dimensions . . . . .	7-6
Weight . . . . .	7-6
Floor Space Requirements . . . . .	7-6
Metric Conversion Chart . . . . .	7-7

## **Maintenance 8-1**

Cleaning the Touch Screen . . . . .	8-1
Cleaning the Document Glass . . . . .	8-2
Cleaning the Document Glass Cover . . . . .	8-3
Replacing Consumable Supplies . . . . .	8-3
Replacing a Dry Ink/Toner Cartridge . . . . .	8-4
Adding Fuser Oil . . . . .	8-8
Changing the Waste Dry Ink/Toner Bottle . . . . .	8-10
Calling for Service . . . . .	8-12
Consumable Supplies . . . . .	8-13

## **Index 9-1**

This page is intentionally left blank.

# Safety Notes

---

This Xerox digital press and the recommended supplies have been designed and tested to meet strict safety requirements. Attention to the following notes will ensure the continued safe operation of your digital press.

## Electrical Safety

---

- Use only the power cord supplied with this equipment.
- Plug the power cord directly into a correctly grounded electrical outlet. Do not use an extension cord. If you do not know whether or not an outlet is grounded, consult a qualified electrician.
- Do not use a ground adapter plug to connect this equipment to an electrical outlet that lacks a ground connection terminal.



**WARNING:** *You may get a severe electrical shock if the outlet is not correctly grounded.*

- Do not place the press where people may step on or trip on the power cord. Do not place objects on the power cord.
- Do not override or disable electrical or mechanical interlocks.
- Do not obstruct the ventilation openings. These openings are provided to prevent overheating of the machine.



**WARNING:** *Never push objects of any kind into slots or openings on this equipment. Making a contact with a voltage point or shorting out a part could result in fire or electrical shock.*

- If any of the following conditions occur, immediately switch off the power to the machine and disconnect the power cord from the electrical outlet. Call an authorized Xerox service representative to correct the problem.
  - The machine emits unusual noises or odors.
  - The power cord is damaged or frayed.
  - A wall panel circuit breaker, fuse, or other safety device has been tripped.
  - Liquid is spilled into the press.
  - The machine is exposed to water.
  - Any part of the machine is damaged.

## **Disconnect Device**

---

The power cable is the disconnect device for this equipment. It is attached to the back of the machine as a plug-in device. To remove all electrical power from the machine, disconnect the power cable from the electrical outlet.

## Laser Safety

---



Use of controls, adjustments, or procedures other than those specified in this documentation may result in a hazardous exposure to laser radiation.

This equipment complies with international safety standards.

With specific regard to laser safety, the equipment complies with performance standards for laser products set by government, national, and international agencies as a Class 1 laser product. It does not emit hazardous light, as the beam is totally enclosed during all phases of customer operation and maintenance.

## **Maintenance Safety**

---

- Do not attempt any maintenance procedure that is not specifically described in the documentation that is supplied with your press.
- Do not use aerosol cleaners. The use of supplies that are not approved may cause poor performance of the press, and could create a dangerous condition.
- Use the supplies and cleaning materials only as directed in this manual. Keep all of these materials out of the reach of children.
- Do not remove the covers or guards that are fastened with screws. There are no parts behind these covers that you can maintain or service.

Do not perform any maintenance procedures unless you have been trained to do them by a Xerox representative, or unless a procedure is specifically described in one of the manuals included with your press.

## Operational Safety

---

Your Xerox equipment and supplies were designed and tested to meet strict safety requirements. These include safety agency examination, approval, and compliance with established environmental standards.

Your attention to the following safety guidelines will help ensure the continued safe operation of your digital press:

- Use the materials and supplies specifically designed for your digital press. The use of unsuitable materials may result in poor performance of the machine and possibly a hazardous situation.
- Follow all warnings and instructions that are marked on or supplied with the machine.
- Place the machine in a room that provides adequate space for ventilation and servicing.
- Place the machine on a level, solid surface (not on a thick pile carpet) that has adequate strength to support the weight of the machine.
- Do not attempt to move the machine. A leveling device that was lowered when your machine was installed may damage the carpet or floor.
- Do not set up the machine near a heat source.
- Do not set up the machine in direct sunlight.
- Do not set up the machine in line with the cold air flow from an air conditioning system.
- Do not place containers of coffee or other liquid on the machine.
- Do not block or cover the slots and openings on the machine. Without adequate ventilation, the machine may overheat.
- Do not attempt to override any electrical or mechanical interlock devices.



**WARNING:** *Be careful when working in areas identified with this warning symbol. These areas may be very hot and could cause personal injury.*

If you need any additional safety information concerning the machine or materials, contact your Xerox representative.

## **Ozone Safety**

---

This product produces ozone during normal operation. The ozone is heavier than air, and the quantity is dependent on print volume. Providing the correct environmental parameters, as specified in the Xerox installation procedures, ensures that concentration levels meet safe limits.

If you need additional information about ozone, request the Xerox publication, *OZONE*, 600P83222, by calling 1-800-828-6571 in the USA. For a French language version, call 1-800-828-6571 in the USA, then press 2.



# Notices

---

## Radio Frequency Emissions

---

### FCC in the USA

---

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the Federal Communications Commission Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Changes or modifications to this equipment not specifically approved by the Xerox Corporation may void the user's authority to operate this equipment.

Shielded cables must be used with this equipment to maintain compliance with FCC regulations.

### In Canada

---

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus as defined in the Radio interference regulations of Industry Canada.

## Safety Extra Low Voltage Approval

---

This Xerox digital press is in compliance with various governmental agencies and national safety regulations. All system ports meet the Safety Extra Low Voltage (SELV) circuits for connection to customer-owned devices and networks.

Additions of customer-owned or third-party accessories that are attached to the press must meet or exceed the requirements previously listed. All modules that require external connection must be installed per the installation procedure.

## Certifications in Europe

---



The CE marking that is applied to this product symbolizes Xerox Europe's Declaration of Conformity with the following applicable Directives of the European Union as of the dates indicated:

January 1, 1995: - Council Directive 73/23/EEC amended by Council Directive 93/68/EEC, approximation of the laws of the member states related to low voltage equipment.

January 1, 1996: - Council Directive 89/336/EEC, approximation of the laws of the member states related to electromagnetic compatibility.

Changes or modifications to this equipment not specifically approved by Xerox Europe may void the user's authority to operate the equipment.

Shielded cables must be used with this equipment to maintain compliance with the EMC Directive 89/336/EEC.

This equipment is not primarily intended for use in a domestic environment.

A full declaration defining the relevant Directives and referenced standards can be obtained from your Xerox Europe representative.



**WARNING:** *In order to allow this equipment to operate in proximity to Industrial, Scientific and Medical (ISM) equipment, the external radiation from ISM equipment may have to be limited or special mitigation measures taken.*



**WARNING:** *This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.*

---

## It's Illegal in the USA

---

Congress, by statute, has forbidden the reproduction of the following subjects under certain circumstances. Penalties of fine or imprisonment may be imposed on those guilty of making such reproductions.

1. Obligations or Securities of the United States Government, such as:

Certificates of Indebtedness	National Bank Currency
Coupons from Bonds	Federal Reserve Bank Notes
Silver Certificates	Gold Certificates
United States Bonds	Treasury Notes
Federal Reserve Notes	Fractional Notes
Certificates of Deposit	Paper Money

Bonds and Obligations of certain agencies of the government, such as FHA, etc.

Bonds. (U.S. Savings Bonds may be photographed only for publicity purposes in connection with the campaign for the sale of such bonds.)

Internal Revenue Stamps. (If it is necessary to reproduce a legal document on which there is a canceled revenue stamp, this may be done provided the reproduction of the document is performed for lawful purposes.)

Postage Stamps, canceled or uncanceled. (For philatelic purposes, Postage Stamps may be photographed, provided the reproduction is in black and white and is less than 75% or more than 150% of the linear dimensions of the original.)

Postal Money Orders.

Bills, Checks, or Drafts of money drawn by or upon authorized officers of the United States.

Stamps and other representatives of value, of whatever denomination, which have been or may be issued under any Act of Congress.

2. Adjusted Compensation Certificates for Veterans of the World Wars.
  3. Obligations or Securities of any Foreign Government, Bank, or Corporation.
  4. Copyrighted material, unless permission of the copyright owner has been obtained or the reproduction falls within the "fair use" or library reproduction rights provisions of the copyright law. Further information of these provisions may be obtained from the Copyright Office, Library of Congress, Washington, D.C. 20559. Ask for Circular R21.
  5. Certificates of Citizenship or Naturalization. (Foreign Naturalization Certificates may be photographed.)
  6. Passports. (Foreign Passports may be photographed.)
  7. Immigration Papers.
  8. Draft Registration Cards.
  9. Selective Service Induction Papers that bear any of the following Registrant's information:

Earnings or Income	Dependency Status
Court Record	Previous military service
Physical or mental condition	

Exception: United States military discharge certificates may be photographed.
  10. Badges, Identification Cards, Passes, or Insignia carried by military personnel, or by members of the various Federal Departments, such as FBI, Treasury, etc. (unless photograph is ordered by the head of such department or bureau.)

Reproducing the following is also prohibited in certain states:  
Automobile Licenses - Drivers' Licenses - Automobile Certificates of Title.
- The above list is not all inclusive, and no liability is assumed for its completeness or accuracy. In case of doubt, consult your attorney.

---

## It's Illegal in Canada

---

Parliament, by statute, has forbidden the reproduction of the following subjects under certain circumstances. Penalties of fines or imprisonment may be imposed on those guilty of making such copies.

1. Current bank notes or current paper money.
2. Obligations or securities of a government or bank.
3. Exchequer bill paper or revenue paper.
4. The public seal of Canada or of a province, or the seal of a public body or authority in Canada, or of a court of law.
5. Proclamations, orders, regulations or appointments, or notices thereof (with intent to falsely cause same to purport to have been printed by the Queen's Printer for Canada, or the equivalent printer for a province).
6. Marks, brands, seals, wrappers or designs used by or on behalf of the Government of Canada or of a province, the government of a state other than Canada or a department, board, Commission or agency established by the Government of Canada or of a province or of a government of a state other than Canada.
7. Impressed or adhesive stamps used for the purpose of revenue by the Government of Canada or of a province or by the government of a state other than Canada.
8. Documents, registers or records kept by public officials charged with the duty of making or issuing certified copies thereof, where the reproduction falsely purports to be a certified copy thereof.
9. Copyrighted material or trademarks of any manner or kind without the consent of the copyright or trademark owner.

The above list is provided for your convenience and assistance, but it is not all inclusive, and no liability is assumed for its completeness or accuracy. In case of doubt, consult your solicitor.

## Environmental Notices for the USA

---



As an ENERGY STAR® partner, Xerox Corporation has determined that this digital press model meets the ENERGY STAR® guidelines for energy efficiency.

ENERGY STAR® is a US registered trademark.

The ENERGY STAR program is a team effort between the Environmental Protection Agency and the office equipment industry to promote energy-efficient personal computers, monitors, printers, digital presses, fax machines and copiers. Reducing the energy consumption of this equipment will help combat smog, acid rain and long-term changes to the climate by decreasing the emissions that result from generating electricity.

## Environmental Notices for Canada

---



As a participant in the Environmental Choice program, Xerox Corporation has determined that this digital press model meets the Environmental Choice guidelines for energy efficiency.

Environment Canada established the Environmental Choice program in 1988 to help consumers identify environmentally responsible products and services. Copier, printer, digital press, and fax products must meet energy efficiency and emissions criteria, and exhibit compatibility with recycled supplies. Currently, Environmental Choice has more than 1600 approved products and 140 licensees. Xerox has been a leader in offering EcoLogo approved products. In 1996, Xerox became the first company licensed to use the Environmental Choice EcoLogo for its copiers, printers, and fax machines.

# Conventions

---

Standardized conventions have been used in this manual to assist you in visually locating and identifying information quickly.

## Symbols

---



**CAUTION:** *This symbol alerts you to an action that may cause damage to hardware, software, or result in the loss of data.*



**WARNING:** *Warnings alert you to an action that may cause bodily injury.*



**WARNING:** *This symbol identifies an area on the machine that is **HOT** and may cause burn injuries.*



**WARNING:** *This symbol indicates a laser is being used in the machine and alerts you to refer to the appropriate safety information.*



**KEY POINT:** *This symbol identifies information that is being emphasized and is important for you to remember.*



**1**

The 1 2 3... symbol indicates the beginning of a task or work process you should use to complete a procedure and is followed by the first step of a numbered procedure, task, or work process.

**2**

**3**



**NOTE:** *This symbol calls your attention to information that is helpful, but not essential to complete a procedure or task.*

## Writing Style Conventions

---

- **Bold** type indicates the name of a button to press or touch.
- Underlining is used to emphasize a word or term.
- Italic type is used for the text associated with symbols such as Cautions, Notes, Key Points, etc. to visually bring the information to your attention.
- Italic type is also used to indicate names, such as the name of a chapter, or the name of a screen.
- Procedures direct you to press buttons located on the Control Panel, and touch buttons located on the Touch Screen.
- Text referring to illustrations or screen samples precedes the image.



# 1. About Color Printing

---

## Overview

---

Traditional offset printing requires time, people, materials, and many steps to produce quality color output. Digital technology is changing the way the printing industry works. All the steps that used to be performed for offset printing have now been digitized and can be performed on your computer. The DocuColor 2060/2045 digital color press makes it possible for you to print fast, offset-quality images.

The flexibility and control offered by digital technologies and software applications can give you excellent results. Understanding the variables that affect the output image quality. These variables include: the quality of the original that is scanned into a computer, resolution, color management, imaging technology and a variety of other factors, are some of the things you need to understand to maximize your results.

To help you use all this new digital desktop technology, this chapter provides you with information about how to produce color images that will give you high-quality output prints.

## Image Quality

---

When creating a document with color images, you first need to understand the capabilities, strengths, and weaknesses of the software you are using. This applies to both the PC and Mac platforms of software such as QuarkXPress®, Adobe FrameMaker®, Adobe Illustrator®, Macromedia FreeHand®, and Adobe Photoshop®, to mention just a few of the applications available today. Having a thorough knowledge of these programs will assist you in creating your files correctly.

The following sections describe the different variables that affect the output image quality. These variables include: the quality of the original, resolution, color management, and a variety of other factors.

### Quality Starts with the Original

---

Whether your original image is a scanned transparency, a photograph, or a digital file, the image characteristics you start with will have a major impact on the end results. As an image goes through the production process, it is displayed in many different ways: as digital information in the scanned image file; as pixels of red, green, and blue (RGB) light on the computer screen; and as dots of cyan, magenta, yellow, and black (CMYK) dry ink/toner on paper. During each step of the process, the colors of the original are transformed to meet the needs of these different technologies and the output media.

## How Input Determines Output

Successful reproduction of color images depends on a number of factors, starting with the differences in how the various technologies that affect the image translate and display the color.

### Scanners

Scanners are able to capture colors only as red, green, and blue (RGB). Two types of scanners are used today: drum and flatbed scanners. A flatbed scanner does not have as much color range as a drum scanner.

- A drum scanner uses a photomultiplier tube (PMT) that is very sensitive and accurate. The original document is attached to the drum which is rotated past a group of sensors - one each for red, green, and blue, and a fourth that sharpens the digital image. An internal computer usually performs the RGB to CMYK (cyan, magenta, yellow, black) conversion.
- Flatbed scanners use a less expensive and less accurate charge coupled device (CCD) sensor. The original is placed on a flat glass surface and the array of CCD sensors passes by the original, and collects the red, green, and blue data. RGB to CMYK conversion is usually performed on a computer workstation.



**KEY POINT:** *The resolution at which the image is initially scanned and digitized determines the quality of the final output and limits the degree to which the image can be enlarged without loss of final printed quality.*

## Image Key

---

Some scanners, especially low-end desktop models, tend to compress the tonal range of an image and increase the contrast or difference between light and dark areas. If the contrast of your original is too high or too low, detail could be lost when it is reproduced. Images that have few dark areas or shadow tones are called *high key*. In contrast, a *low key* image consists of large areas of shadow and darker midtones (the tones that fall in between).

Some scanners allow you to manually override automatic exposure controls in those cases in which the images have these characteristics.

Imaging software applications use histograms or graphic displays to show the distribution of pixels inside the different tonal ranges of an image.

## Grain/Image Size

The size of an original scanned image is also important to the clarity of the output image. If an image is enlarged too much, the grain of the image may become obvious, detracting from the image quality. In digital photographs, the grain introduced by scanning limits how large an image can be successfully enlarged.

The guidelines below show the maximum recommended enlargement for a few standard sizes.

Original Size	Print Size
4 x 5 inch	11 x 17 inch/ A3
8 x 10 inch	24 x 36 inch

## Getting the Color You Expect

Our eyes are sensitive enough to perceive thousands of different colors in the spectrum of visual light, including many colors that cannot be displayed on a color monitor. The color range, or color gamut, that can be printed with dry ink/toner is even more limited.

Understanding the color gamut is especially important when you compare how different technologies and output devices use light to reflect color images with what we see on a printed page. As colors move from the scanner to the screen to the press, they are converted from one color model to another so you do not get in print exactly the same colors you see on the screen.

For this reason, when you are designing for printed output, you always need to think about what can be reproduced with dry ink/toner on paper and not what you see on your monitor.

### Additive color

Computer monitors work with energized phosphors that glow red, green, or blue on the face of a picture tube. If accurate color reproduction is important to you, your monitor should be calibrated on a regular basis. Calibration adjusts and corrects the gamma, white and black points, and color balance of the monitor. Monitors display color with impressive accuracy, but they can never match the printed page perfectly because of the physics of color involved. Monitors display additive color space RGB, and printing devices use CMYK, which is subtractive color space.

### Subtractive color

Printing is based on the subtractive color process. Cyan, magenta, and yellow dry ink/toner is placed on white reflective paper. Each color then absorbs, or subtracts, its opposing counterpart from the reflected white light. This process controls the amount of red, green, and blue light that is reflected from the white paper. The CMYK colors are printed as layers of halftone dots in various sizes and at various angles to create the illusion of different colors. The varying dot sizes create an effect similar to the varying intensities of the red, green and blue phosphors of a monitor.

### Media

The paper on which the image has printed significantly affects color reproduction. Paper reflects unabsorbed light back to the eye of the viewer. Therefore, the more reflective the surface of the paper, the wider the range of colors that can be produced.

Refer to the *Color Materials Usage Guide* included in your Customer Documentation package for more information on how paper influences image quality.

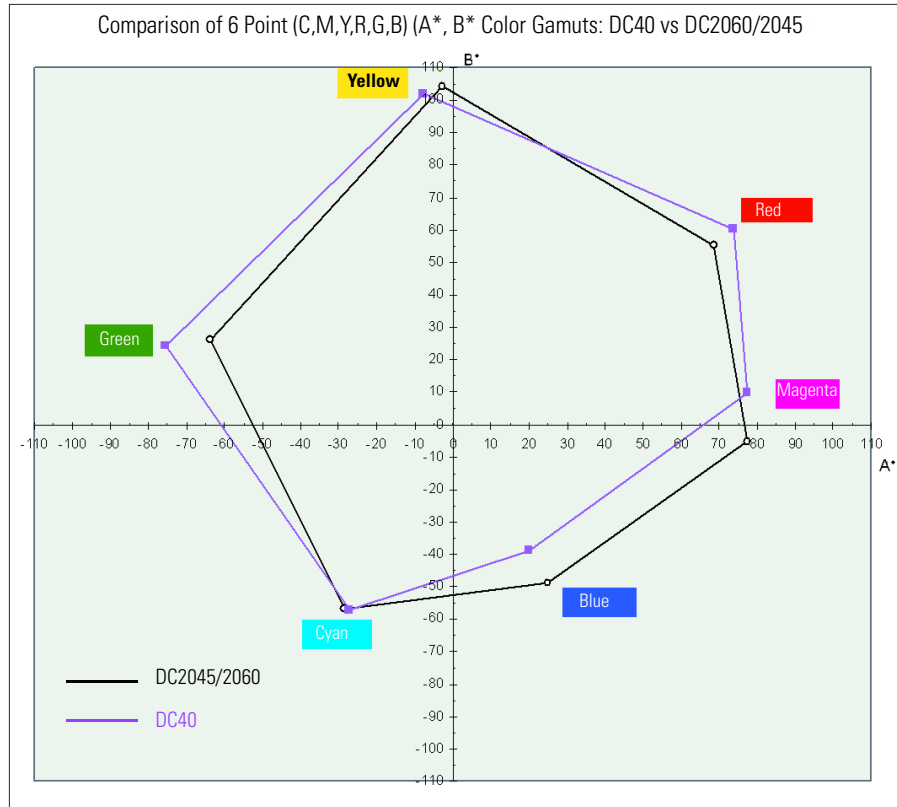
### Raster Image Processors

Once a file is ready to print, it is sent to a Raster Image Processor (RIP) to be processed for output. RIP units typically offer a wide range of functionality, including electronic collation, RIP while printing, color management, automatic trapping, and calibration.

Refer to your Raster Image Processor (RIP) User Documentation for more information on the functionality of your RIP unit.

## Color Gamut

A color gamut is a range of colors. The gamut that the human eye can see is much larger than can be produced in a photograph. The photograph gamut is much larger than that of an RGB monitor. The RGB monitor gamut is larger than the CMYK gamut of a Xerox DocuColor system press. The CMYK gamut of offset printing is significantly less than that of a Xerox DocuColor system. The figure below compares the color gamuts of the DocuColor 40 and the DocuColor 2060/2045.



ABOUT COLOR  
PRINTING

## Color Models

---

Video technology (computer monitors, scanners, and television screens) sees color as transparent light and uses an RGB model to display colors. To display color appropriately on video technology, captured images are broken down into pixels (picture elements) that are projected as rays of red, green, and blue light.

Printers see color as reflective light, which reacts much differently on hard copy printed images and bounces off non-transparent surfaces. Colors are translated into combinations of cyan, magenta, yellow, and black, using a CMYK color model, to get true colors.



## Adding and Replacing Gray to Improve Color

### UCR



### No GCR



### Light GCR



### Medium GCR



### Maximum GCR



There are limitations to achieving the exact colors when converting from RGB (for video display) to CMY (for print). For example, CMY pigments aren't capable of producing consistent black or gray tones.

In cases in which the three ink or toner colors overlap heavily, software applications automatically vary the percentages of cyan, magenta, and yellow to enhance image quality and improve printability. This technique is known as undercolor removal, or UCR, in which black ink is used to replace cyan, magenta, and yellow ink in neutral areas only (that is, areas with equal amounts of cyan, magenta, and yellow). This uses less ink and provides greater depth in shadows. UCR is generally used for newsprint and uncoated stock

Another form of undercolor removal is called Gray Component Replacement (GCR). To compensate for the neutral or grey tones created during the conversion of RGB to CMYK, black ink replaces portions of cyan, magenta, and yellow ink in colored areas, as well as in neutral areas. GCR separations tend to reproduce dark, saturated colors somewhat better than UCR separations do, and they maintain gray balance better in print.

## Color Management

---

Since the color on a screen differs from the color produced by the press, it is necessary to have a Color Management System (CMS). The CMS identifies and bridges the gap between the RGB and CMYK color spaces belonging to your monitor, press, and scanner. Mac and Mac OS compatible computers use the Apple ColorSync CMS to implement and handle the profiles of these devices. For Windows - based PCs, refer to your PC Operator Manual for the compatible CMS.

Without a color management system, one image will appear different when reproduced on different devices due to inconsistencies in color gamuts.

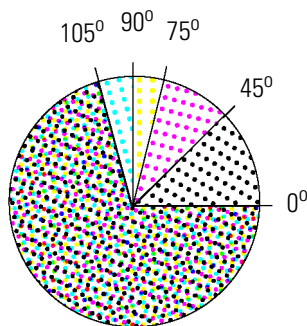
A color management system helps you obtain more consistent results by aligning the color gamuts used by different devices.

## Halftone Dots and Screen Angles

---


### Halftone Screens

---



To produce continuous tone images on an output device, bitmaps and process color graphics must be broken into a series of dots of various sizes and colors. This creates a halftone screen. Halftone screens combine cyan, magenta, yellow, and black dots at different screen angles to form a four-color image. The structure and patterns by which the colors are combined are the halftone screens. When a certain color is required, the halftone screen determines the dots to color, the color to use, and the degree to which each dot is colored. The figure on the left illustrates a halftone screen.

## Halftone Dots

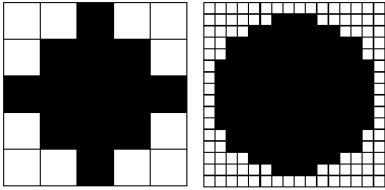

Halftone dots are combinations of spots that create a printed dot. The dots shown here demonstrate different print resolutions. The illustration on the left contains 25 possible printer dot cells, which can create different gray values. The illustration on the right contains 256 printer dot cells, which allows for a greater range of grays. To print a visually convincing halftone image, you need at least 150 shades of gray.

## Halftone Dot Shapes

Because toner reacts differently with different paper surfaces, the characteristics of your paper generally determine the screen ruling you should use (for example, dry ink/toner tends to spread on rough, absorbent grades of paper). Different dot shapes can enhance and improve output quality.

## Solid Background Printing

Image quality is affected by the capabilities of your output device and the type of paper, or media, you are using. Keep in mind the following regarding the DocuColor 2060/2045:

- The maximum dry ink/toner coverage is 270 percent.
- The maximum color depth is 256 levels per color.
- The maximum color resolution is 600 dpi.

### Media

To obtain sharp and uniform prints, paper stocks should be smooth and be composed of uniformly distributed fibers. Paper formation is determined by the uniformity of paper fiber distribution. In color printing, paper formation influences the tendency to mottle, produce uneven spotty toner coverage, and in solid backgrounds it determines the sharpness of the color and its saturation.

Xerox media have been designed with evenly distributed fibers in its structure to yield crisp and mottle-free prints.

Paper quality can vary from one side to another. Good quality paper reduces these differences. Many suppliers use arrows on the paper ream label to indicate the preferred side for imaging.

## Electronic Digital File

---

### Calibration

---

Calibration is essential to insuring good color quality. The purpose of calibration is to measure how the DocuColor 2060/2045 is printing the requested colors and to then make any corrections that are required.

Calibration at the RIP should be done daily, or any time there is the possibility that the digital press colors may have changed from what they were in an earlier calibration. Some of the reasons to calibrate are:

- Color displays differently on identical press models produced by the same manufacturer.
- The temperature of machinery as it warms up affects color intensity.
- Image quality and color reproduction on uncalibrated equipment results in unpredictable, unreliable results.

To properly predict, manage, and minimize color variables, hardware and software must be calibrated before production begins.

Refer to the *DocuColor 2060/2045 System Administration Guide* for information on calibrating the digital press.

Refer to the manuals that came with your Raster Image Processor for information on calibrating that unit.

## Digital Image Manipulation

---

Although image reproduction can be a complex process, one of the primary advantages of capturing an image digitally is that it can be manipulated until you have achieved the desired output. Imaging software applications are continually improving image manipulation capabilities to simplify the process.

### Sizing

---

When digitally enlarging an image, the pixels or cells may become visible. The resulting staircasing, or aliasing, in diagonal lines can be corrected using your software application to add pixels before resizing.

### Sharpening

---

When converting or scanning an RGB image to a CMYK image, the image may become fuzzy. Use the sharpen option of your software application to adjust the clarity of the image.

### Color Cast

---

Color cast is the modification of a hue by the addition of a trace of another hue, such as yellowish green, pinkish blue, etc. This effect can be added or removed by adding black, white, or shades of gray points using the color balance option of your software application.

## Important Additional Tips

---

- Determine the file format.
- Calibrate equipment for the best output, if necessary.
- Include all files, fonts, and linked art.
- Determine the best way to store your data for reprint capability.
- Determine whether the data can be compressed for storage without degrading print quality to unacceptable levels. If quality is unacceptable after compression, consider storage methods that do not require compression.

## Output Considerations


---

### Mottle

---



**Mottle**



**No Mottle**

Mottling is uneven spotty toner coverage that occurs when printing large, solid areas of flat color. Paper choice can be critical in avoiding this problem. To obtain sharp and uniform images, use only paper stock that is smooth and has uniformly distributed fibers.

### Registration

---

Trapping or overprinting can compensate for gaps or shifts as the paper passes through the printing cycle.

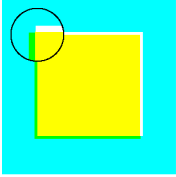


**Registered**




**Misregistered**

## Trapping



**No Trap**

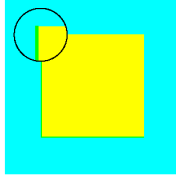

**Trap**

Trapping compensates for misregistration by slightly overprinting adjacent colors.

## Halo



**Halo**



**No Halo**

Haloes are light areas around an object that occur when printing a darker color dry ink/toner on a lighter color dry ink/toner background. Printing on pastel or gray paper eliminates this problem.

## Opacity

Opacity is a measure of how much light can pass through paper. When producing 2-sided output, choose a paper with high opacity so the print from side 1 does not show through on side 2.

## Anti-aliasing

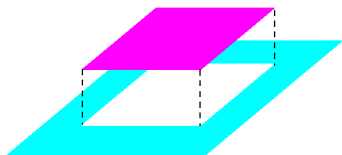
---



**Anti-aliased**

**Not  
Anti-aliased**


Anti-aliasing is a graphics software feature that eliminates or softens the jaggedness of low resolution curved edges.




## Knockout

---

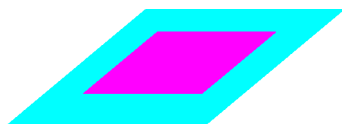Knockout prints a shape or object by removing (knocking out) all underlying colors.



**Knockout**

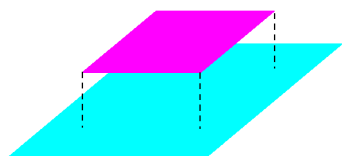

## Overprint

---

Overprint allows an element to print over the top of underlying elements, rather than knocking them out. This feature is often used with black text.



**Overprint**



---

## Duplex Settings

---

To ensure that the image orientation is correct on both sides of the page, the correct duplex setting must be indicated in the print driver window. If the setting is incorrect, your document could print with the image data on one side of the page rotated 180° from the other side.

---

## File Formats

---

Computer graphics created in different graphics software applications provide varying levels of output quality. They are typically described in two ways: pixel-based or bitmap (bits of information or raster files); or mathematically described object-oriented graphics (vector graphics). The most commonly used file formats include Tagged Image File Format (TIFF) and encapsulated PostScript (EPS).

TIFF is a pixel-based, or bitmap, format that can be read by a wide range of applications across multiple platforms. This format is especially useful for viewing and outputting images used with standard office applications, such as Microsoft Word and PowerPoint.

EPS is an object-oriented format that provides the highest quality images your output device is capable of printing. It is the most reliable and comprehensive file format for desktop publishing and graphics programs because it is device-independent.

---

## Resolution

---

Resolution is the number of dots available to represent a bitmapped image. PC monitors have a resolution of 72 dpi. Choosing the right image capture resolution is key to getting the most out of your image. It is important to remember that an image can be printed only at the resolution available on your output device. The DocuColor 2060/2045 has a print capability of 600 dpi.

## Raster Image Processors

---

Raster Image Processors (RIPs) are connected to your network and drive color output devices. Each time an image is sent to a printer, the RIP connected to the printer converts, or rasterizes, the data in the file into dots which can be printed by the target output device. Each dot is assigned a specific location, color, and density level.

RIPs optimize the color of a document by manipulating the dots which make up the image so that it matches the gamut of the printer.

Image quality functions typically associated with a RIP include:

- RIP while printing allows the RIP to concurrently submit pages to the output device while processing new images for printing.
- Advanced text and line art quality controls provide anti-aliasing capabilities for high-quality text and graphics.
- Color Management System facilitates optimizations of images and offset ink/toner simulations.
- Document storage keeps the rasterized file resident on the RIP for future processing.

For further information, refer to the documentation that came with your RIP.

## Finishing

There are two types of finishing: the finishing that the DocuColor 2060/2045 can do and the preparation for finishing other than what the DocuColor 2060/2045 can perform.

The finishing options for the DocuColor 2060/2045 are the Offset Catch Tray (OCT), which offsets sets for easy separation, or the High Capacity Stacker (HCS), which collates and offsets stacks received from the press.

To prepare output for finishing other than what the DocuColor 2060/2045 can perform, you must first understand the various folding techniques, binding methods, and finishing touches available. You must also have software such as DK&A, Ultimate Technographics, Scenicsoft, Press Wise, etc. to enable you to correctly prepare the document for printing.

## Folding Techniques

### Parallel Fold

A parallel fold means that the paper is folded parallel to either the long edge or short edge of the paper.

### Right Angle Fold

The Right Angle Fold is a fold that falls at a right angle to the previous fold. A right edge fold takes the parallel fold one step further.

### Accordion Fold

An Accordion fold is two or more parallel folds in opposite directions.

### Gate Fold

Gate Folds create a pair of foldouts that can be imaged upon. They are especially useful for brochures and book covers.

## **Binding Preparation**

---

### **Nested Signature and Binders Creep**

---

The effects of binders creep are most obvious when thick paper is folded or multiple signatures are nested with each other. After trimming, the innermost signatures will have a smaller page size than the outermost.

### **Gathered Signature**

---

Gathered signatures are folded, placed on top of one another, and bound together. This process minimizes the effects of binders creep.

### **Bottling**

---

Bottling occurs when signatures are not folded at precise right angles.

---

## Binding Methods

---

### Saddle Stitching

---

Saddle Stitching is accomplished using a stapler or a high-speed binding machine that inserts and bends thin wire through the spine of a document. This wire leaves the document looking like it has been stapled. The maximum number of sheets that can be saddle stitched is 32.

### Perfect Binding

---

Providing an unprinted area on the inside cover of a perfect bound book gives an area for the glue to adhere to and allows it to wrap around some of the inside pages.

### Mechanical Binding

---

Mechanical binding allows pages to be flat, so it is often used for technical manuals, notebooks, and calendars.

### Looseleaf Binding

---

Looseleaf bindings are ideal for documents that undergo frequent updates because pages can be inserted and removed easily.

## **Final Finishing Touches**

---

### **Die Cutting**

---

In die cutting, shapes are cut out of a page with sharp knives. It is most often used to create attention-getting documents, or for packaging with unique shapes, like video box covers.

### **Lamination**

---

Laminated documents are encased in a thin, washable plastic coating to protect frequently handled documents from the elements and human wear and tear.

### **Varnish**

---

Varnishing protects documents from the elements and can also be used as a design to enhance a document. Depending on the desired effect, gloss or matte (dull) varnish can be applied to an entire document (flood coverage) to give it a smooth overall finish, or to specific portions of a page (spot coverage) to highlight some parts of the document while de emphasizing others.

### **Embossing**

---

When a document is embossed, it is pressed between two dies (or molds) to create a raised or lowered texture on the sheet. This works best on uncoated cover weight papers.

## 2. Overview

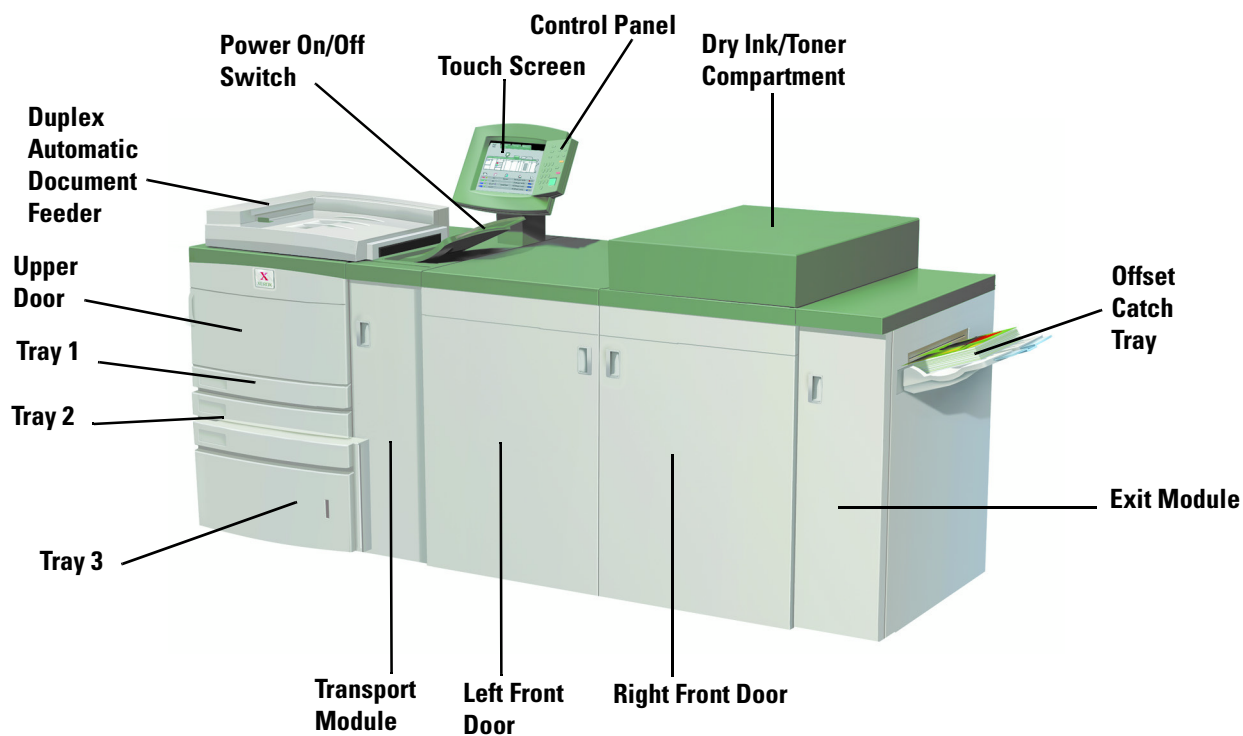
---

The DocuColor 2060/2045 is a full color/black and white digital press operating at a speed of 60/45 prints per minute. This chapter provides the location, name, and function of the various digital press components including:

- External parts
- Internal parts
- The Control Panel
- The Help system

## Identifying the External Parts


Use the illustration below to identify components of the external parts listed in the table.



**Figure 1. Key External Parts of the Digital Press**

Part	Description
Paper Tray 1	Holds 550 sheets of paper of 24 pound (90 g/m <sup>2</sup> ) paper.
Paper Tray 2	Holds 550 sheets of paper of 24 pound (90 g/m <sup>2</sup> ) paper.
Paper Tray 3	Holds 2200 sheets of paper of 24 pound (90 g/m <sup>2</sup> ) paper.



Part	Description
Upper Door Transport Module	The Upper Door Transport Module paper path transports paper from the Paper Trays to the Transport Module.
Transport Module	The Transport Module carries the paper from the paper trays to the upper paper path of the digital press. It also routes the paper from the lower paper path of the digital press to the upper paper path of the digital press when duplexing.
Duplex Automatic Document Feeder (DADF)	The DADF automatically feeds originals to be scanned as Simplex or Duplex. The DADF is an option with a capacity of up to 50 same size or mixed size, 16 to 32 pound (64 to 128 g/m <sup>2</sup> ) documents. The DADF is not on the printer-only configuration.
Scanner	Scans the original to be copied.
Document Glass	An original can be placed on the Document Glass to scan for copying.
ON/OFF  ON  OFF	<p>Press the <b>Power Switch</b> to the On position to switch the digital press on.</p> <p>A screen message advises of a short wait while the Fuser warms up and the digital press runs a system check. You can program the digital press for a job during this time and the printing process will start automatically when the digital press is ready.</p> <p>Press the <b>Power Switch</b> to the Off position to switch the digital press off.</p> <p>Allow the digital press to remain off for a minimum of 20 seconds before switching the power on again.</p>
Touch Screen	Allows selections to be made by simply touching the selections on the screen.



Part	Description
Control Panel	Allows keypad selection of features. Refer to the Control Panel section in this chapter.
Dry Ink/Toner Compartment	Contains the Dry Ink/Toner cartridges.
Offset Catch Tray (OCT)	Receives completed print job. Sets are offset for easy separation. Maximum capacity is 500 sheets of 24 pound (90 g/m <sup>2</sup> ) paper.
Right/Left Front Doors	Houses the image transfer system for simplex and duplex printing. Open to clear jams in the paper path in the Printing Module and at the Fuser. Follow the instructions precisely for clearing a jam in the Fuser. <b>CAUTION:</b> <i>The Fuser is extremely hot and will cause injury if clearing jam instructions are not followed.</i>
Exit Module	Contains the decurler and the inverter. The decurler removes any curl from the printed page. The inverter is used when duplexing or face down output is selected.
Ground Fault Indicator (GFI) Circuit Breaker	Not shown in Figure 1, refer to Figure 5. This device trips if an interruption is detected in the power to the digital press.

## Ecology Module

The Ecology Module connected to the back of the DocuColor 2060/2045 contains the environmental components (ozone and dust filters). The Ecology Module is maintained by the Xerox service representative.

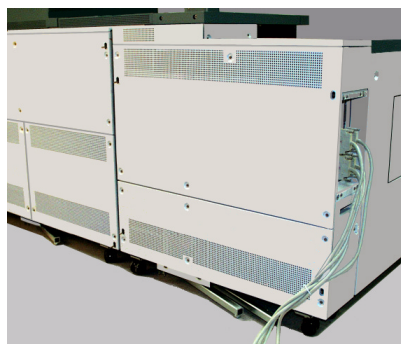


*Figure 2. Ecology Module*

## Electrical Module

---

The Electrical Module houses software, printed wiring boards, and power supplies. The Xerox service representative connects their laptop to the Electrical Module to load software or run diagnostics.



**Figure 3. Electrical Module**



**CAUTION:** *DO NOT* block the vents of the Electrical Module. Excessive heat buildup may damage the DocuColor 2060/2045.



**WARNING:** *Do not* remove the covers or guards that are fastened with screws. There are no parts behind these covers that you can maintain or service.

## Dry Ink/Toner Waste Bottle

The Dry Ink/Toner Waste Bottle collects the waste dry ink/toner in the printing process. The Dry Ink/Toner Waste Bottle is customer replaceable and located in the rear of the Exit Module.

Refer to the Maintenance Chapter of this manual for instructions on changing the Dry Ink/Toner Waste Bottle.


**Dry Ink/  
Toner Waste  
Bottle**



**Figure 4. Dry Ink/Toner Waste Bottle**

## Ground Fault Indicator (GFI) Circuit Breaker

The DocuColor 2060/2045 is equipped with an additional safety circuit breaker called a Ground Fault Indicator. This device trips if the power to the digital press is interrupted.

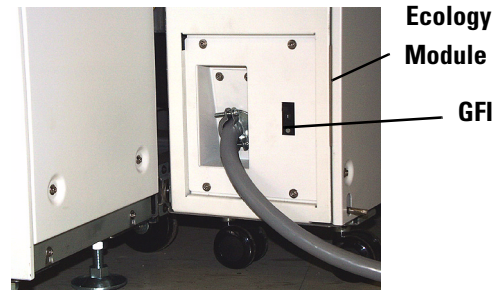

**Figure 5. Digital Press GFI Circuit Breaker**

The digital press should be powered on as soon as possible after the power is restored, and a print should be made to ensure that no damage to the DocuColor 2060/2045 has occurred.

If power to the digital press is interrupted, do the following:

123...

- 1** Locate the circuit breaker on the back of the digital press on the electrical module next to the toner waste bottle.
- 2** If the device has been tripped, the switch will be in the Off position (down). Flip the switch up.



**NOTE:** *If the device trips again, or if power is not restored by the above procedure, call your Xerox service representative.*



**CAUTION:** *The Pressure Pad in the Fuser remains in a up position if power to the digital press is interrupted while the digital press is in use. The Pressure Pad will not be released from this position until the power is restored, the Power Switch is in the On position, and the Start button is pressed.*

If the Pressure Pad remains in the up position for a prolonged period of time, print quality defects will occur.

## Touch Screen

Use the Touch Screen to select features and options for the scanned output. It also displays messages that indicate the status of the digital press during idle, run, or fault conditions.

The Touch Screen displays the default screen selected in the Tools Mode by your System Administrator. The default screen can be either the *Basic Features*, *Job Status*, or *Machine Status* screen.

## Message Area

The message area at the top of the Touch Screen displays messages concerning the digital press status, programming conflicts, or errors. Messages may also provide instructions for the operator.

## Tabs/Buttons/Icons

Some screens on the Touch Screen display tabs which contain various selectable options. Refer to the example on the following page.

Features and options are initially set to the factory default settings. These settings can be changed by your System Administrator in Tools Mode.

Ask your System Administrator for more information regarding these selections, or refer to the *System Administration Guide*.

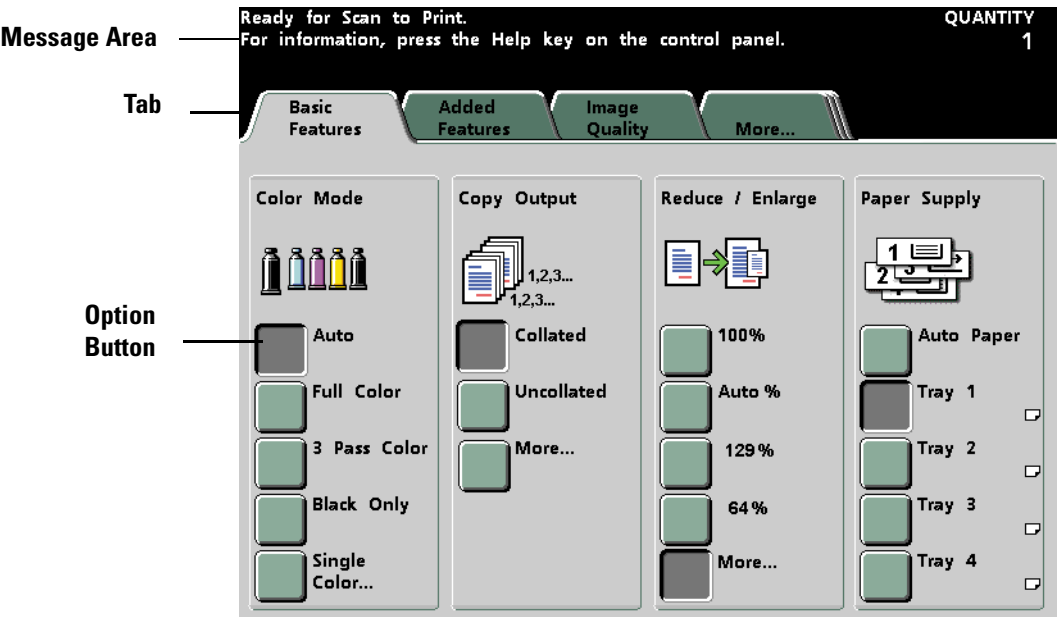


Figure 6. Message Area, Tabs, and Option Buttons



## *Touch Screen Button Types and Functions*

Selectable Touch Screen buttons are in color and shadowed. These buttons change appearance when selected. The standard button types include:

- **Option buttons**

Option buttons are blank with words or graphics to the side.

Some features have more options associated with them than can be displayed on one screen. Touching a **More...** button displays a screen with all further options.

- **Icon buttons**

Icon buttons are Option buttons that display icons.

- **Arrow buttons**

Arrow buttons allow you to change values for features such as Variable Reduce/Enlarge.

Touch the **up arrow** to increase the value; touch the **down arrow** to decrease the value. Changes are displayed in the value boxes.

Values on the DocuColor 2060/2045 are set in millimeters (mm) and inches.


- **Fixed selection buttons**

Fixed selection buttons allow you to select preset (default) values indicated on the Touch Screen.

- **Cancel and Save buttons**

The **Cancel** button allows you to cancel selected feature options without saving them.

The **Save** button allows you to save selected feature options.

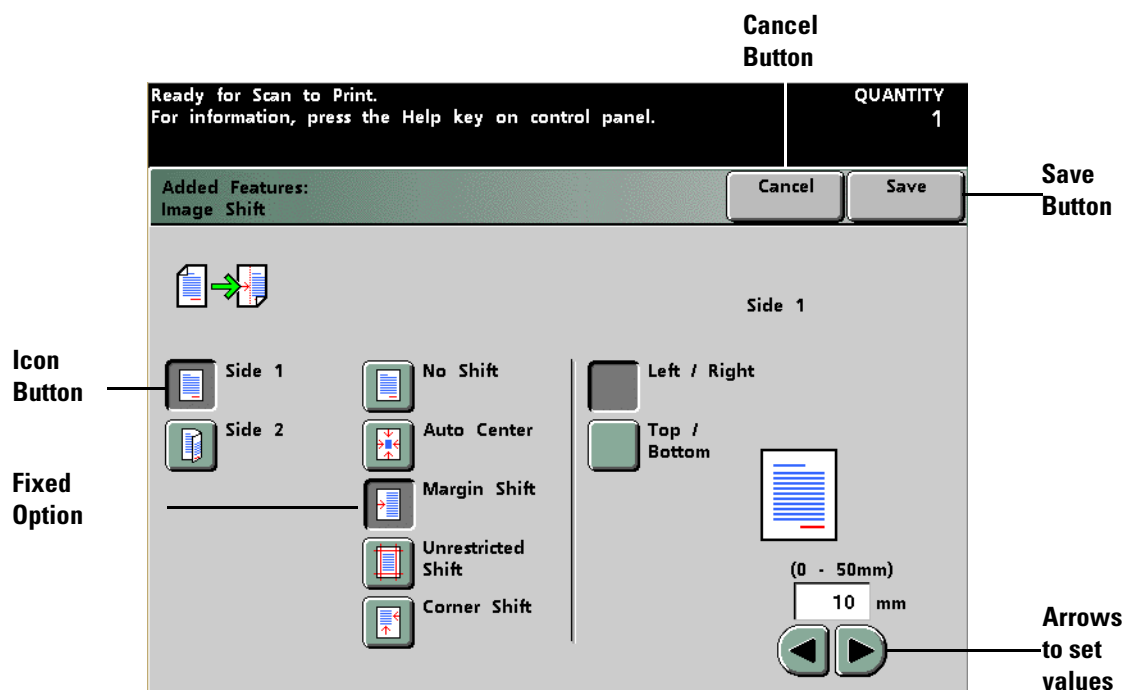

**Figure 7. Screen Button Types**

Control Panel

Your DocuColor 2060/2045 has one of two Control Panels: a Control Panel with words, as shown below, or a panel with international symbols, as shown on the following page. The function of each button is described in the table on the following pages. Not all of the functions are activated for the digital press configuration without the Scanner.

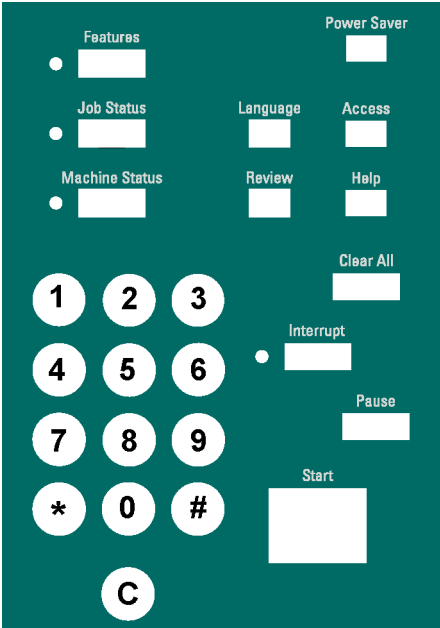
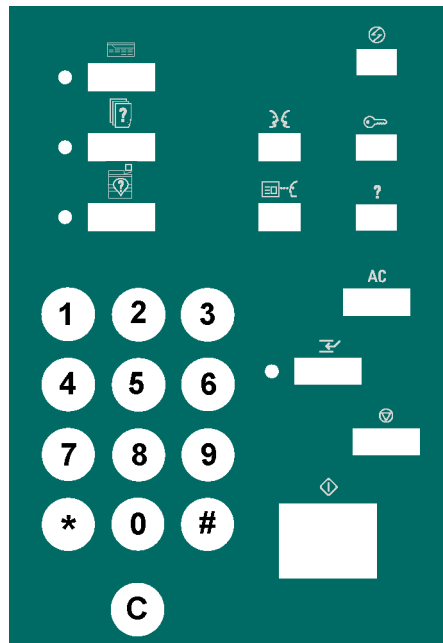


























Figure 8. DocuColor 2060/2045 Control Panel with words



**Figure 9. DocuColor 2060/2045 Control Panel with international symbols**

Name	Word	Symbol	Function
Features			Displays the screen containing the Basic Features, Added Features, Image Quality, and More tabs. Appears on digital press with scanner only.
Power Saver			Puts the digital press in a standby status mode, in which the Fuser temperature is lowered.
Job Status			Displays a list and the current status of all jobs submitted on the Touch Screen. You can also hold, release, promote, delete, and see the options selected for each job in the digital press queue.
Language			Allows you to select one of two languages to be displayed on the Touch Screen.
Access			Allows access to the password-protected Tools Mode and the Auditron Mode.
Machine Status			Gives Paper Tray, Machine Details, Error Log, and Maintenance information. Machine Status is where you will find the serial number for the DocuColor 2060/2045, the customer support phone numbers, and the meters that show the count for color, black and white, color large size, and total output.

Name	Word	Symbol	Function
Review			Displays the job programming choices that are selected. Digital press with scanner only.
Help			Displays additional information useful in completing a task.
Clear All			Clears all job programming and returns the digital press to the default settings. Clear All cannot be used while printing is in progress. Digital press with scanner only.
Interrupt			Interrupts the printing in process to allow a priority job to be scanned. The Interrupt indicator lamp lights up. Press the <b>Interrupt</b> button after the job is completed to return to printing the previous job. Interrupt cannot be selected while using the Poster feature. While running a job in Interrupt, Define Area in the Original Type/Dark Edges feature cannot be selected. Also, Stored Programming and Added Features cannot be used while running a job in Interrupt. Digital press with scanner only.

Name	Word	Symbol	Function
Pause			Press the <b>Pause</b> button to stop the scanning process. You cannot run another job while in the Pause mode. You must press Pause again to resume the original job or to press Clear All to cancel the job. Digital press with scanner only.
Start			Press the <b>Start</b> button to start the scanning process. The Start button is also used in the Tools Mode for certain settings.
Keypad			Use the keypad to enter your password for access to Tools Mode. Use the keypad to enter the number of copies desired for a job.
C			Press the <b>C (Clear)</b> button to return the selected quantity to 1. Digital press with scanner only.



Features

When the Features button is pressed, the following screen is displayed. Tray 4 appears in the Paper Supply column only when an optional Tray 4 is connected to the digital press. Auto Paper does not show for all configurations.

The Features screen can be set as the initial screen default by your System Administrator.

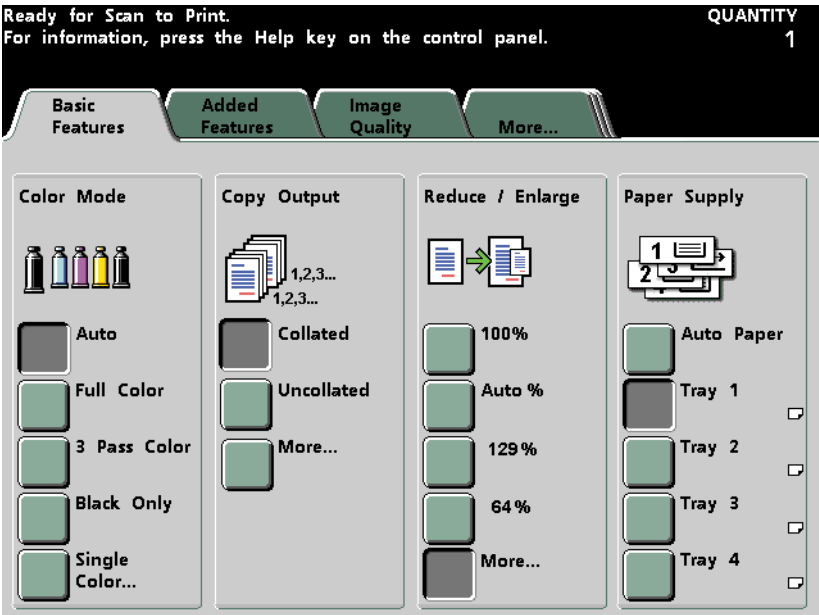


Figure 10. Features Initial Screen

Tab	Description
Basic Features	Displays the choices to program for Color Mode, Output, Reduce/Enlarge, and Paper Supply.
Added Features	Displays choices to program for 2-Sided Output, Image Shift, Original Input, Bound Originals, Edge Erase, and Stored Programming.
Image Quality	Displays Image Quality options, including Original Type, Lighten/Darken, Sharpness, Image Tone Presets, Color Balance, Color Shift, Chroma, and Color Bar.
More...	Displays the tabs for Output Format, Job Assembly, and Back (takes you back to the <i>Basic Features</i> screen).





## Job Status

When you press the Job Status button, the *Job Status* screen, shown in Figure 10, is displayed. The *Job Status* screen can be set as the initial screen default by your System Administrator. Information about the job includes Job Type, Current Status, Paper Size, Output Quantity (refers to the output in sheets for a single page job and in sets or stacks for a multiple page job), and total Number of Pages.

Jobs are numbered in the order they are received for processing. Job order in the queue may be modified by an automatic Hold (something has to be done to the digital press before continuing), a Manual Hold (at user request), Promotion of one or more jobs, or Delete a job.

To perform one of the following functions, you must first touch the desired job to select it, then touch one of the buttons below.

- Touch **Hold Job** for a manual hold. When a job is in Hold Job status in the queue, it will not print when it reaches the top of the job queue. It will be skipped until it is released or deleted.
- Touch **Release Job** to reactivate a job that is on hold in the queue. If the job is being held due to a resource (paper, dry ink/toner, etc.) problem, the job is not released until the resource is provided. A job that is held due to user request can be released by touching the Release button.
- Touch **Promote Job** to advance a selected job in the queue to be processed after the job that is currently printing. Jobs are processed on a first-in/first-out basis when multiple jobs are promoted. Once a job has been promoted, it cannot be skipped by jobs promoted after it.
- Touch **Delete Job** to delete a selected job from the queue. You must answer "Yes" when confirmation of the delete is requested.
- Touch **Job Details** for detailed information about a selected job such as Number of Images processed, Color Mode, Paper Tray in use, Paper Type, and Finishing.

Job names will be truncated to 16 characters on the *Job Status* screen, which may be fewer characters than are displayed on your RIP.

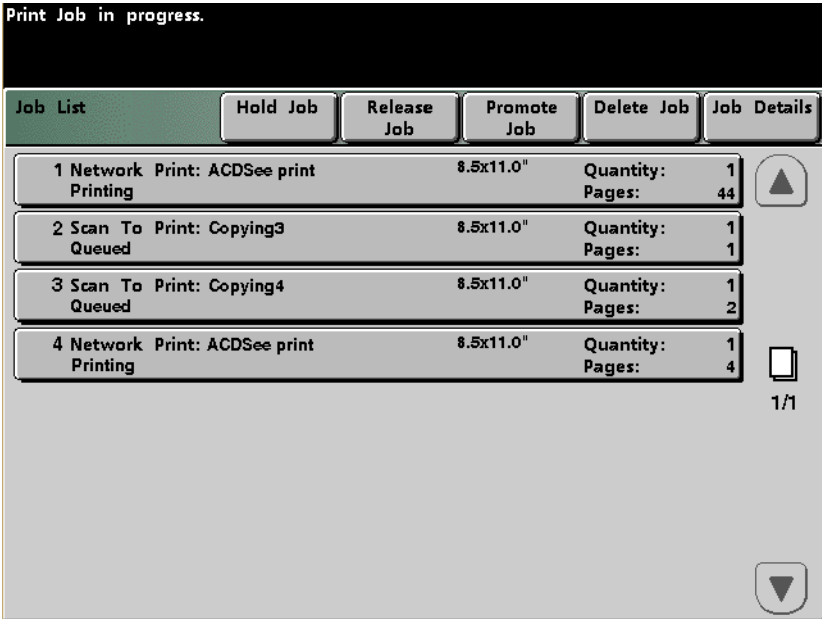


Figure 11. Job Status Screen

Name	Function
Job List	Shows all jobs submitted.
Hold Job	Holds a job in the print queue until released.
Release Job	Releases a Hold Job to be printed.
Promote Job	Enables a job to be moved in front of other jobs in the queue.
Delete Job	Deletes a selected job.
Job Details	Shows the programmed options for a selected job.
Up/Down Arrows	Enables scrolling through job list.



## Power Saver

The Power Saver button puts the digital press in a standby status mode, in which the Fuser temperature is lowered. The factory default is 60 minutes. The Power Saver time out can be changed in Tools to reflect a value from 1 to 240 minutes. Refer to the *System Administration Guide* for further information.



## Language

The Language button toggles the Touch Screen between two preset languages.



## Access

The Access button brings up a screen that requires a password to enter the Tools and Auditron Modes. Refer to the *System Administration Guide* for further information on these two Modes.



Machine Status

When the Machine Status button is pressed, the following screen is displayed. The *Machine Status* screen can be set as the initial screen default by your System Administrator. Tray 4 appears in the Paper Supply column when an optional Tray 4 has been connected to the digital press.


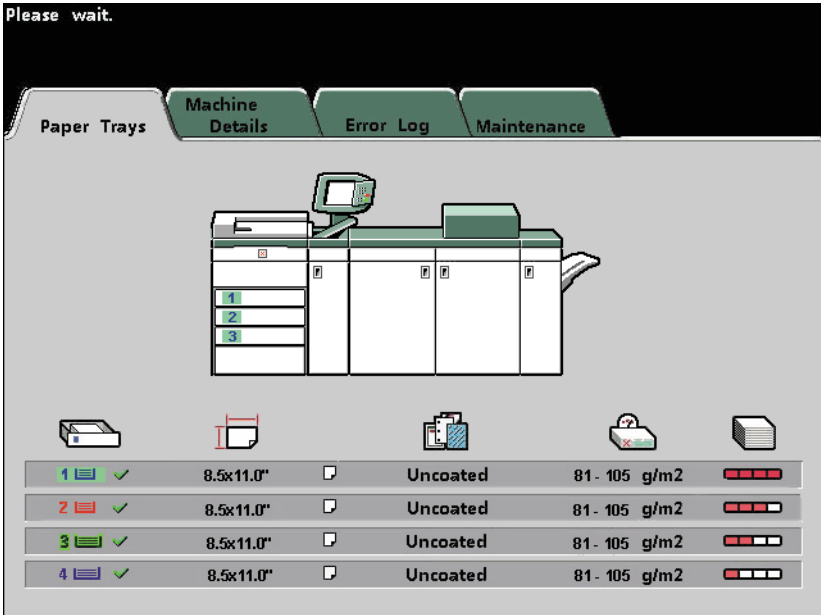


Figure 12. Machine Status Initial Screen

Screen Name	Function
Paper Trays	Shows the trays available, and the size, type, weight and level of the paper in the trays.
Machine Details	Displays the customer support phone number, the serial number of the machine, and access to the <i>Meters</i> screen.
Error Log	Shows all error codes to assist your Xerox service representative in solving problems with the DocuColor 2060/ 2045.
Maintenance	Displays the status of the Dry Ink/Toner Cartridges, Dry Ink/ Toner Waste Bottle, Fuser Oil, and Fuser Web. A green check mark indicates that the status is Okay. A yellow check mark indicates a Warning. A red circle indicates a Fault.  <b>NOTE:</b> <i>The Fuser Web is to be changed only by your Xerox service representative.</i>

## Meters

The meters keep track of print counts. To view the print count touch the **Meters** button on the *Machine Details* screen. The *Billing Meters* screen is displayed.

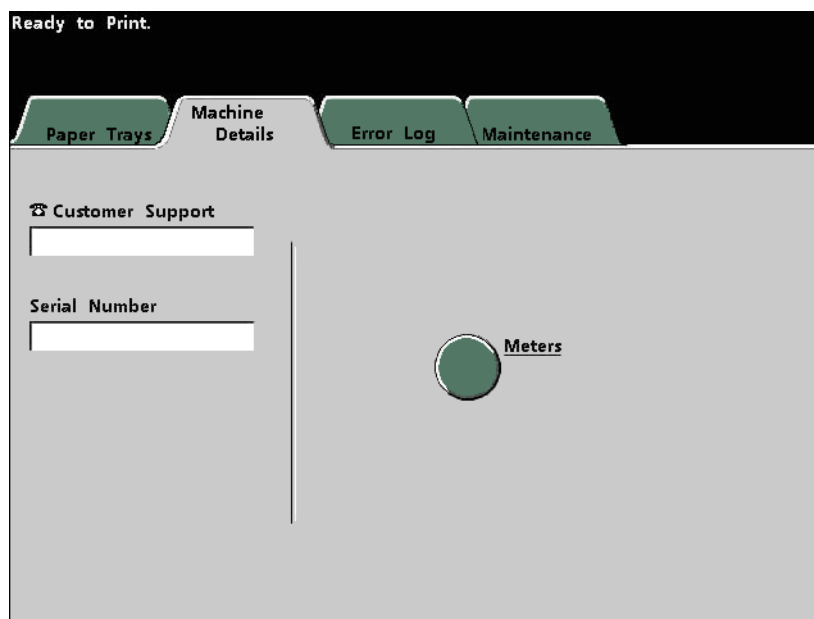

**Figure 13. Machine Details Screen**

To reset the Meters to zero, follow this procedure:


123...

- 1 Touch the **Resettable Meters** button on the *Billing Meters* screen.

Ready for Scan to Print.  
For information, press the Help key on control panel.


Machine Details:  
Billing Meters Close

Current Output Volume		Last Count Output Volume
Meter A		Meter A
<input type="text" value="1"/> Color Total		<input type="text" value="1"/>
Meter B		Meter B
<input type="text" value="1"/> Black & White Total		<input type="text" value="1"/>
Meter C		Meter C
<input type="text" value="1"/> Color Large-Size Total		<input type="text" value="1"/>
Meter D		Meter D
<input type="text" value="1"/> Total Output (A + B)		<input type="text" value="1"/>

 **Resettable Meters**

**Figure 14. Billing Meters Screen**

- 2 Touch the **Reset** button on the *Resettable Meters* screen.  
The numbers reset to 0.

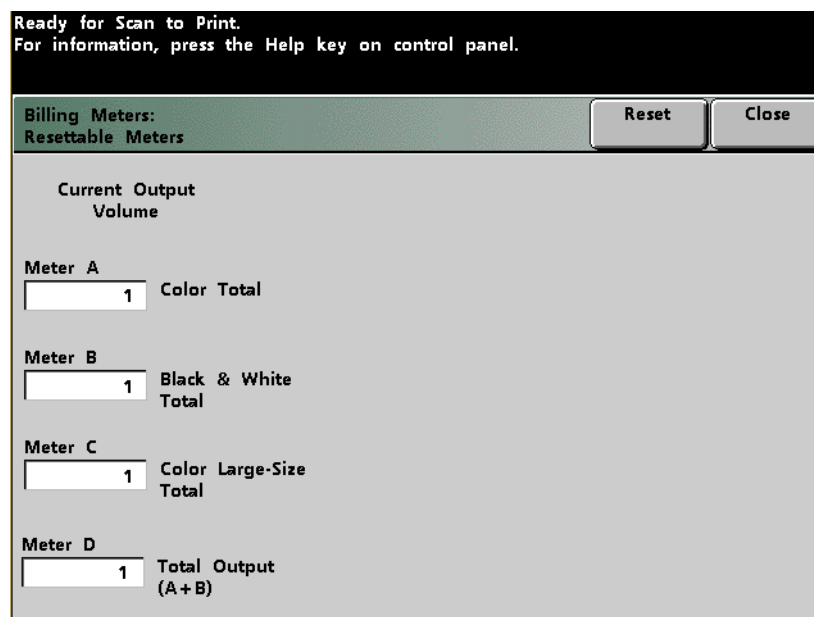

**Figure 15. Resettable Meters screen**


- 3 Touch **Close** until you reach the primary *Machine Details* screen.



## Review

The Review button displays the *Review* screen, which allows you to review the information programmed for a scanner job. Use the up and down arrow buttons on the right side of the screen to scroll down through all of the features.

- Touch the **All Features** button to display the information for each feature.
- Touch the **Invoked Features** button to display only the information for the features programmed for a particular job.
- Touch the **Features Off Default** button to display only the information for the features whose settings are not the default settings.

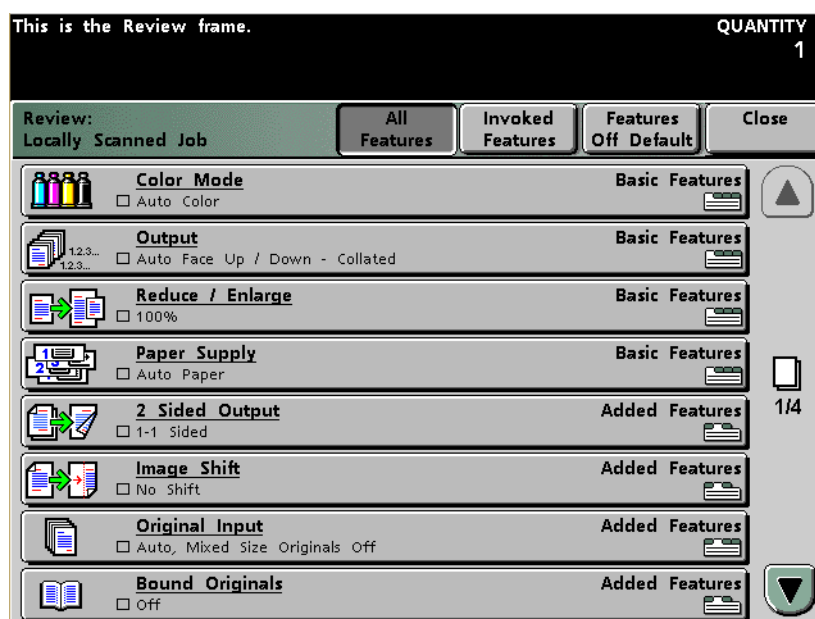

**Figure 16. Review Screen for Digital Press with Scanner**



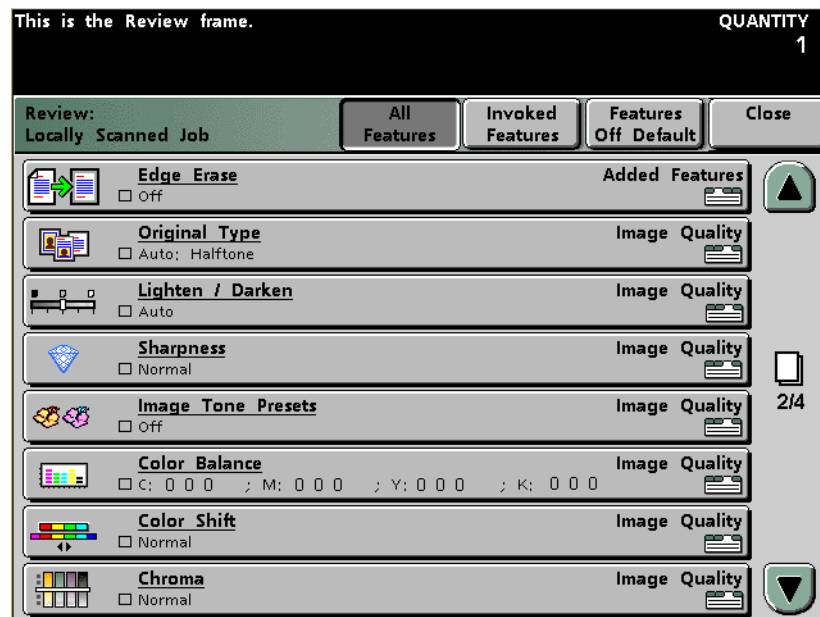


Figure 17. Review Screen for Digital Press with Scanner continued


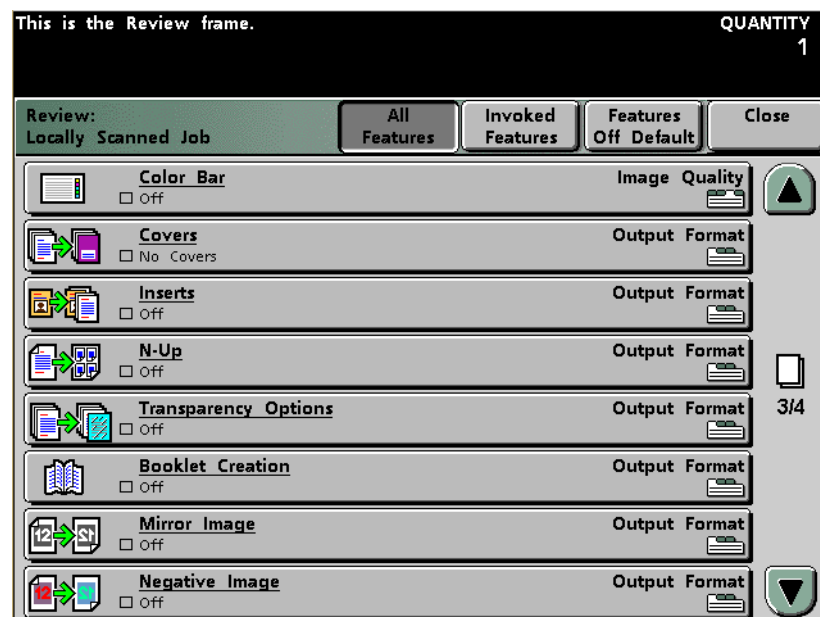


Figure 18. Review Screen for Digital Press with Scanner continued

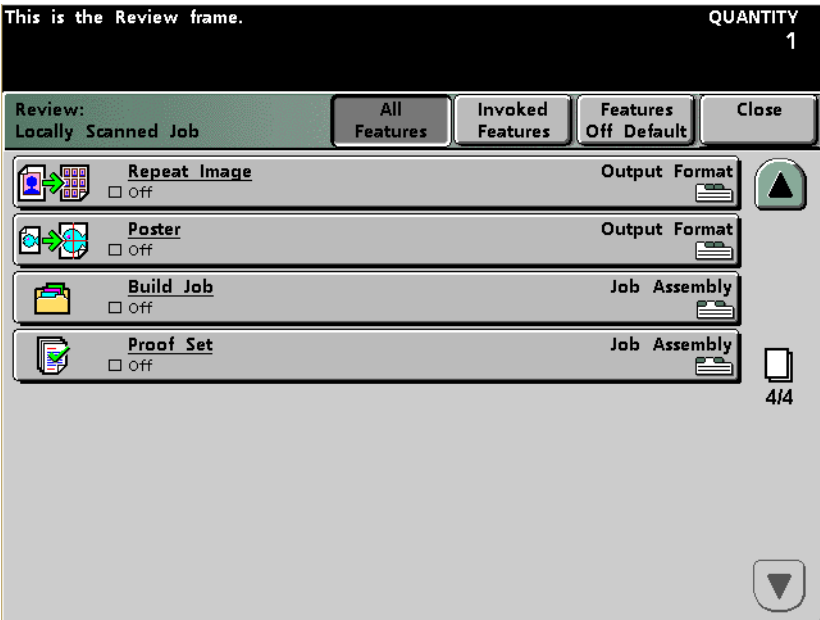

*Figure 19. Review Screen for Digital Press with Scanner continued*



## Help

Press **Help** for an overview of the different options displayed in the various tabs on the Touch Screen.



## Clear All

Press **Clear All** to cancel all programmed selections and restore the defaults.



## Interrupt

Press **Interrupt** to interrupt a scan or print job that is running, to program and run another job, and then to resume scanning or printing the original job. A green light to the left of the interrupt button indicates that interrupt has been selected.



## Pause

Press the **Pause** button to stop the job that is running. On the *Job Status* screen, touch **Delete Job** to cancel the job or **Resume Scan** to continue the job.

## Job Monitor

The *Job Monitor* screen displays the options selected for the current job and allows you to program features for the next job while the current job is running. If there is more than one job programmed in the digital press, the last job programmed appears on the Job Monitor, not the job that is currently running.

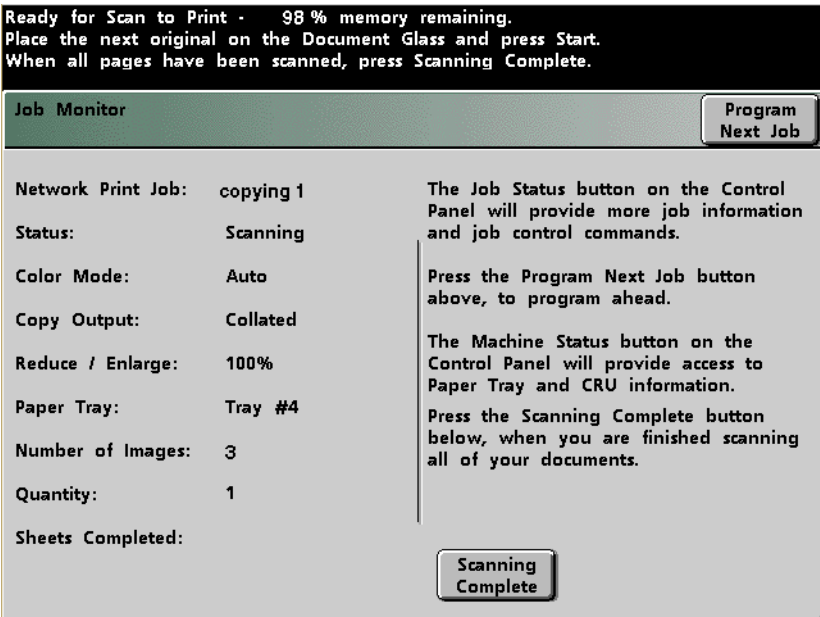


Figure 20. Job Monitor Screen

The digital press may be programmed to accept Additional Originals. This selection is activated in the Tools Mode. Refer to the *System Administration Guide* for instructions.

If Additional Originals is activated, the digital press looks for more originals to be fed for a job until the **Scanning Complete** button is pressed on the Job Monitor screen.

## Audio Tones

There are three audio tones:

- **Attention:**

The Attention Tone indicates that the button you press cannot be selected.

- **Button Selection:**

The Button Selection Tone indicates that the button you press can be selected.


- **Fault:**

The Fault Tone indicates that the digital press is in a fault condition and will not operate until the fault is cleared.

The Audio Tones can be activated or deactivated through the Tools Mode. For more information, refer to the *System Administration Guide*.

## Alert Screens

An *Alert* screen has a red bar across the screen when a consumable product, such as Dry Ink/Toner, needs to be replaced. An *Alert* screen also indicates that the digital press is unable to make prints because of a fault condition. Follow the instructions on the Touch Screen to resolve the problem and resume printing.

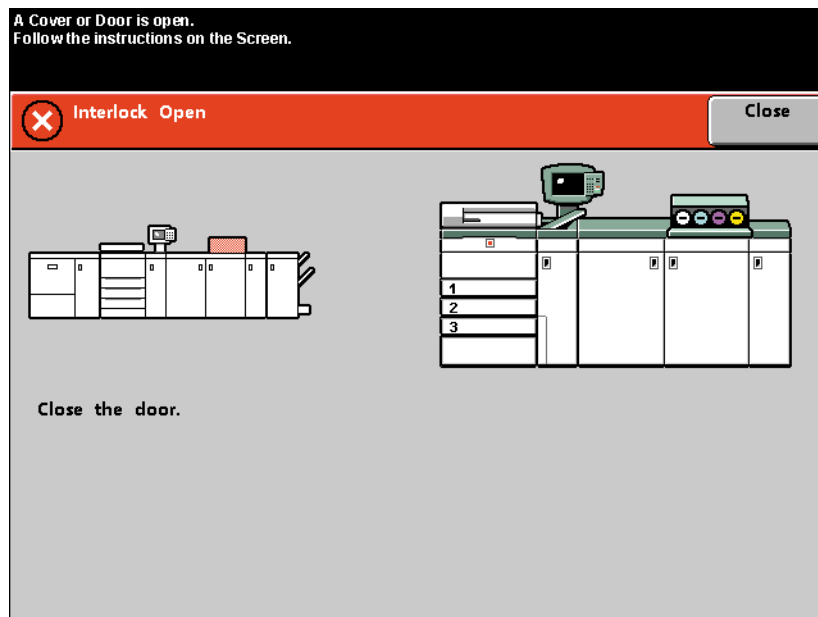

**Figure 21. Alert Screen**

## Maintenance

The *Maintenance* screen displays a green check mark if the level of the consumable listed is adequate. A yellow triangle alerts you that the level is low and a red circle indicates that the consumable is depleted. The DocuColor 2060/2045 will automatically interrupt the current job and will not restart until the consumable is replaced.

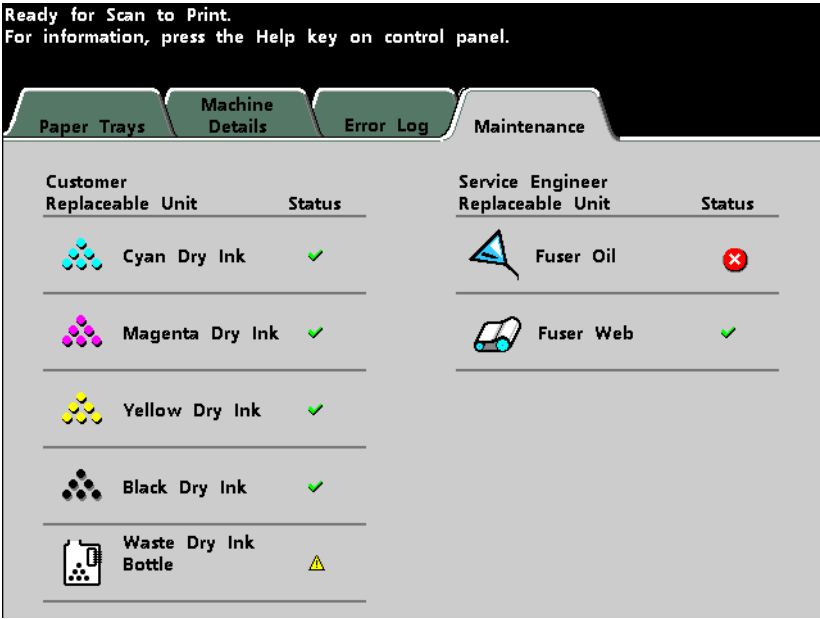


Figure 22. Maintenance Screen

## Duplex Automatic Document Feeder (DADF)



**Figure 23. DADF**

The DADF automatically feeds up to 50 same size or mixed size documents.

123...

- 1 Place documents face up in the Duplex Automatic Document Feeder and ensure that the paper guide is against the documents.

The Document Feed Lamp displays a green arrow when a document is inserted correctly into the feeder. This light can also indicate a document jam.

- 2 Press the **Start** button to begin the scan operation. The original is fed from the top of the stack to the Document Glass to be scanned then face down to the DADF output tray on the right.



**KEY POINT:** Do not use excessive force to press down on the Duplex Automatic Document Feeder when scanning bound documents.

**KEY POINT:** You may not use the Auto Color option if the Duplex Automatic Document Feeder must remain open during copying. The digital press with scanner will not operate until you make a different selection under the Color Mode feature.



## Document Glass



**Figure 24. Orientation of Original**

- 1** Lift the DADF and place the original face down in the upper-left corner using the same orientation on the Document Glass as the paper in the chosen paper tray (Long Edge Feed (LEF) on the glass if the paper in the chosen paper tray is LEF. Short Edge Feed (SEF) on the glass if the paper in the chosen paper tray is SEF).



**CAUTION:** When copying a bound document, *DO NOT* apply excessive force to close the DADF.


- 2** Lower the Duplex Automatic Document Feeder.
- 3** Press the **Start** button to begin the scan operation.

The maximum scanned image size is 11 x 17 inches or A3. To copy an image of this size onto 12 x 17.7 inch or SRA3 paper, you must select 102% enlargement. Refer to the Paper and Paper Trays Chapter of this manual for more information on programming the system for the various paper sizes.



**KEY POINT:** You may not use the Auto Color option if the Duplex Automatic Document Feeder must remain open during copying. The digital press with scanner will not operate until you make a different selection under the Color Mode feature.

## Identifying the Internal Parts

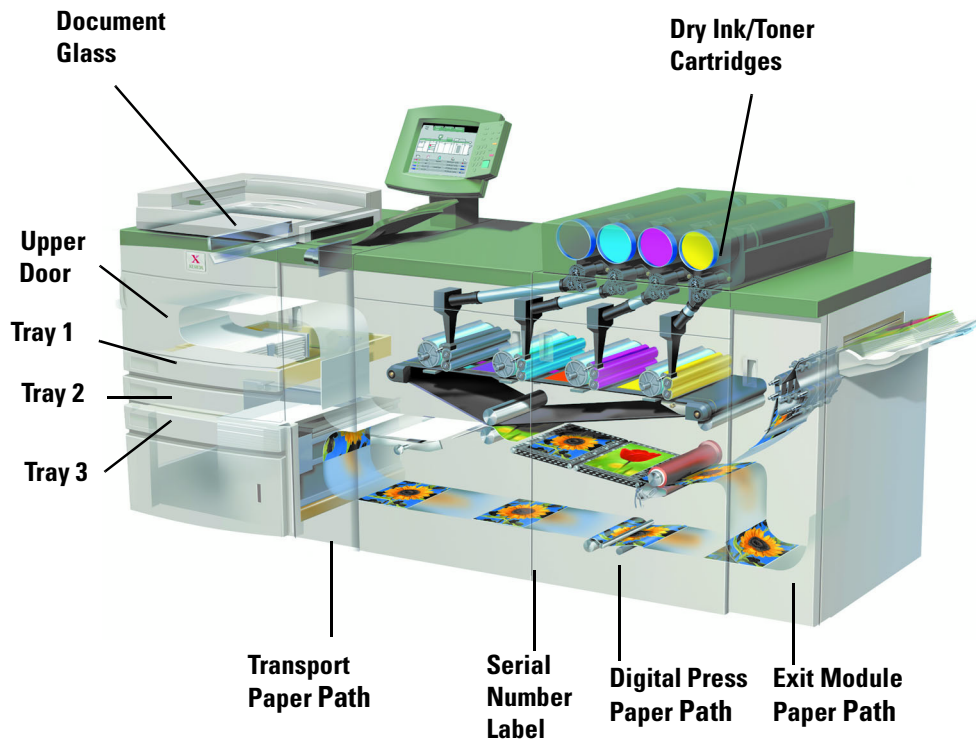

**Figure 25. Internal view of the DocuColor 2060/2045**

### Dry Ink/Toner Cartridges


The colors in the DocuColor 2060/2045, from left to right, are black, cyan, magenta, and yellow. Refer to the Maintenance Chapter of this manual for instructions on changing the cartridge.

### Serial Number Label


If the DocuColor 2060/2045 has a loss of power, and it is impossible to access the Machine Details tab to get the serial number, open the two main front doors. The serial number label is in the center of the bottom frame of the digital press.

## Upper Door

The Upper Door Transport Module paper path transports paper from Trays 1 and 2, and optional Tray 4 to the Transport Module.

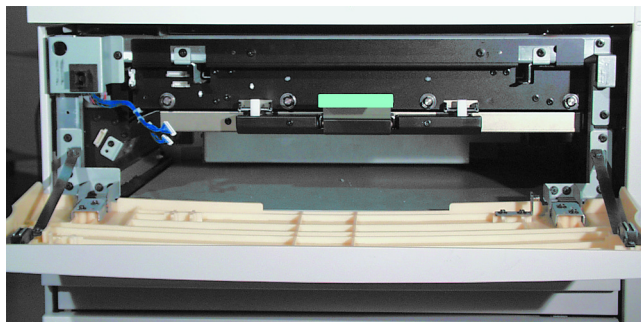

**Figure 26. Upper Door**

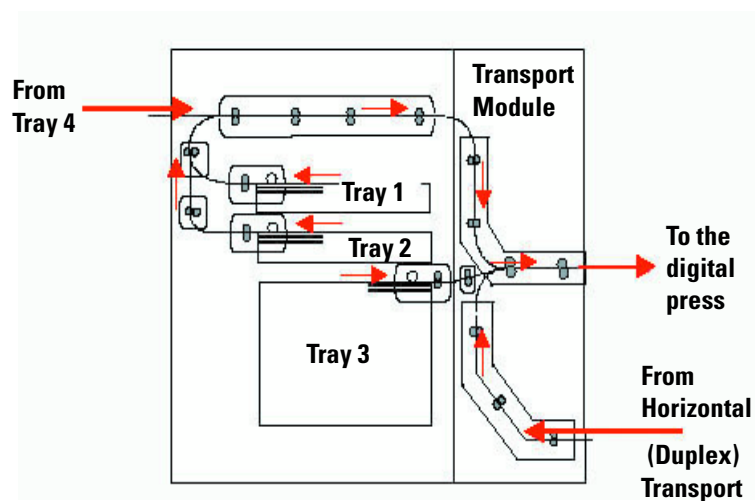


**Figure 27. Paper Path**

## Transport Module

The upper paper path in the Transport Module carries the paper from the Paper Trays to the upper paper path of the digital press.

The lower paper path in the Transport Module carries the paper from the lower paper path in the digital press to the upper paper path in the digital press when duplexing.

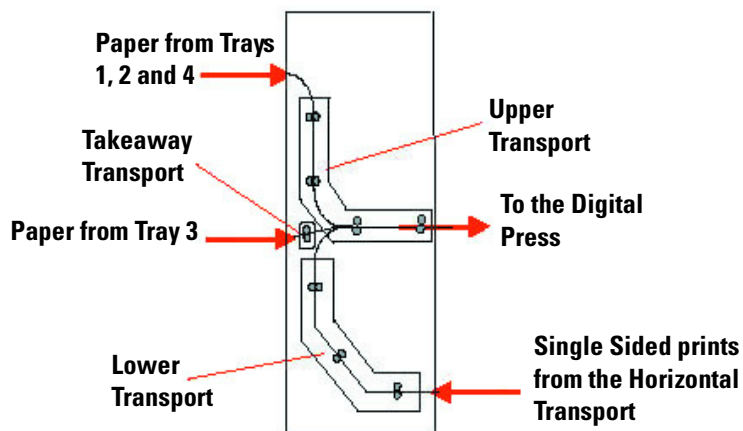


**Figure 28. Transport Module Paper Path**



**Figure 29. Transport Module**

## Paper Path in the Digital Press

The Paper Path in the digital press transfers an image to the paper and fuses it for both the simplex and duplex selections. It has two areas, the upper Paper Path and the lower Paper Path. The upper Paper Path is used for both simplex and duplex. The lower Paper Path is used for duplexing only. Horizontal Transport 1 decurls the paper when printing duplex.

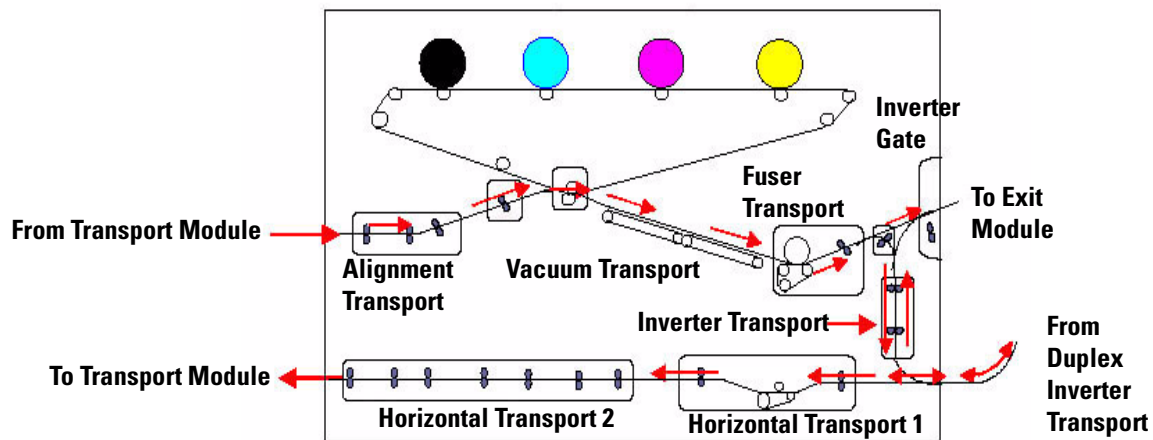


**Figure 30. Digital Press Paper Path**

## Exit Module


A completed print passes through the Exit Module to the Offset Catch Tray.

The Exit Module contains a Decurler that removes paper curl caused by the fusing process.

The Exit Module also contains an Inverter which turns the paper over so that side 2 can print when duplexing or when face down output is selected.

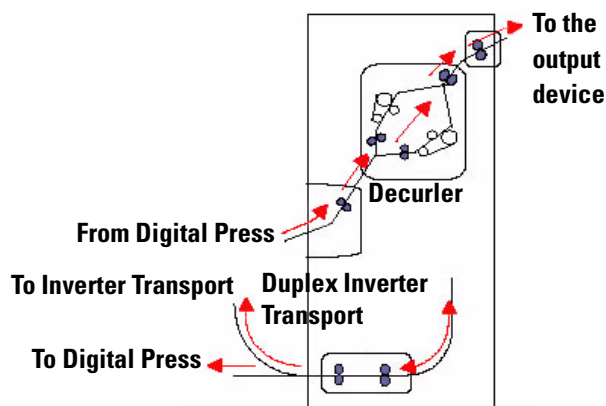

**Figure 31. Exit Module Paper Path**

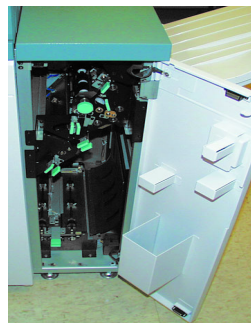

**Figure 32. Exit Module**

## Relocating the DocuColor 2060/2045

If the DocuColor 2060/2045 must be relocated, call your Xerox customer representative. The Installation Planning procedure must be conducted for every new site.

This page is intentionally left blank.



## 3. Paper and Paper Trays

---

### Recommended Papers and Special Materials

---

Refer to the *Color Materials User Guide* and the *Recommended Materials List* for paper guidelines. The *Recommended Materials List* is a downloadable file on [www.xerox.com](http://www.xerox.com). Use the search parameters DC 2060 or DC2045 and follow the path until you reach the files that can be downloaded.

### Paper Handling

---

For the best performance load paper with the seam side down in Trays 1 and 2 and seam side up in Tray 3. The seam side is where the ream of paper is sealed.



**NOTE:** *Many suppliers use arrows on the product labels to indicate the preferred side to image first. Use this side (as signaled by the arrow) as equivalent to the seam side when loading the paper.*

Many factors affect the performance of paper, including room temperature, humidity, paper quality, dust, and the size of the image area. If jams or paper curl problems occur, remove the paper from the paper tray, turn it over, place it back in the paper tray, and resume printing. If the problem is rectified, continue to load your paper in the same manner. If the problem is not rectified, load a new ream of paper and try the process again. If the problem persists, your System Administrator can go into the Tools Mode and try the different decurler settings. If, after trying all the previous suggestions, the problem still persists, call your Xerox representative.

For reliable digital press operation and good print quality, Xerox recommends the following:

- **Store Paper:**

- On a flat surface. Do not store paper directly on the floor, since that increases the possibility of moisture absorption. Paper should be stored on pallets, or shelves or in cabinets in an area protected from extremes of temperature and humidity.
- In a low dust area.
- In a low humidity area. Humidity is one of the most important steps to promote proper paper characteristics. Optimum paper storage conditions include a relative humidity of 35% to 55%. An increase in humidity can cause paper to develop wavy edges. This occurs because the edges absorb moisture while the rest of the ream remains unaffected. Wavy edges can cause jams and misfeeds.
- In an air-tight moisture proof container.
- In controlled temperature. The temperature in the room where paper is stored can have a significant effect on how that paper performs in the machine. Optimum paper storage temperature is 68 to 76 degrees F (20 to 24.4 degrees C).

For additional paper handling information, refer to the *Color Materials Usage Guide*.

- **Cutting and Trimming Paper**


Proper cutting of the paper is important. Mills offering paper in cut sizes cut their papers using state-of-the-art rotary slitters on high performance systems. Slitting and edge trimming by circular knives with dust removal at every cutting point prevents contamination of the paper.

Trimming papers from parent sheets to get the desired output size may generate dust if dull knives are used. The recommendation is to delay trimming until printing has been finalized to prevent paper dust generation and contamination.

If pre-printing is imperative, an in-house maintenance program, including knife sharpness maintenance and dust removal with a vacuum or air system, are key to achieving good results.


## Paper Trays 1, 2, and 3

Paper Trays 1, 2, and 3 are standard Paper Trays and hold the paper supply for the DocuColor 2060/2045.

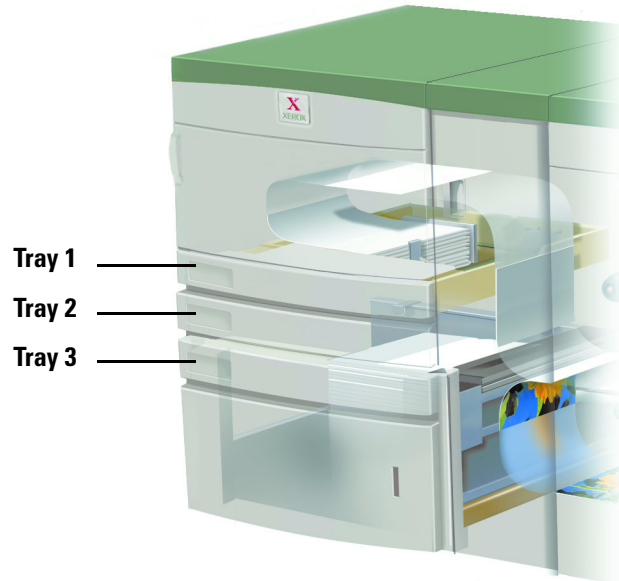

**Figure 1. Trays 1, 2, and 3**

The following figure shows the paper paths for Trays 1, 2, and 3.

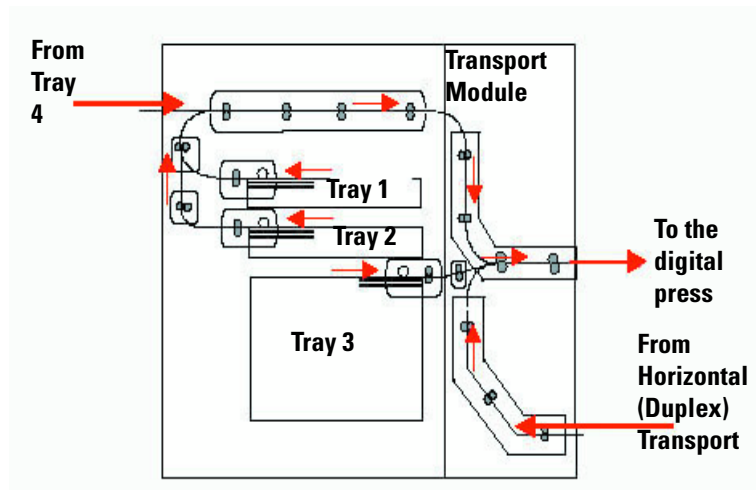

**Figure 2. Paper Path of Trays 1, 2 and 3**

## Paper Guidelines

For the best results, remember the following:

- Do not load paper or other materials above the MAX line.
- Do not use wrinkled, torn, curled, or folded paper.
- Use the recommended paper sizes and weights.
- Do not mix sizes or weights of paper in a paper tray.
- Ensure that the tray indicator LEDs are set for the correct weight range.
- Follow the *Recommended Materials List* suggestions found at: [www.xerox.com](http://www.xerox.com)

Copy paper is fed into the digital press in one of two positions. One position is called long edge feed (LEF). Long edge refers to the long edge of your copy paper. When you see LEF, position your copy paper so the long edge is fed first. The other position is called short edge feed (SEF). Short edge refers to the short edge of your copy paper. When you see SEF, position your copy paper so the short edge is fed first.



**NOTE:** *It is imperative that you load paper with the paper guides adjusted properly. If the paper is NOT loaded properly, it will skew and jams will occur.*

Paper	Tray 1/Tray2	Tray 3
Paper Size	JIS B5 (LEF/SEF) 8.5 x 11 inch/A4 (LEF/SEF) JIS B4 (SEF) ISO B4 8 x 10 inch (LEF) 8.5 x 13 inch (SEF) 8.5 x 14 inch (SEF) 11 x 17 inch/A3 (SEF) 12 x 18 inch (SEF)* 12.6 x 17.7 inch/SRA3 (SEF)*	JIS B5 (LEF/SEF) 8.5 x 11 inch/A4 (LEF/SEF) JIS B4 (SEF) ISO B4 8 x 10 inch (LEF) 8.5 x 13 inch (SEF) 8.5 x 14 inch (SEF) 11 x 17 inch/A3 (SEF) 12 x 18 inch (SEF) 12.6 x 17.7 inch/SRA3 (SEF) 12.6 x 19.2 inch (SEF)
Paper Weight Range	64 - 220 g/m <sup>2</sup>	64 - 280 g/m <sup>2</sup>
Transparencies	No	Yes
Labels	No	Yes
Transfer Paper	No	Yes
Coated Paper	No	Yes
Tabbed Inserts**	No	Yes
Drilled	Yes	Yes

**Table 1. Paper Guidelines**

\*Requires a Paper Guide to be removed to run these sizes.  
Call your Xerox service representative for the Side Guide removal.

\*\*Refer to Non-standard Size Paper in this chapter.



**NOTE:** *If you have an optional High Capacity Stacker (HCS), the back sometimes comes off when printing labels with the Stack Mode selected. Use the Top Tray Mode when printing labels to avoid this problem.*




**KEY POINT:** *When feeding paper short edge feed and you have an optional High Capacity Stacker (HCS), the output must be sent to the High Capacity Stacker Top Tray.*

## Paper Tray Special Features

Special features help control the environmental conditions in the paper trays to ensure optimum print capability:

- Paper Trays 1 and 2 have optional heater kits available.
- Paper Tray 3 has a heater underneath the paper tray that can be activated by your Xerox service representative.
- Paper Tray 3 has two blowers. The lead edge blower is on at all times and produces heated air if the following selections are made: coated paper, transparencies, or plain paper 106 g/m<sup>2</sup> or heavier. The trail edge blower is on at all times and does not produce heated air.
- Paper Tray 3 has air adjust levers on the drawer to regulate the amount of air disbursed. If the paper weight is 150 g/m<sup>2</sup> or less, the position of the air adjust levers should be toward the front of the tray. If the paper weight is 150 g/m<sup>2</sup> or more, the position of the air adjust levers should be toward the rear of the tray.

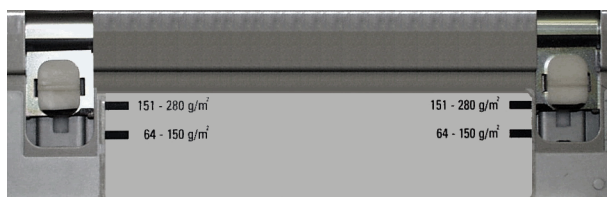

**Figure 3. Trail Edge and Lead Edge Blowers**

## Tray Capacity

---

Paper Trays 1 and 2 have a capacity of 550 sheets of 24 pound (90 g/m<sup>2</sup>) paper.

Paper Tray 3 has a capacity of 2200 sheets of 24 pound (90 g/m<sup>2</sup>) paper.

## Curl

---

When the paper is exposed to heat, the paper loses moisture and curls toward the heat source. High coverage jobs tend to curl more due to the toner plastification effect on the paper surface. The system tries to reduce this by using mechanical devices within the paper path called decurlers.

Your system has been designed with an automatic curl control system that uses information such as: the amount of coverage on the page, paper weight, whether the paper is coated or uncoated, and the current humidity and temperature to determine the amount of pressure needed at the different decurlers to reduce output curl.

If you are experiencing excessive curl, remove the paper from the tray, turn it over and replace it in the tray. If the curl is still excessive, refer to the *System Administration Guide*, Tools Mode chapter, to change the decurler settings to accommodate the environmental and paper conditions.

## Duplexing

---

The DocuColor 2060/2045 duplexes prints from all paper trays up to 220 g/m<sup>2</sup>. The system does not duplex media heavier than 220 g/m<sup>2</sup> or larger than 12.6 x 18" (321.1 x 458.1 mm).




## Transparency Guidelines

Transparencies can be run ONLY from Tray 3.


Use only the transparencies recommended:

- Xerox Removable Paper Stripe: USA and Canada, 3R5765; Xerox Europe, 3R93179.



- Load transparencies into Tray 3 with the paper stripe side facing DOWN and with the stripe as the leading edge. (The leading edge is the edge that feeds into the digital press first.)
- Do not mix paper and transparencies in Tray 3. Jams may occur.
- Ensure that Transparency is selected in the weight section on the paper tray.

## Tabbed Inserts



Tabbed Inserts can be loaded into Tray 3 as non-standard paper.

- Tabbed inserts can be run from, but are not recommended for, optional Tray 4 as non-standard paper.
- When loading, the non-tabbed, short edge of the tabbed insert should be the lead edge to the digital press.
- If a jam occurs while running tabbed sets, there is no recovery procedure.
  - You have to manually reassemble your originals and prints, determine where the job left off, and resume printing or cancel the job and start again.
- The size of the tabbed insert should be 9 x 11 inch (229 x 279 mm) for letter size tabs (223.5 x 296 mm for A4 equivalent tabs).
  - The proper weight of the insert should be selected on the tray.
- Select Non-standard size and input 11 inches or 296 mm for A4 as the X axis and 9 inches or 223.5 mm for A4 as the Y axis dimensions for SEF.

Refer to the *System Administration Guide* for the procedure to program non-standard size paper.


## Drilled Paper

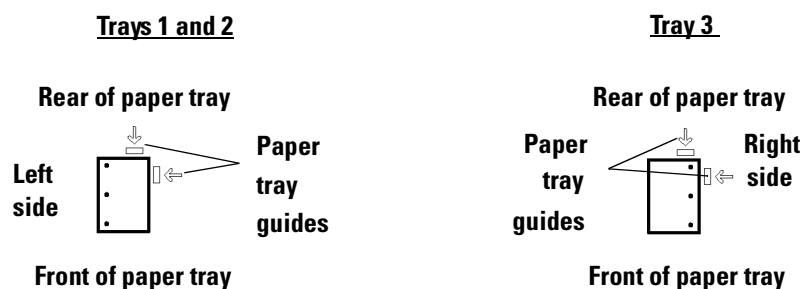3-hole drilled paper can be run only from Trays 1, 2, and 3. 3-hole drilled paper does not run reliably from the optional Tray 4.

Drilled paper should be run in the Simplex (1-sided) and Duplex (2-sided) orientations shown below to avoid paper jams caused by the holes not aligning correctly with the paper sensor in the press.


### Simplex Print Jobs

Load the drilled paper into Trays 1, 2, or 3 Long Edge Feed (LEF) with the holes at the lead edge position. Refer to the following illustration:




### Duplex Print Jobs

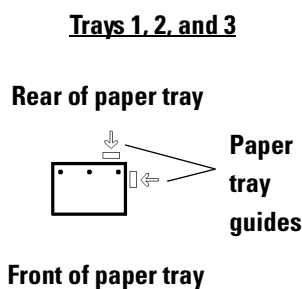Load drilled paper into Trays 1, 2, or 3 with the holes positioned toward the **rear** of the paper tray. Refer to the following illustration:



**NOTE:** If you are stapling 3-hole drilled paper with the optional High Capacity Stacker Stapler, refer to the Accessories chapter for paper loading instructions, based on the position of the staple.

## Letterhead



Different inks and dry inks/toners are used to produce preprinted letterhead that may not pass through the digital press intact.

Refer to the Specialty Media Guide that came with your documentation for information on using preprinted letterhead paper.

## Non-standard Size Paper

Non-standard Size Paper (7.2 to 12.6 (LEF) or 7.2 to 19.2 (SEF)) can be loaded into Tray 3 and optional Tray 4. Ensure that Non-standard Size Paper is selected on Tray 3 and optional Tray 4. Refer to the *System Administration Guide* for the procedure to program Non-standard Size Paper.

## Oversize Paper


Oversize paper (12 x 18" (SEF) or 12.6 x 17.7"/SRA3 (SEF)) can be loaded in Trays 1 and 2 after the paper guides are removed by a Xerox service representative. Refer to the *System Administration Guide* for the procedure to program oversize paper.

## Auto Tray Switching

When Auto Tray Switching (ATS) (this feature may not be available with your configuration) is activated in the Tools Mode, the digital press automatically switches to another tray containing paper of the identical size, weight, type, and feeding orientation (SEF or LEF) when the tray being used is empty. Refer to the *System Administration Guide* for the instruction on enabling ATS.

## Auto Paper

Auto Paper automatically senses the size of the original and selects the proper paper tray for output. Refer to the *System Administration Guide* for information on how to activate Auto Paper Supply.

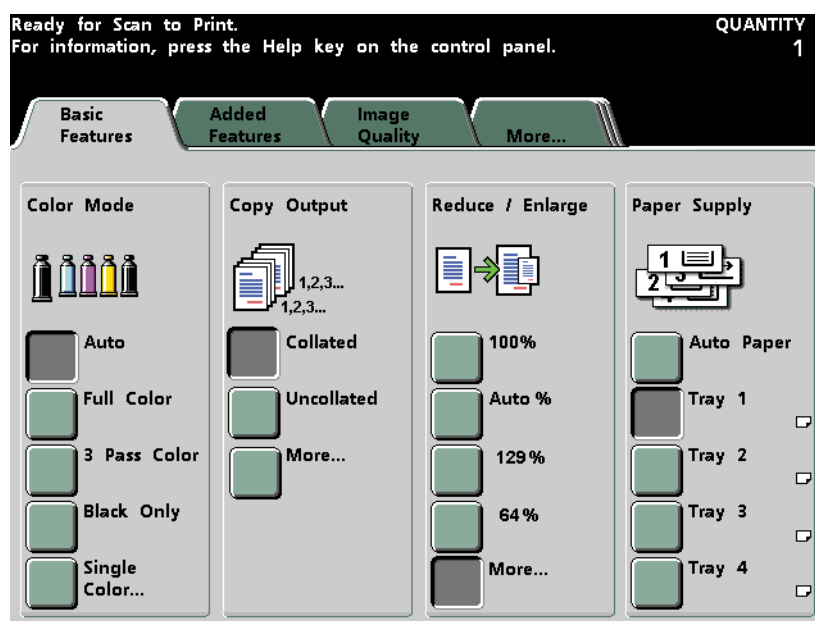

**Figure 4. Basic Features Screen**

## Loading Paper

123...

1

Pull out the tray slowly until it stops.

2

Load the correct size paper into the tray in the correct feeding orientation. Refer to the orientation labels on each tray.




**NOTE:** Do not load materials above the MAX line located on the Edge Guide.


- Load the paper seam side (the side on which the ream of paper is sealed) down in Tray 1 and Tray 2.
- Load the paper seam side (the side on which the ream of paper is sealed) up in Tray 3.



**NOTE:** Many suppliers use arrows on the product labels to indicate the preferred side to image first. Use this side (as signaled by the arrow) as equivalent to the seam side when loading the paper.

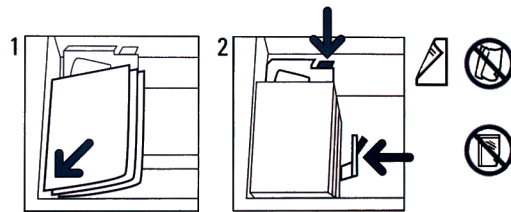

**Figure 5. Paper Orientation for Trays 1 and 2**

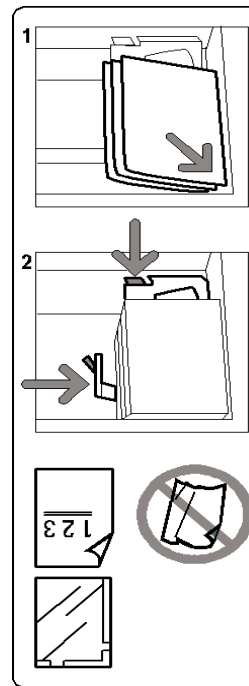

**Figure 6. Paper Orientation for Tray 3**

- 3** Adjust the paper guides by pressing in the guide release and carefully moving the Edge Guide until it lightly touches the edge of the material in the tray.

- 4** Although Trays 1, 2, and 3 have auto size detection capability, the paper weight (g/m<sup>2</sup>) range must be selected on the Weight Indicator. Selecting the correct paper weight range affects the feed performance and Image Quality. Press the **selection button** until the light next to the correct weight is illuminated.

Tray 1 has a chart which converts pounds into g/m<sup>2</sup> for easy selection, or refer to the Paper Weight Conversion Tables in this chapter.



**NOTE:** The Indicator light will illuminate for the paper weight selected. The Indicator is on the frame of the digital press to the right of the tray and can only be seen when the tray is pulled out.



**Figure 7. Paper Trays 1 and 2 Weight Indicator on the Frame**

- 5 In addition to designating the correct paper weight for Tray 3, select **Non-Standard** or **Standard** paper and **Coated** or **Uncoated** paper.

Paper Size		Paper Weight (g/m <sup>2</sup> )							Paper Type	
Non-Standard	Standard	Transparency	64 - 80	81 - 105	106 - 135	136 - 150	151 - 220	221 - 280	Coated	Uncoated
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

Figure 8. Paper Tray 3 Indicator

- 6 Close the tray slowly to avoid shifting the paper stack.



**KEY POINT:** *If you hear paper being crumpled or torn, stop closing the tray. Remove all pieces of any damaged paper and close the tray slowly.*



## Paper Weight Conversion Tables

### Specific Weight Conversion

Grammage g/m <sup>2</sup>	Xerographic Bond, Writing, pounds  17 x 22 inch - 500 sheets	Offset, Text, Book, pounds  25 x 38 inch - 500 sheets	Cover, pounds  20 x 26 inch - 500 sheets	Index, pounds  25.5 x 30.5 inch - 500 sheets	Bristol and Tag, pounds  22.5 x 28.5 inch - 500 sheets
50	13	34	18	28	23
60	16	41	22	33	27
64	17	43	24	35	29
75	20	50	28	41	34
80	21	54	30	44	36
90	24	60	33	50	41
105	28	70	39	58	48
120	32	80	44	66	55
135	35	90	50	75	62
150	40	100	55	83	67
158	42	107	58	87	72
163	43	110	60	90	74
176	47	119	65	97	80
200	53	135	74	110	91
203	54	137	75	112	93
216	57	146	80	119	98
220	59	149	81	122	100
259	66	169	92	140	114
280	74	189	104	155	128



Yellow shading indicates grades widely used for this classification

## Weight Conversion Ranges

Grammage g/m <sup>2</sup>	Xerographic Bond, Writing, pounds  17 x 22 inch - 500 sheets	Offset, Text, Book, pounds  25 x 38 inch - 500 sheets	Cover, pounds  20 x 26 inch - 500 sheets	Index, pounds  25.5 x 30.5 inch - 500 sheets	Bristol and Tag, pounds  22.5 x 28.5 inch- 500 sheets
64 - 80	17 - 21	43 - 54	24 - 30	35 - 44	29 - 36
81 - 105	22 - 28	55 - 70	31 - 39	45 - 58	37 - 48
106 - 135	29 - 36	71 - 90	40 - 44	59 - 75	49 - 62
136 - 150	37 - 40	91 - 100	45 - 55	76 - 83	63 - 67
151 - 220	41 - 59	101 - 149	56 - 81	84 - 122	68 - 100
221 - 280	60 - 74	150 - 189	82 - 104	123 - 166	101 - 128

## 4. Scanner

---

### Scanning

---

The Scanner and Duplex Automatic Document Feeder (DADF) are optional accessories for the DocuColor 2060/2045. This chapter will familiarize you with the scanner features you can use for scan-to-print jobs. The following scanner functions are discussed:

- Basic Scanning Steps
- The DADF
- Conditions such as Auto Rotation, White Border, etc.
- Basic Features
- Added Features
- Image Quality
- Output Format
- Job Assembly

## Basic Scanning Steps

If the DADF belt is dirty and the original is a thin or transparent document, background may appear on the copy. This may also occur when copies are made using the Document Glass. Place a white sheet of paper of the same size on top of the document being copied to eliminate background until the belt is cleaned.

Use the following steps for one-sided copies. Refer to the Basic Features section for two-sided copies.

123...

- 1** Touch the **Basic Features** tab.
- 2** Press the **Clear All** button to clear any previous programming.
- 3** Lift the DADF and place the original face down on the Document Glass and close the DADF. Do not press down on the DADF with excessive force when scanning thick originals such as books.
- 4** Ensure that the document is registered using the same orientation on the Document Glass as the paper in the chosen paper tray (that is, LEF on the glass if the paper in the chosen paper tray is LEF; SEF on the glass if the paper in the chosen paper tray is SEF).



**Figure 1. Original Registration on the Document Glass**

- The digital press with scanner will have difficulty recognizing the size of the original if the following are placed on the Document Glass.
  - Highly transparent originals, such as transparencies or tracing paper.
  - Originals with dark edges.
  - Photographs with dark edges and without a white border.
  - Shiny originals.
  - Originals with dark backgrounds.
  - Thick originals such as books.
  - Originals copied with the DADF open, and the area housing the digital press is brightly lit.

Refer to Document Type/Dark Edges in Image Quality to scan originals with dark edges.

5

Enter the required quantity of copies using the keypad.

If you enter an incorrect quantity, press the **C (Clear)** button.

6

Select any other required features by touching the button corresponding to the feature. Some screens require that you touch **Save** to save your selections or **Cancel** if the selection made is incorrect.

7

Press the **Start** button.

You can press **Start** while the digital press is warming up. The scanning process begins automatically at the end of the warm-up time.

To stop the scan process, press the **Pause** button.



**KEY POINT:** *Do not use excessive force to press down on the Duplex Automatic Document Feeder when scanning bound documents.*

**KEY POINT:** *You may not use the Auto Color option if the Duplex Automatic Document Feeder must remain open during scanning. The digital press with scanner will not operate until you make a different selection under the Color Mode feature.*

For additional information on materials, refer to the *Color Materials User Guide* and the *Recommended Materials List* for paper guidelines. The *Recommended Materials List* is a downloadable file on [www.xerox.com](http://www.xerox.com). Use the search parameters DC 2060 or DC2045 and follow the path until you reach the files that can be downloaded.

## Duplex Automatic Document Feeder (DADF)

### Document Specifications

Documents should meet the guidelines for optimum operation. Document jams may occur if originals other than those recommended are used. Jams may damage the originals.

- The original should be uncoated paper and the weight of the original should be from 16 to 32 pound (64 to 128 g/m<sup>2</sup>).
- 8.5 x 5.5 inches, 8.5 x 11 inches, 8.5 x 14 inches, 11 x 17 inches, A5, A4, A3, and 8.5 x 13 inches are recommended original sizes.

If the DADF senses documents in the feeder other than those recommended, a message displays and the digital press stops. Place the original documents on the Document Glass, or enter the document size by using the Original Size feature in the *Added Features* tab.

If the input document is slightly smaller or larger than a standard size document, the Duplex Automatic Document Feeder may detect it as a standard size document. Dark areas or image loss along the edges may occur. Enter the document size by using the Original Size feature or the Edge Erase feature in the *Added Features* tab.

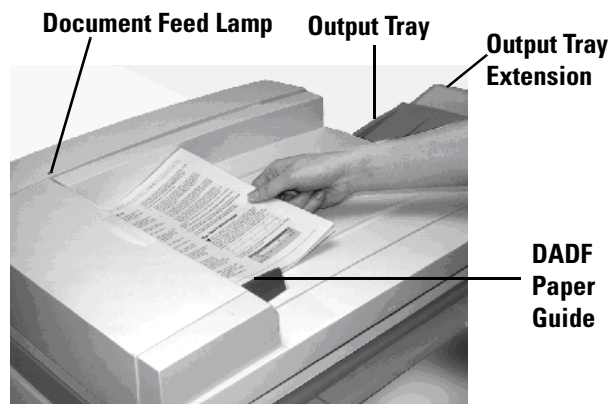
The following document types cause document jams or malfunction of the DADF. Make copies of these documents by placing them directly on the Document Glass.

- Book, pamphlet, and booklet documents
- Broken, creased, or paste-up documents
- Documents with clips and staples
- Transparent documents (the document size cannot be detected automatically or the DADF belt is copied)
- Documents with black carbon
- Documents smaller than A5 size (8.5 x 5.5 inches)
- Paper weight heavier than 32 pound (128 g/m<sup>2</sup>)
- Coated paper



**KEY POINT:** *If you are using the Duplex Automatic Document Feeder (DADF) to scan more than 50 originals, you can use the Additional Originals option to scan the entire stack of originals as one scan to print job. The Additional Originals feature must be enabled in Tools Mode. Refer to the System Administration Guide for information on how to enable this feature.*

## Identifying Duplex Automatic Document Feeder (DADF) Parts



SCANNER

**Figure 2. DADF**

Part	Description
Document Feed Lamp	Lights when the original is properly seated in the DADF and ready to be scanned.
Paper Guide	Must be adjusted lightly against the original.
Output Tray	After the original is scanned it is fed to the Output Tray.
Output Tray Extension	If you have an 8.5 x 14 inch or larger original, pull out the Output Tray Extension to help support the output.

## Using the Duplex Automatic Document Feeder (DADF)

123...

- 1** Remove any paper clips or staples from the documents.
- 2** Place up to 50 same size or mixed size from 16 to 32 pound (64 to 128 g/m<sup>2</sup>) documents face up in the DADF Tray. Slide the documents to the left until the green Document Feed Lamp is lit.
- 3** Ensure that the paper guide is against the document.
- 4** Extend the DADF Output Tray to accommodate longer length output.
- 5** Press the **Clear All** button to clear any previous programming.
- 6** Touch the **Basic Features** tab.
- 7** Enter the required quantity of copies using the keypad.  
If you enter an incorrect quantity, press the **C (Clear)** button.
- 8** Select any other required features by touching the button corresponding to the feature. Some screens require that you touch **Save** to capture your selections.
- 9** Press the **Start** button to begin the scan operation. The original is fed from the top of the stack to the Document Glass to be scanned then face down to the DADF output tray on the right.



**NOTE:** If the DADF belt is dirty and the original is a thin or transparent document, background may appear on the copy. This may also occur when copies are made using the Document Glass. Place a white sheet of paper of the same size on top of the document being copied to eliminate background until the belt is cleaned.

For additional information on materials, refer to the *Color Materials User Guide* and the *Recommended Materials List* for paper guidelines. The *Recommended Materials List* is a downloadable file on [www.xerox.com](http://www.xerox.com). Use the search parameters DC 2060 or DC2045 and follow the path until you reach the files that can be downloaded.



## Clearing a DADF Jam



*Figure 3. Left Cover of the DADF*

123...

- 1** Open the left cover of the DADF.
- 2** Carefully remove the jammed original. If the original tears, ensure all pieces are removed.
- 3** Follow all instructions on the Touch Screen.
- 4** Press **Start** to resume the job.

## Auto Image Rotation

---

The DocuColor 2060/2045 offers an automatic rotation feature for 8.5 x 11 inch, or A4, original documents input from both the Duplex Automatic Document Feeder and the Document Glass. This feature must be activated through Tools Mode. Refer to the *System Administration Guide* for the procedure.

If the scanner detects that the orientation of the original document is different from the orientation of the paper tray selected, an orientation mismatch message appears and asks if you want to rotate the image. Select "Yes" to rotate the image.

If you do not want to rotate the image, select "No". Use the Reduce/Enlarge feature, on the Basic Features tab, to fit the image onto the paper orientation selected.

## White Border Edges on Copies

---

All copies made on the DocuColor 2060/2045 have white border edges on four sides of the output. There is a factory setting which removes 2 mm from all four edges of the scanned original. This factory setting cannot be altered.

If the white border edges result in image loss on your copies, select the Auto% option in the Reduce/Enlarge feature to minimize the image loss. The Auto% option automatically reduces or enlarges the copy, based on the size and orientation of the document and the paper tray selected. This option is applied only to standard size documents.

You may also use the Auto Center feature to ensure the original is centered on your output. For more information on Auto Center, refer to the Edge Erase feature in the *Added Features* section.

## Touch Screen

Use the Touch Screen to select features and options that specify the appearance of the scanned output.

The Touch Screen also displays messages that indicate the status of the digital press during idle, run, or fault conditions.

The Touch Screen displays the default screen selected in the Tools Mode by your System Administrator. The default screen can be the *Basic Features*, *Job Status* or *Machine Status* screen.

### Message Area

The message area at the top of the Touch Screen displays messages concerning the digital press status, programming conflicts, or errors. The messages may also provide instructions for the operator.

Tabs/Buttons/Icons

Some screens on the Touch Screen display tabs which contain selectable options.

Features and options are initially set to the factory default settings. These settings can be changed by your System Administrator in Tools Mode.

Ask your System Administrator for more information regarding these selections, or refer to the Tools chapter of the *System Administration Guide*.

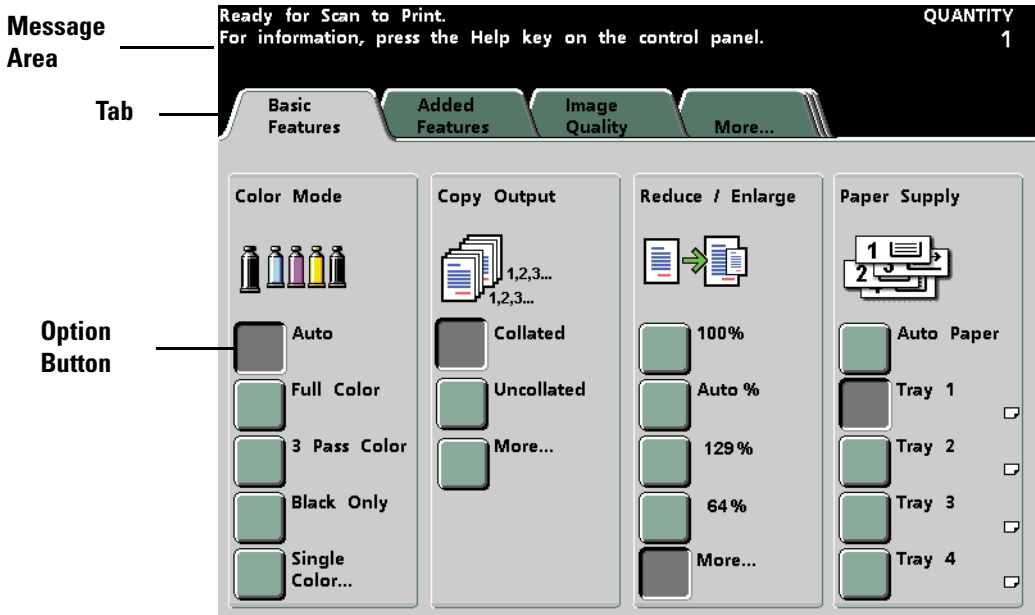


Figure 4. Message Area, Tabs and Option Buttons

## ***Touch Screen Button Types and Functions***

Selectable Touch Screen buttons are in color and shadowed. These buttons change appearance when selected. The standard button types are described as follows:

- **Option buttons**

Option buttons are blank with words or graphics to the side.

Some features have more options associated with them than can be displayed on one screen. Touching a **More...** button displays a screen with more options.

- **Icon buttons**

Icon buttons are Option buttons that display icons.

- **Arrow buttons**

Arrow buttons allow you to change values for features such as Variable Reduce/Enlarge.

Touch the **up arrow** to increase the value; touch the **down arrow** to decrease the value. Changes are displayed in the value boxes.

Values on the DocuColor 2060/2045 are set in millimeters (mm) and inches.


- **Fixed selection buttons**

Fixed selection buttons allow you to select preset (default) values indicated on the Touch Screen.

- **Cancel and Save buttons**

The **Cancel** button allows you to cancel selected feature options without saving them.

The **Save** button allows you to save selected feature options.

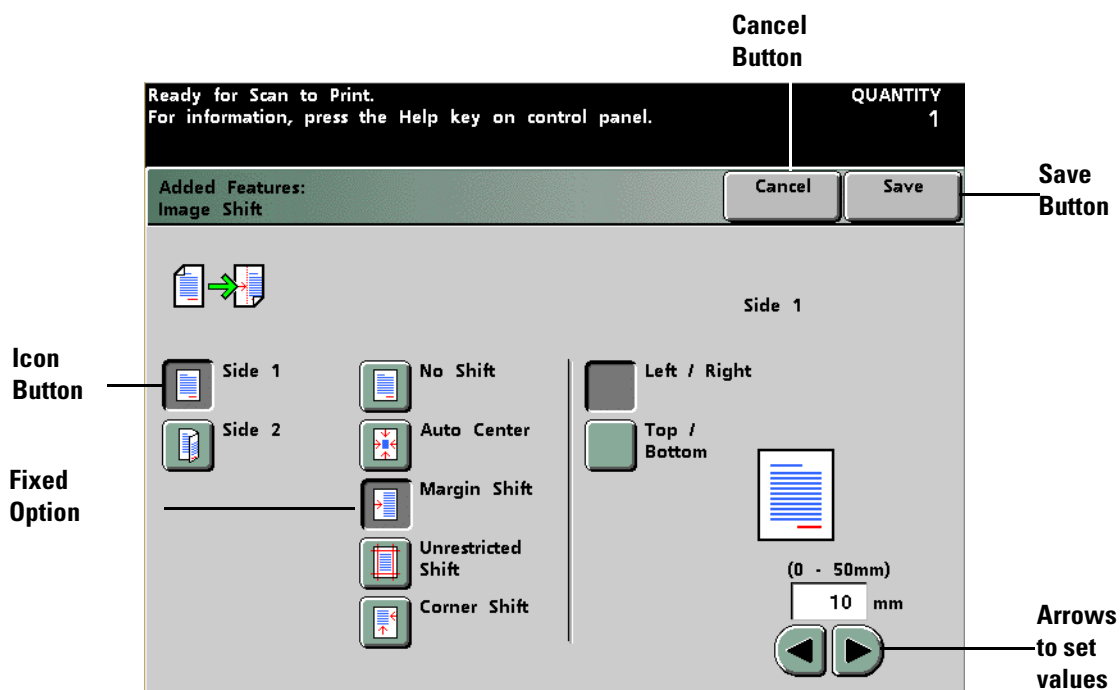


**Figure 5. Screen Button Types**

## Features (Digital Press with Scanner Only)

Features and options discussed follow the factory default settings. You may see different settings, depending on the options your System Administrator has selected in Tools Mode.

### Basic Features

The *Basic Features* tab contains the basic selections necessary for scanning a document. Touch the feature button desired. Tray 4 appears in the Paper Supply column only when an optional Tray 4 has been connected to the digital press. Auto Paper does not show for all configurations.

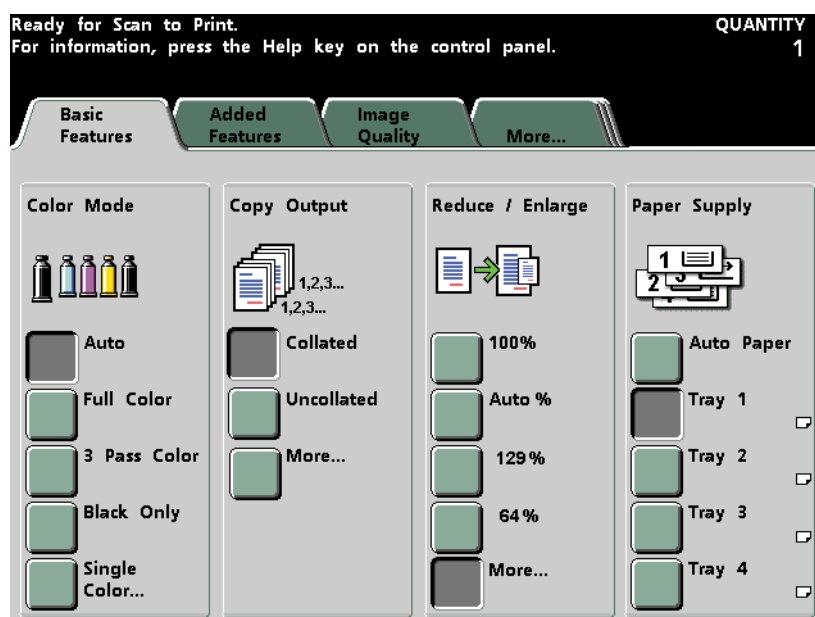

**Figure 6. Basic Features Screen**

## Color Mode

---

### Auto

---

The Auto feature, located in the Color Mode column on the *Basic Features* screen, enables the DocuColor 2060/2045 to automatically sense if the original document is in color or black and white. If the original is in color, the DocuColor 2060/2045 automatically uses Full Color. If the original is in black and white, the DocuColor 2060/2045 automatically uses Black Only, which reduces color dry ink used.

Gold, silver, and fluorescent colors cannot be copied accurately. The dry inks (toners) do not contain the metallic particles necessary to accurately reproduce gold and silver colors or the fluorescent properties that are required to reproduce fluorescent colors.

With the Auto Color option, some very dark colors may be sensed as black and therefore copied as black. In these cases, select the Full Color option.

For the scanner to accurately sense the presence of color on a document during the prescan cycle, the color area on the document must be greater than 2 inches x 2 inches (approximately 50 mm x 50 mm). If the color area is less than 2 inches x 2 inches (approximately 50 mm x 50 mm), select the Full Color option.



---

### **Full Color**

---

Select the Full Color option, located in the Color Mode column on the *Basic Features* screen, when the original contains color and black. In the Full Color Mode, the DocuColor 2060/2045 uses all four colors: cyan, magenta, yellow, and black for the output document.

---

### **3 Pass Color**

---

Select the 3 Pass Color option, located in the Color Mode column on the *Basic Features* screen, when the document contains very little black, or when Process Black is acceptable over a true reproduction black (used with photographs, for example). The DocuColor 2060/2045 uses only cyan, magenta, and yellow to produce the output image.

Process Black is a combination of cyan, magenta, and yellow. The three dry inks (toners) are combined together in equal amounts to produce black. No Black dry ink (toner) is used.

---

### **Black Only**

---


In the Black Only mode, the digital press uses only black dry ink (toner) and the output is black only regardless of the colors in the original. The Black Only feature is located in the Color Mode column on the *Basic Features* screen.

## Single Color

Select from the color palette displayed. In the Single Color Mode, the percentages of cyan, magenta, and yellow can be adjusted to vary the output hue.

123...


- 1 Touch the **Single Color...** button on the *Basic Features* screen. The *Single Color Palette* screen is displayed.

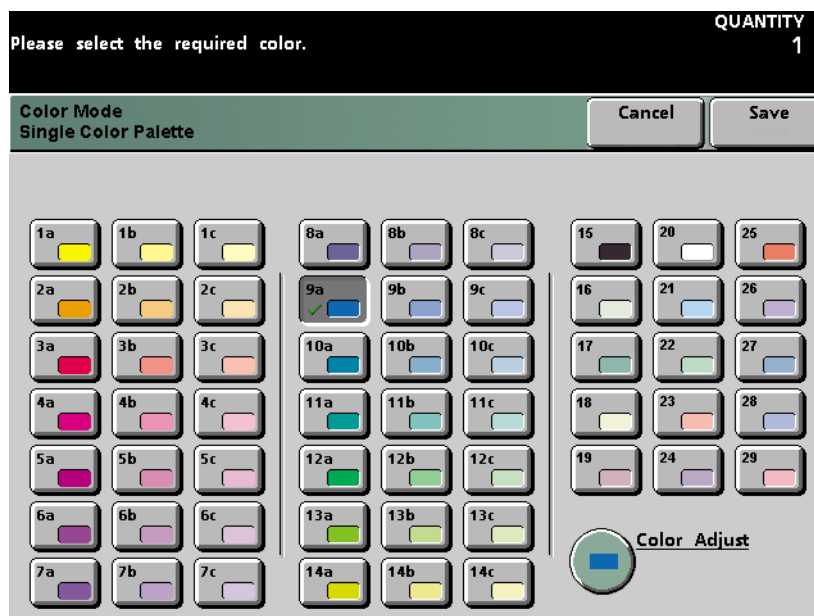

**Figure 7. Single Color Palette Screen**

- 2 Select the desired color from the color palette.
- 3 Touch the **Color Adjust** button. The *Color Adjust* screen is displayed.

- 4** If you want to adjust the hue, press the up/down buttons to adjust the percentages of cyan, magenta, and yellow. The box reflecting the overall color changes as the color is adjusted. Touch **Save** when the desired hue has been achieved.

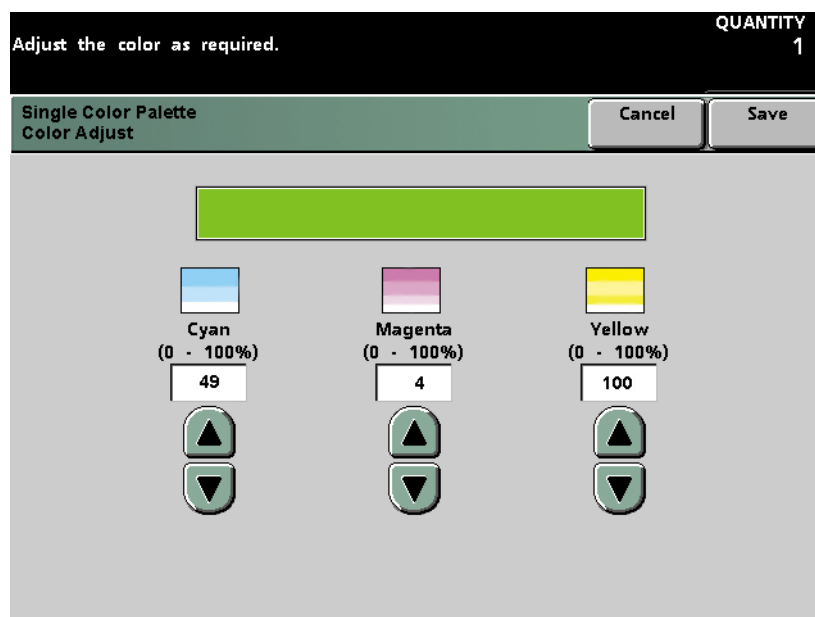

**Figure 8. Color Adjust Screen**

- 5** Continue selecting options for your job.
- 6** When you are finished selecting options, press the **Start** button.

## Output

### Collated

Collated refers to copies that are delivered as sets and offset in the output device.

Each set is in the order in which the originals were placed in the DADF (1, 2, 3..., 1, 2, 3).

The Collated option is located in the Output column on the *Basic Features* screen.

### Uncollated

Uncollated refers to copies that are delivered to the output device in the order in which they were copied (1, 1, 1,..., 2, 2, 2,..., 3, 3, 3,...).


The Uncollated option is located in the Output column on the *Basic Features* screen.

### More...

The More... button, located in the Output column on the *Basic Features* screen, gives access to the following options:

- **Auto** The digital press selects the optimal output orientation automatically.
- **Face Up:** Output is delivered to the output device face up.
- **Face Down:** Output is delivered to the output device face down.

Output Assembly has two options: **Collated** and **Uncollated**.

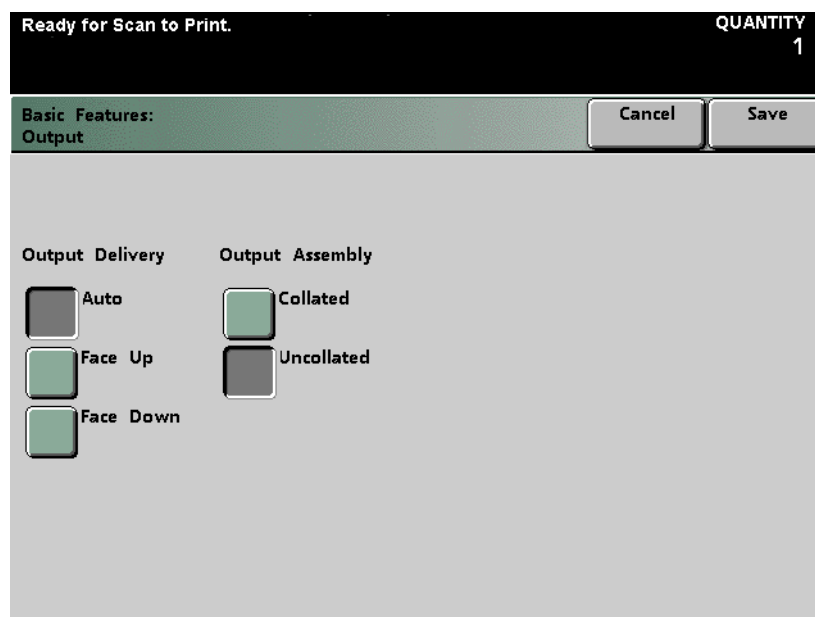

**Figure 9. Output, More... Screen**

## Reduce/Enlarge


The Reduce/Enlarge feature, located on the *Basic Features* screen, allows you to select the size of the output image from preset values or through independent ratios for the image length and width. The DocuColor 2060/2045 can also be set up for automatic reduction or enlargement.

Depending on what the System Administrator has selected, you see several percentage options for reduction or enlargement.

For example, 78% reduces an 8.5 x 14 inch image to fit on 8.5 x 11 inch paper.

Copies may be reduced to 25% or enlarged to 400%.

If the image on the document extends to the edge of the page, press the **More...** button in the Reduce/Enlarge column, and select **Whole Image** to minimize the image loss on the copies.

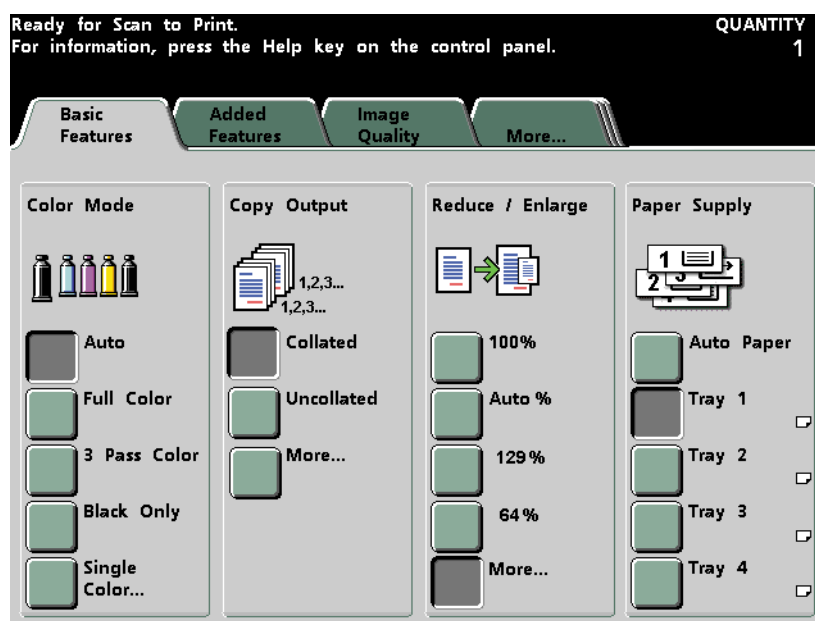

**Figure 10. Basic Features Screen**

### 100%

---

100%, located in the Reduce/Enlarge column on the *Basic Features* screen, ensures that the entire original is copied if the paper tray selected and the original are the same size.

### Auto%

---

The Auto% option, located in the Reduce/Enlarge column on the *Basic Features* screen, automatically reduces or enlarges the image, based on the size and orientation of the document and the paper tray selected. This option is applied only to standard size documents.

Select Auto% when the original document and the copy paper are different sizes.



**KEY POINT:** *A factory default setting of 2 mm edge erase applies to making copies. This setting cannot be altered.*

The image is reduced or enlarged in the same proportions for the X (horizontal) and Y (vertical) directions.

The Auto Paper option in Paper Supply is not available when Auto% is selected and may not be available for your configuration.

### Third Button

---

The third button in the Reduce/Enlarge column is set to a factory default. 129% is an example of how the value can be set. This factory default can be changed in the Tools Mode. For more information on how to change this default, refer to the *System Administration Guide*.

### Fourth Button


---

The fourth button in the Reduce/Enlarge column is set to a factory default. 64% is an example of how the value can be set. This factory default can be changed in the Tools Mode. For more information on how to change this default, refer to the *System Administration Guide*.

## More...

- **100%:**

100% ensures that the entire original is copied if the paper tray selected and the original are the same size.

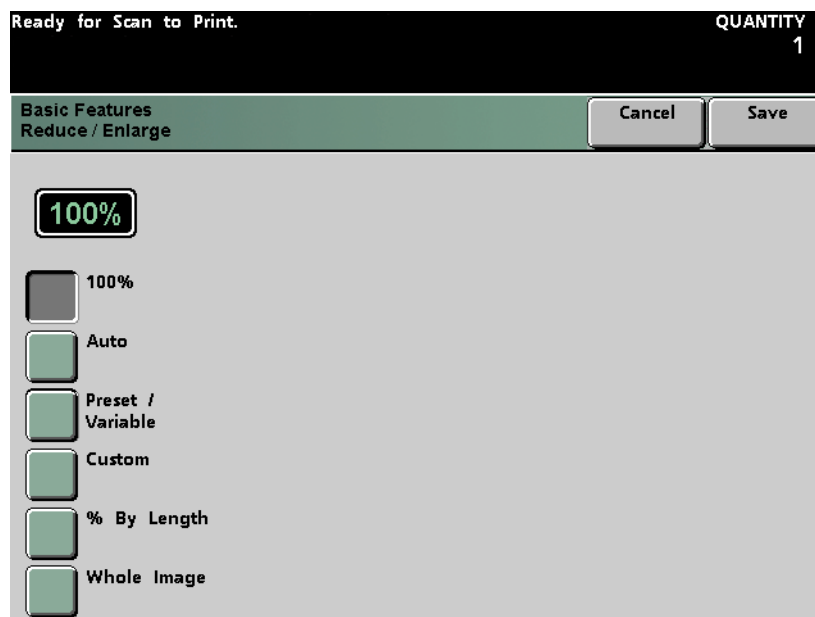

**Figure 11. Reduce/Enlarge, More... Screen**

- **Auto%:**

The Auto% option automatically reduces or enlarges the copy, based on the size and orientation of the document and the paper tray selected. This option is applied only to standard size documents.


- **Preset/Variable:**

Preset is the quickest way to select a desired magnification. Up to six Presets are available at one point in time, and the values of Presets can be changed in Tools Mode. Refer to the *System Administration Guide* for procedures.

You can set Variable values using the arrows or you can input the numeric value from the keypad for values from 25 to 400%.

123...

- 1 Touch the **More...** button on the *Basic Features* screen
- 2 Touch the **Preset/Variable** button. The *Preset/Variable* screen is displayed.

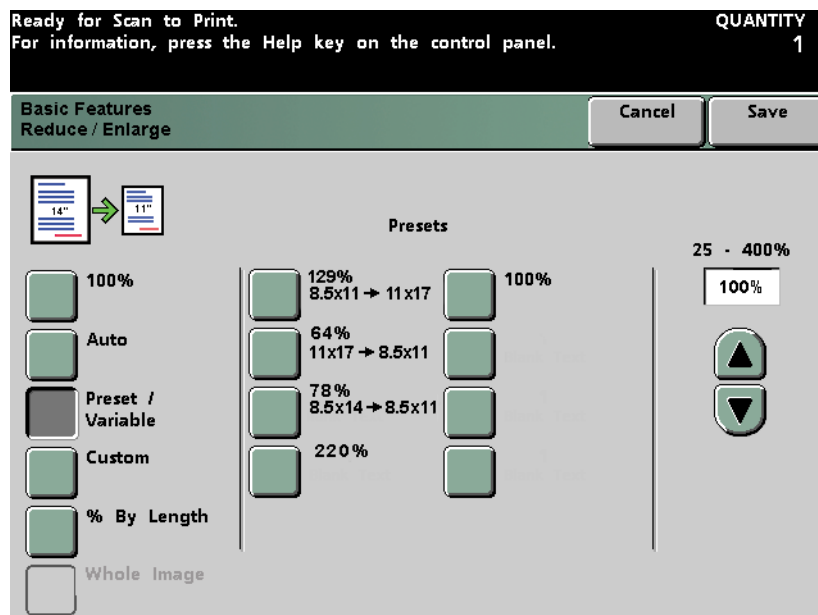

**Figure 12. Preset/Variable Screen**

- 3 If you select a Preset percentage. Press **Save**. If you choose to input a variable percentage, either press the up/down arrows to the desired percentage or enter the number by using the keypad. Press **Save**.
- 4 Continue selecting options for your job.
- 5 When the option selections are complete, press **Start**.




- **Custom:**

To customize, 25 to 400% can be selected independently on both the X and Y axis using the up and down arrows.

Auto Custom automatically reduces or enlarges the width and length of the image on the original by different percentages. The percentage is based on the prescanned size of the original document in relation to the size of the paper selected.

123...

- 1 Touch the **More...** button on the *Basic Features* screen.
- 2 Touch the **Custom** button. The *Custom* screen is displayed.

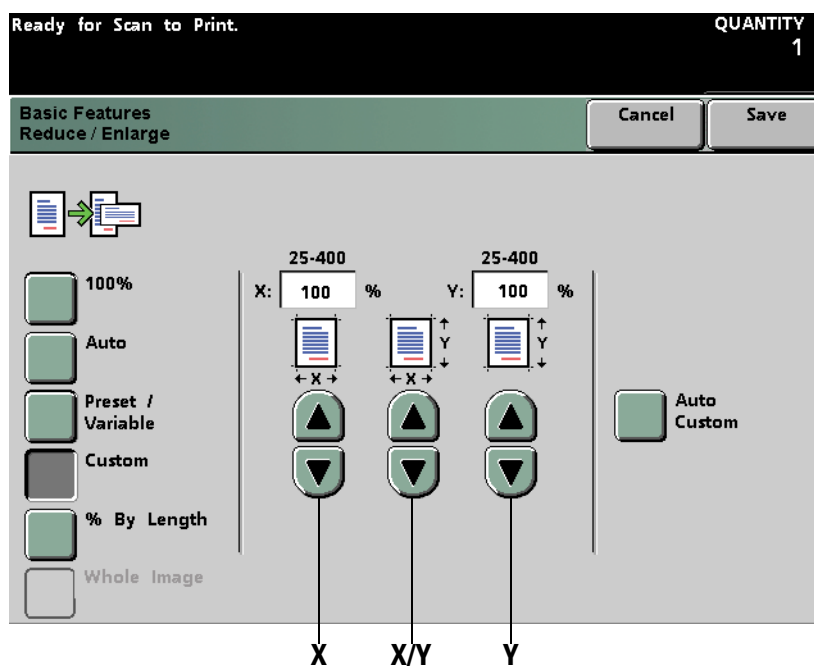

**Figure 13. Custom Screen**


- 3 Select an independent variable percentage for the X axis using the X up and down arrow buttons. Select an independent variable percentage for the Y axis using the Y up and down arrows, OR select the percentage simultaneously for the X and Y axis using the X/Y up and down arrow buttons.
- 4 Press **Save**.
- 5 Continue selecting options for your job.
- 6 When the option selections are complete, press **Start**.

- **% by Length:**

Input the Length of the Original from 0.1 to 17 inches and the Length of the Copy Paper from 0.1 to 17 inches. The digital press compares the length and width of the original to the length and width of the paper in the tray selected, and then calculates the correct magnification to produce the desired output.

123...

- 1 Touch the **More...** button on the *Basic Features* screen.
- 2 Touch the **% by Length** button. The *% by Length* screen is displayed.

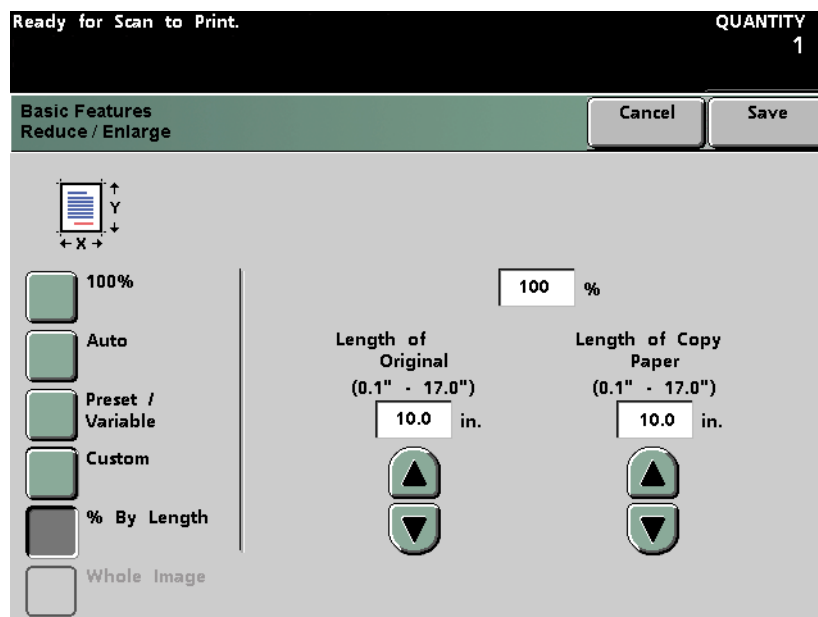

**Figure 14. % by Length Screen**

- 3 Input the length of the original using the up and down arrow buttons.
- 4 Input the length of the copy paper using the up and down arrow buttons.
- 5 Press the **Save** button.
- 6 Continue selecting options for your job.
- 7 When you have finished selecting options, press **Start**.


- **Whole Image:**

The Whole Image feature prevents a loss of image at the edges of your print by automatically fractionally reducing a bleed edge original image. Use Whole Image when you have selected 100% or Auto% in the Reduce/Enlarge feature.

Set the Edge Erase feature to 0mm.

Whole Image cannot be used with the following features. (These features may not be available for your configuration.)

- Image Shift
- 12 x 18 inch setting on Tray 3
- Repeat Image
- Poster
- Color Bar
- N-Up
- Mirror Image
- Booklet Creation

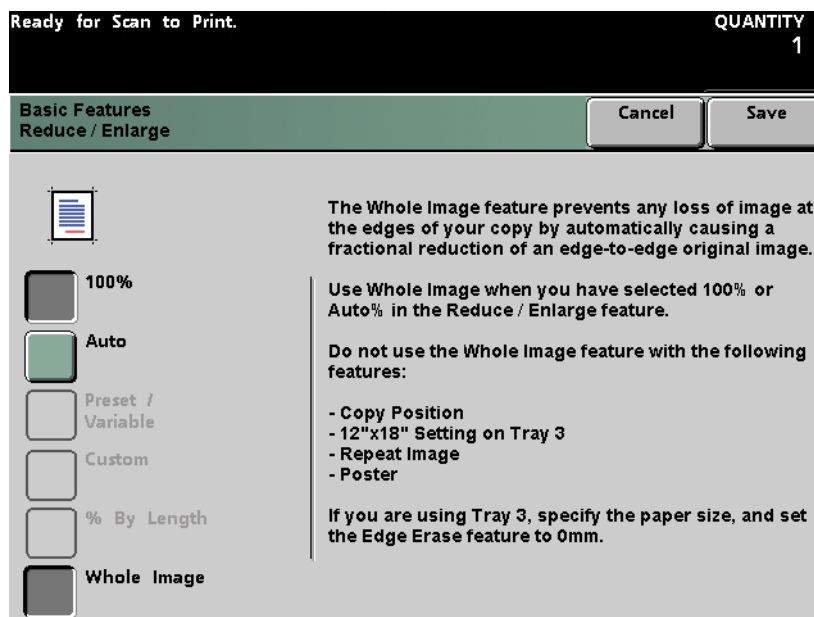

**Figure 15. Whole Image Screen**

---

**Common Percentage Conversions**

---

Percentage	Paper sizes
64%	11 x 17 inch to 8.5 x 11 inch
129%	8.5 x 11 inch to 11 x 17 inch
70%	A3 to A4
78%	8.5 x 14 inch to 8.5 x 11 inch
141%	A4 to A3
154%	5.5 x 8.5 inch to 8.5 x 11 inch
220%	3.5 x 8.5 inch to 8.5 x 11 inch

**Table 1. Common Percentage Conversions**

## Paper Supply

There are three standard paper trays standard with the digital press. Tray 4 is an optional high capacity feeder. Paper size is set by adjusting the paper guides in each tray. Refer to Paper and Paper Trays for tray paper weight selection. The Paper Supply also indicates how much paper is remaining in the paper trays.

Follow the procedure below to choose the desired Paper Tray.

123...


- 1** Touch the **Basic Features** tab.
- 2** Touch the tray loaded with the appropriate paper for the job (Tray 1, Tray 2, Tray 3, or optional Tray 4).  
Tray 4 will only appear if you have an optional Tray 4 connected to your Digital Press.
- 3** Continue selecting options for your job.
- 4** When you are finished selecting options, press **Start**.

## Auto Paper

Auto Paper automatically senses the size of the original and selects the proper paper tray for output. For more information on how to activate Auto Paper, refer to the *System Administration Guide*.

## Added Features

The *Added Features* tab gives you more selections for additional complex copy jobs.

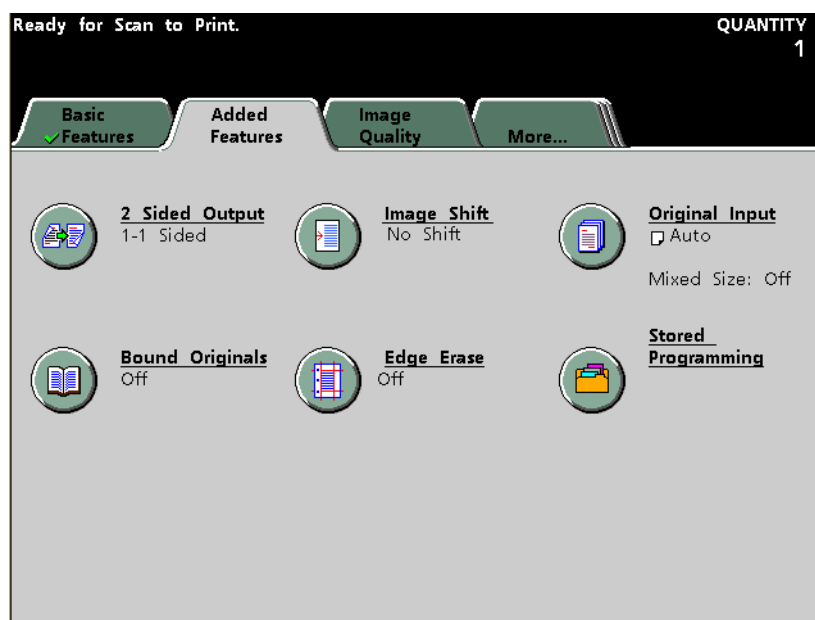

**Figure 16. Added Features Screen**


### 2 Sided Output

Use the 2 Sided Output feature to scan 1-sided or 2-sided originals for 1-sided or 2-sided output.

The 2 Sided Output feature can be used with 16 through 28 pound (64 through 105 g/m<sup>2</sup>) paper, or for standard paper sizes smaller than 12 x 18 inches (A3).

## 1-1


This scans a 1-sided original and produces 1-sided output.

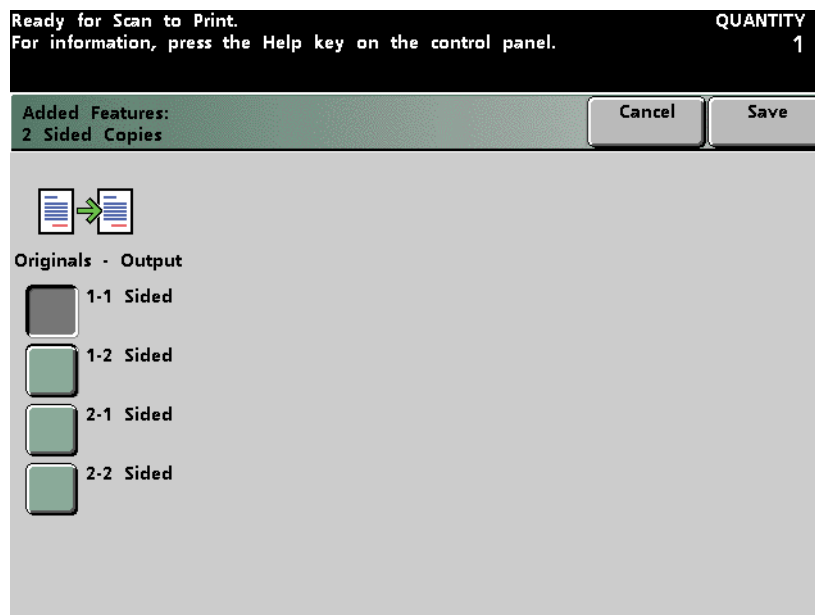

**Figure 17. 1-1 Sided Screen**

## 1-2


This scans 1-sided originals and creates 2-Sided output. Indicate the orientation of the copies to be Head to Head or Head to Toe.

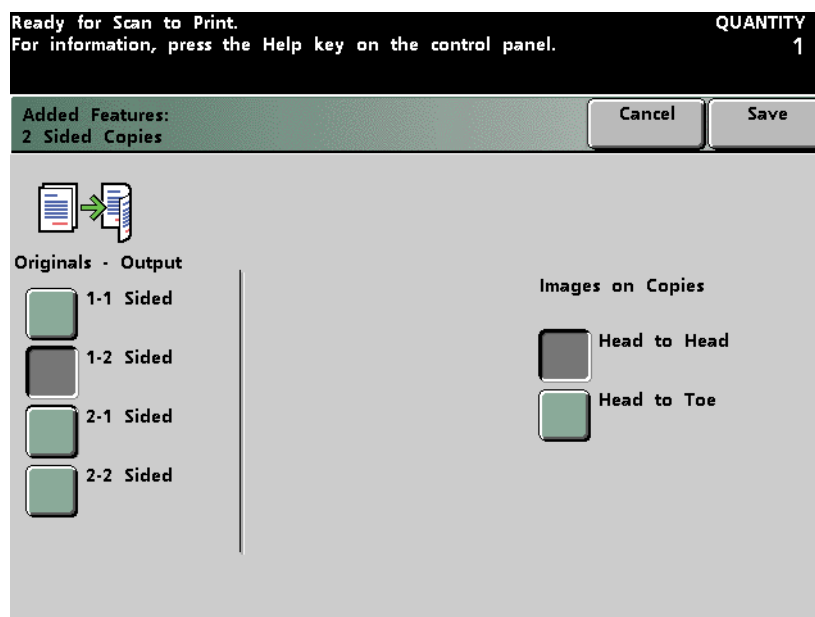

**Figure 18. 1-2 Sided Screen**

## 2-1

This scans a 2-sided original and produces 1-sided copies. Indicate whether the original is Head to Head or Head to Toe orientation.

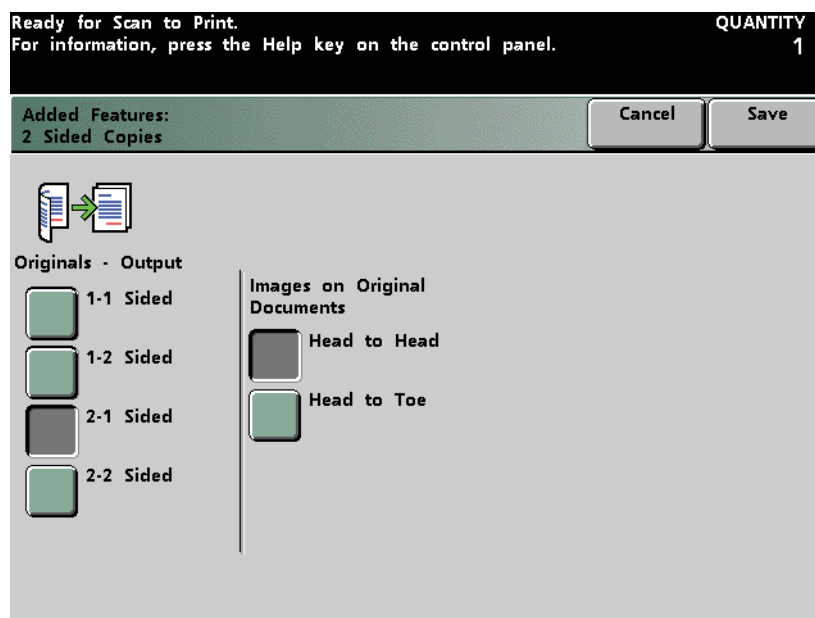


**Figure 19. 2-1 Sided Screen**



## 2-2

This scans a 2-sided original and creates 2-sided output. Indicate whether the original is Head to Head or Head to Toe orientation. Also indicate the orientation of the copy to be Head to Head or Head to Toe.

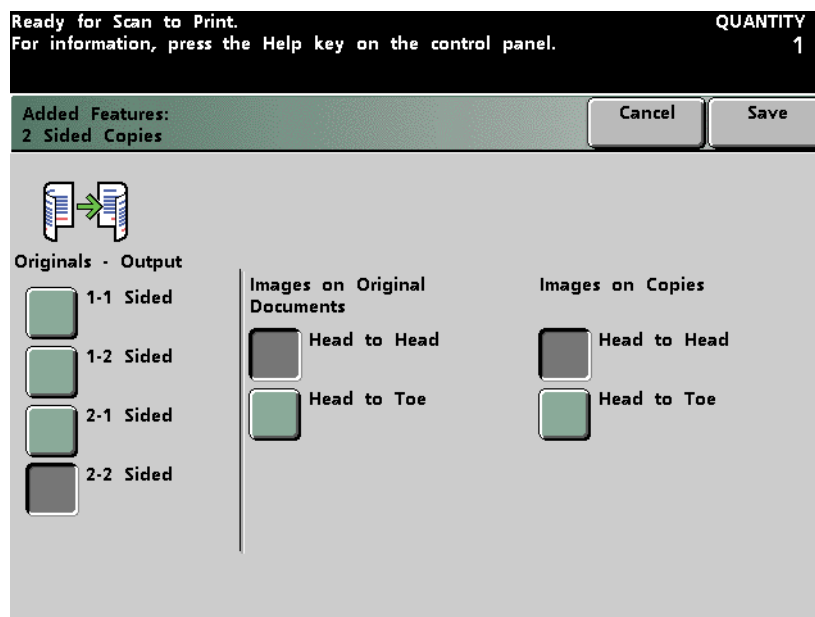

**Figure 20. 2-2 Sided Screen**


## Image Shift

Image Shift enables specific kinds of image repositioning on output. When using 2-Sided Output, the Image Shift options can be set independently for each side.

The Image Shift feature is located on the *Added Features* screen.

## No Shift

If No Shift is selected, the digital press assumes that the original document is registered in the upper left corner of the Document Glass. If the document is offset from this registration point, the image on the output copy will be offset by the same amount. No adjustment is made to your copies.

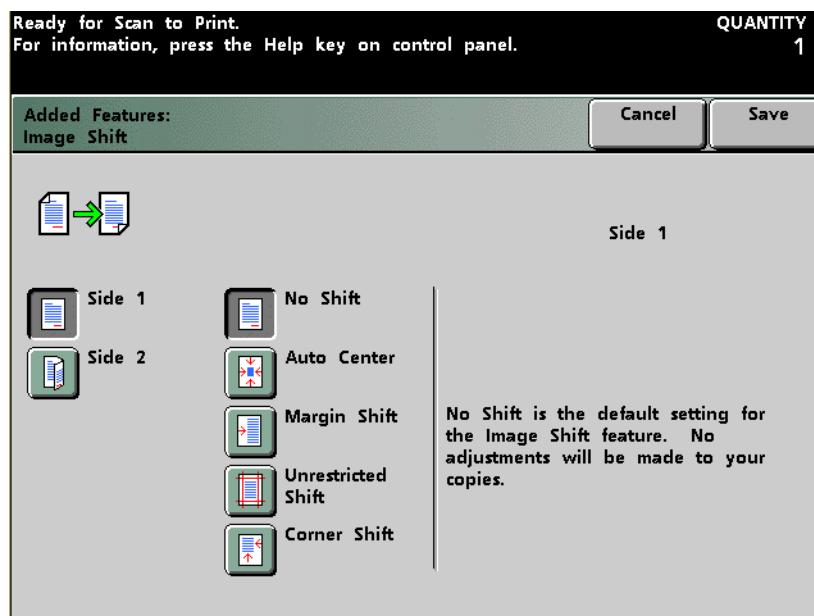


**Figure 21. No Shift Screen**

## Auto Center

Auto Center automatically places the scanned image in the center of the output paper size. The original should be smaller than the output paper, or the image should be reduced if the original is larger than the output paper.

In some cases, the original image center is shifted slightly on the output copy.

The orientation of the output image is determined by the placement of the document on the Document Glass and the orientation of the selected paper supply.

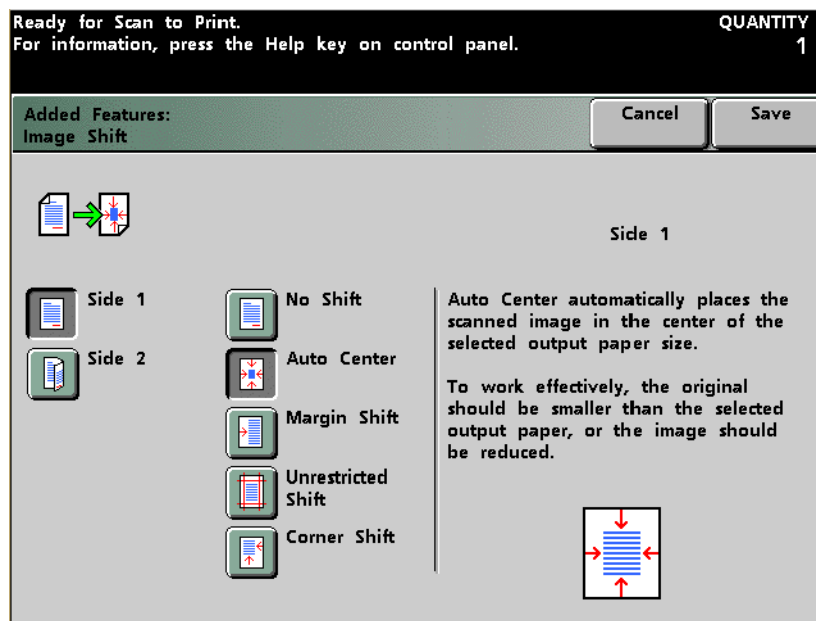

**Figure 22. Auto Center Screen**


## Margin Shift

Use the Margin Shift feature to create a margin for binding one edge of a document by shifting the image away from that edge.

The Margin Shift feature enables you to center a document image, shift the image to one edge slightly, or move the image to a specified edge (0 to 50 mm Left/Right or Top/Bottom) of the output copy.

123...

- 1 Touch the **Image Shift** button on the *Added Features* screen.
- 2 Touch the **Margin Shift** button. The *Margin Shift* screen is displayed.

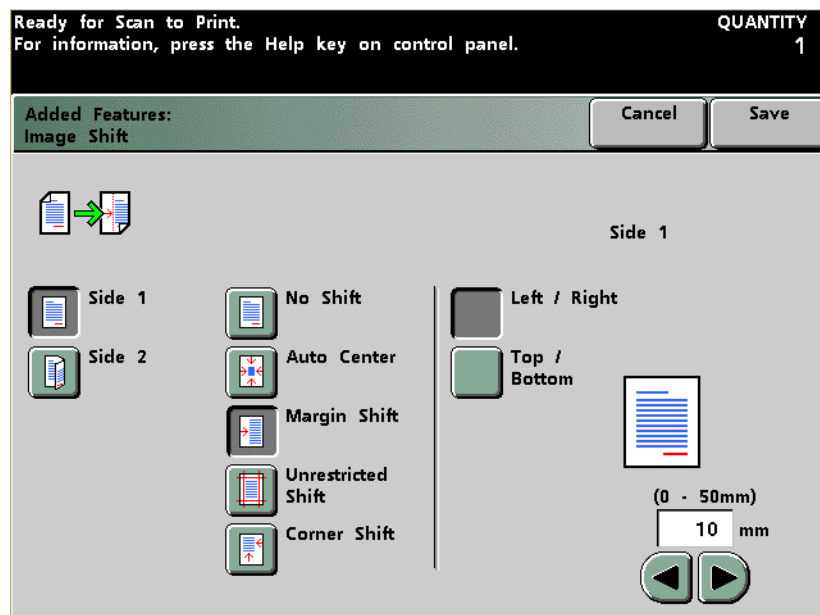

**Figure 23. Margin Shift Screen**

Choose **Top/Bottom** or **Left/Right** (only one choice can be made), and input the Margin Shift in mm using the up and down arrow buttons.

- 3 Press **Save**.
- 4 Continue selecting options for your job.
- 5 When you are finished selecting options, press **Start**.

## Unrestricted Shift

Unrestricted Shift allows independent shifting of the image horizontally and/or vertically. The limit is the maximum dimension of the paper. The X axis can be shifted 0 to 432 mm and the Y axis can be shifted 0 to 297 mm.

123...

- 1 Touch the **Image Shift** button on the *Added Features* screen.
- 2 Touch the **Unrestricted Shift** button. The *Unrestricted Shift* screen is displayed.

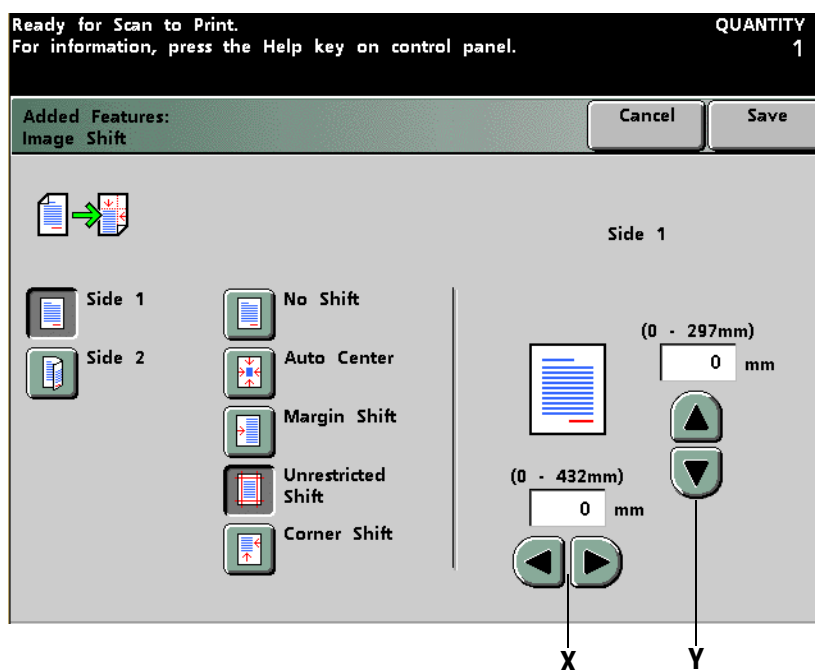


Figure 24. Unrestricted Shift Screen

- 3 Input the X axis in mm using the X up and down arrow buttons.
- 4 Input the Y axis in mm using the Y up and down arrow buttons.
- 5 Press **Save**.
- 6 Continue selecting options for your job.
- 7 When you are finished making selections, press **Start**.

## Corner Shift

Corner Shift enables shifting of the image to each of the four corners of the paper or to the center of each of the four sides of the paper (eight positions total).

Corner Shift may not be evident on your output if you copy your original document at 100%.

The orientation of the image on the copies is determined by the placement of the document on the Document Glass and by the orientation of the selected paper supply.

123...

- 1 Touch the **Image Shift** button on the *Added Features* screen.
- 2 Touch the **Corner Shift** button. The *Corner Shift* screen is displayed.


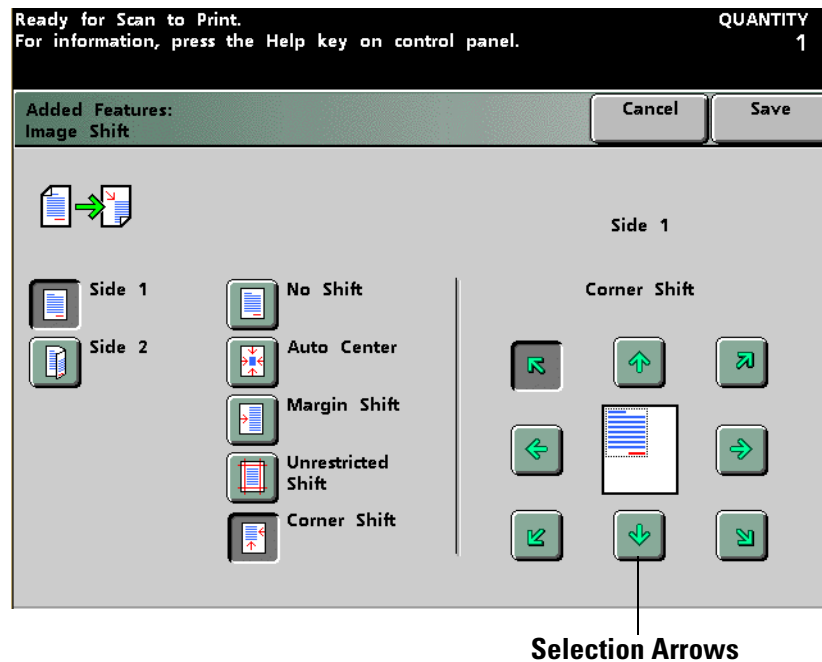


Figure 25. Corner Shift Screen

- 3 Touch the arrow that corresponds to the location in which you would like to place the image.
- 4 Press **Save**.
- 5 Continue selecting options for your job.
- 6 When you are finished selecting options, press **Start**.

## Original Input

The Original Input feature, located on the *Added Features* screen, enables you to specify the size of the original document to be scanned. You may select a standard international size, standard US paper size, or a non-standard size. This feature also allows you to specify automatic feed (DADF) or manual feed (Document Glass).

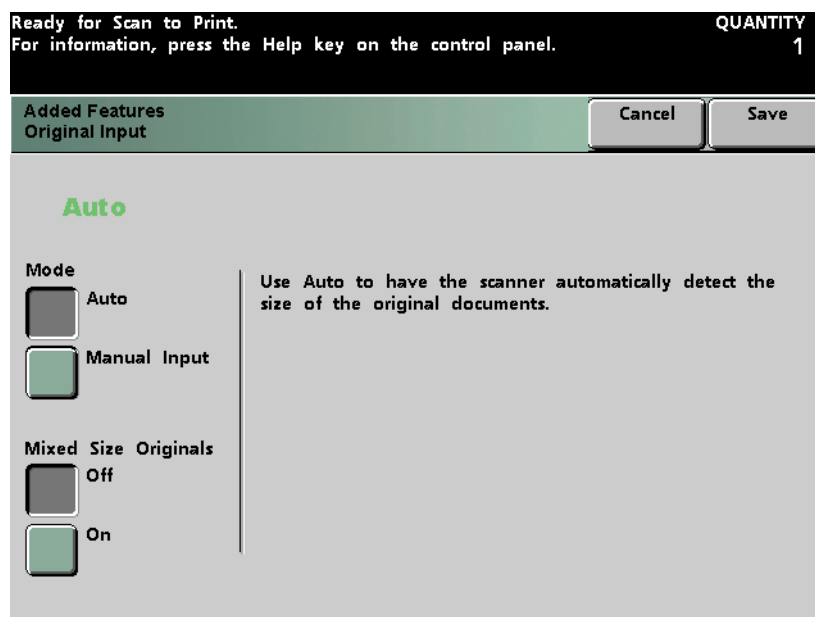

**Figure 26. Original Input Screen**

## Auto

Auto automatically detects the size of the original document. The Mixed Size Originals selection is off (default). There is a loss of productivity if Auto and Mixed Size Originals are both selected due to the need for a prescan of each document.

## Manual Input

When you use the Manual Input option, place the documents on the Document Glass one at a time. The machine prescans each document for size so it is not necessary to select Mixed Size Originals. There is no loss of productivity, however, if Mixed Size Originals is selected with Manual Input. When you select a size from one of eight standard sizes or you customize the size of the original on the X (0.4 - 17 inches) and Y (0.4 - 11.7 inches) axis, the size you choose will apply to all the documents for that job.

123...

- 1 Touch the **Original Input** button on the *Added Features* screen.
- 2 Touch the **Manual Input** button. The *Manual Input* screen is displayed.


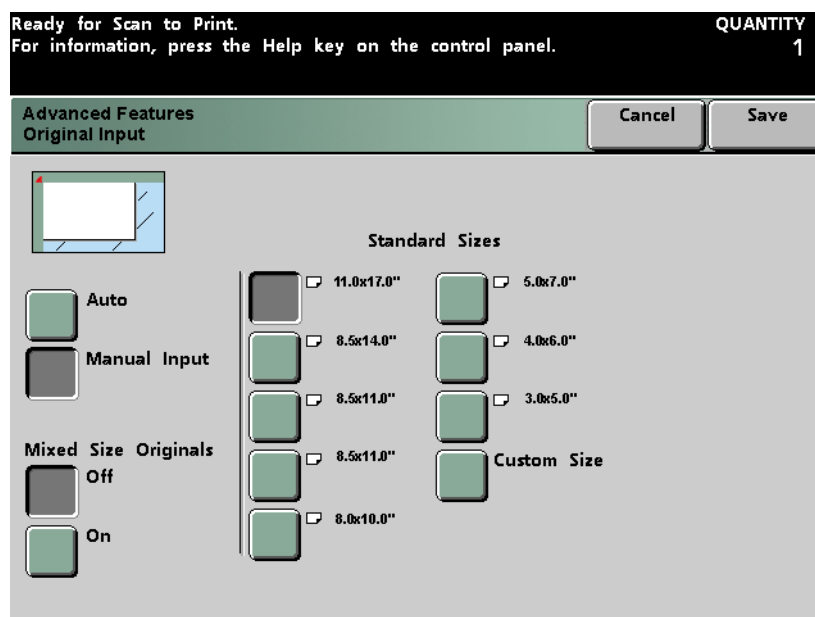


Figure 27. Manual Input Screen

- 3 Press the button for the appropriate Standard Size. To Customize the size, press the **Custom Size** button, and use the up and down arrow buttons to enter both the X and Y axis. If you select Custom Size, the *Custom Size* screen appears.

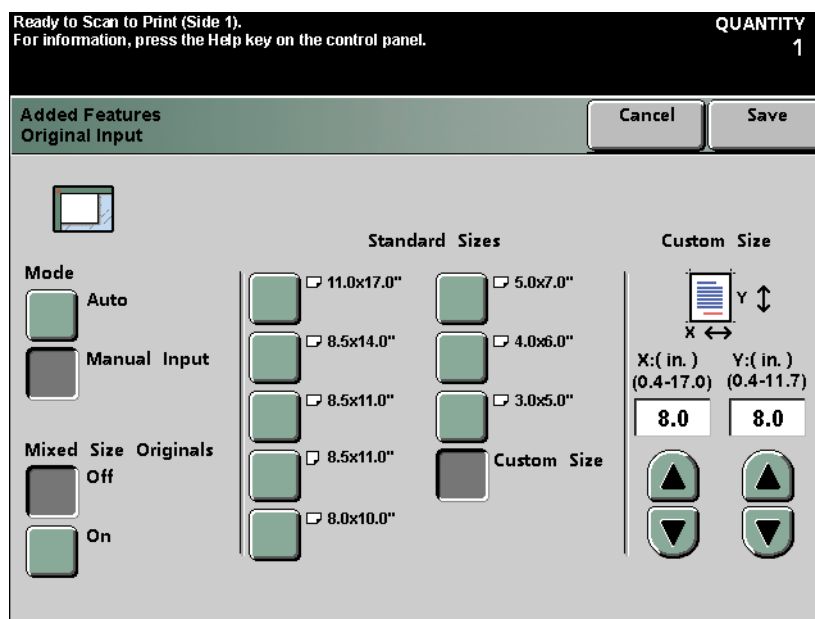



**Figure 28. Manual Input, Custom Size Screen**

- 4** Press **Save**.
- 5** Continue selecting options for your job.
- 6** When you are finished selecting options, press **Start**.

### **Mixed Size Originals**

You can copy jobs with mixed size originals when you use the Duplex Automatic Document Feeder (DADF). When you select the Mixed Size Originals feature and Auto Paper Supply (this feature may not be available with your configuration), the scanner automatically identifies the document size and selects the correct paper supply.

You may use as many different sized originals for Mixed Sized Originals as you wish providing you are using standard size paper and have the appropriate paper in the Paper Trays.


## Bound Originals

The Bound Originals feature allows you to copy bound documents such as books, magazines, journals, notebooks, glued forms, or stapled sets. When you select this feature, each page is copied onto a separate sheet of paper. If you select Left Page, only the page on the left side of the bound original is scanned and copied. If you select Right Page, only the page on the right side of the bound original is scanned and copied. Selecting Both Pages scans and copies the pages on both sides of the bound original.

123...


1

Touch the **Bound Originals** button on the *Added Features* screen. The *Bound Originals* screen is displayed.

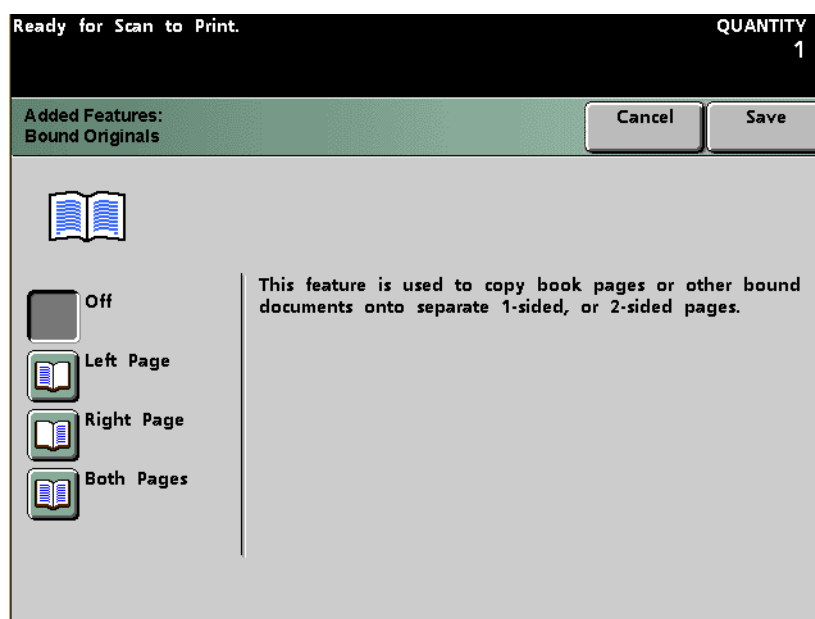

**Figure 29. Bound Originals Screen**


- 2 Touch the **Left Page** button to scan and copy the left page. Touch the **Right Page** button to scan and copy the right page. Touch the **Both Pages** button to scan and copy both pages.
- 3 If you select **Left Page** or **Right Page**, use the up and down arrow buttons to indicate the desired amount of Binding Erase in millimeters (0-50 mm).

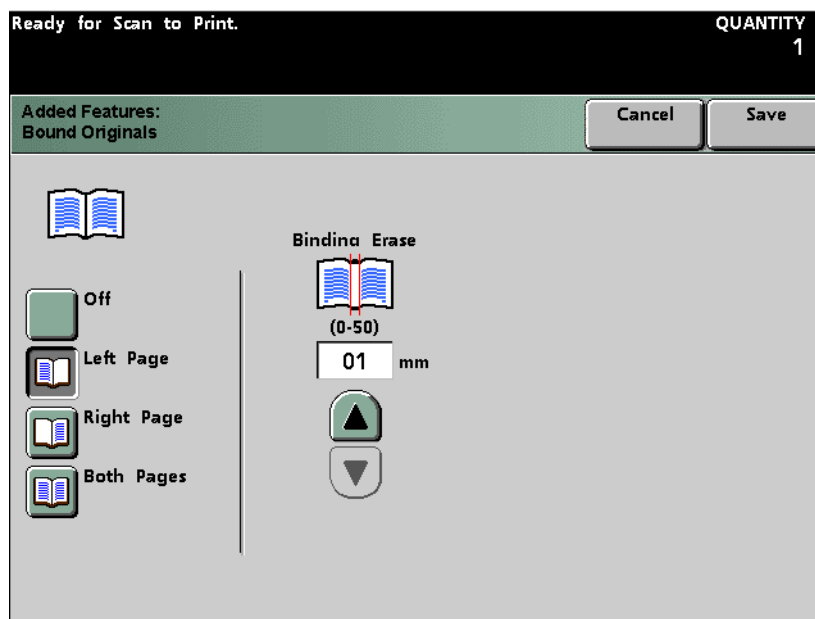

*Figure 30. Left Page Bound Originals Screen*

**4** If you select **Both Pages**, indicate the amount of binding erase using the up and down arrow buttons. Indicate the Reading Order by touching either the **Left** or **Right** button.

- Touch the **Left** button to have output delivered in sequential order: 1, 2, 3...
- Touch the **Right** button to have output delivered in reverse order: 3, 2, 1...

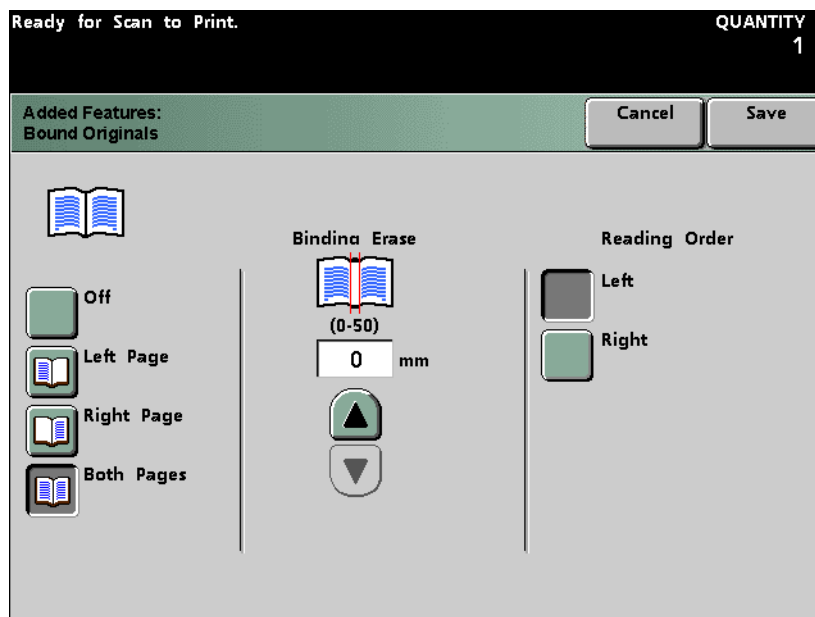

*Figure 31. Both Pages Bound Originals Screen*

**5** Touch the **Save** button.


**6** Continue selecting options for your job.

**7** When you are finished selecting options, press the **Start** button.

## Edge Erase

The Edge Erase feature, located on the *Added Features* screen, allows you to erase images around the border of a document. Edge Erase also deletes center streaks caused by a gap between the spine of a bound document and the Document Glass.

To deactivate the option, select "Off."

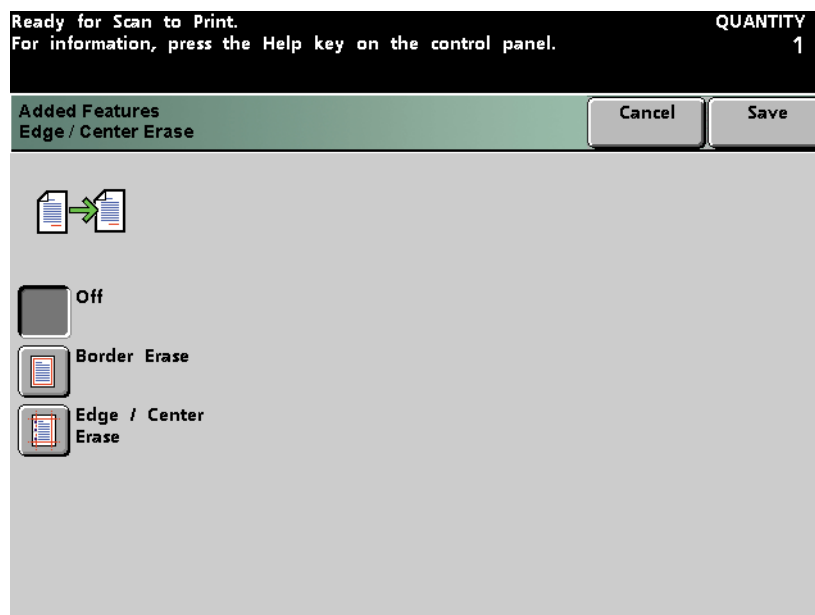

**Figure 32. Edge Erase Off Screen**

## Edge Erase for Drilled Paper

Edge Erase can be used to erase the black holes created when copying an original that is printed on drilled paper. This can be used for 1-Sided and 2-Sided scan to print jobs from the Duplex Automatic Document Feeder (DADF).

Using the Edge Erase feature for this purpose may cause some image loss on the opposite side of the document.

Use the following procedure to use Edge Erase to erase black holes on output:

123...


- 1** Choose the appropriate paper tray in the Paper Supply column on the *Basic Features* screen.
- 2** Select **Original Input** on the *Added Features* screen. Select **Manual Input** and **Custom Size**.
- 3** Make sure that the Y dimension is set to equal the length of the original being copied.
- 4** Change the X dimension to a size equal to the width of the original minus the edge amount for the holes.  
For example, for an 8.5"x11" original, input 8" for the X dimension.
- 5** Press the **Save** button.
- 6** If you are have a 2-Sided scan to print job, select **2 Sided Output** on the *Added Features* screen. Select **2-2 Sided**. Select **Head to Head** in both the Images on Original and Images on Copy columns.
- 7** Press the **Save** button. Select any other features needed for the job.
- 8** Place the originals into the DADF in the short edge feed direction with the holes facing the user.  
You will get an Image Orientation Mismatch fault when the originals are being scanned. Select **Yes** to rotate the image.
- 9** Another screen will appear asking if you want to continue with the job, select **Resume Scan**.  
The scan to print job will then be output.

## Border Erase

The Border Erase feature makes it possible to specify the size of border to create on all four sides of a print. You can erase the border in 1 mm increments from a minimum of 0 mm up to a maximum of 50 mm.

Border Erase and Edge Erase work independently of each other.

The default value for Border Erase is 2 mm and may be changed in Tools Mode. Refer to the *System Administration Guide* for instructions.

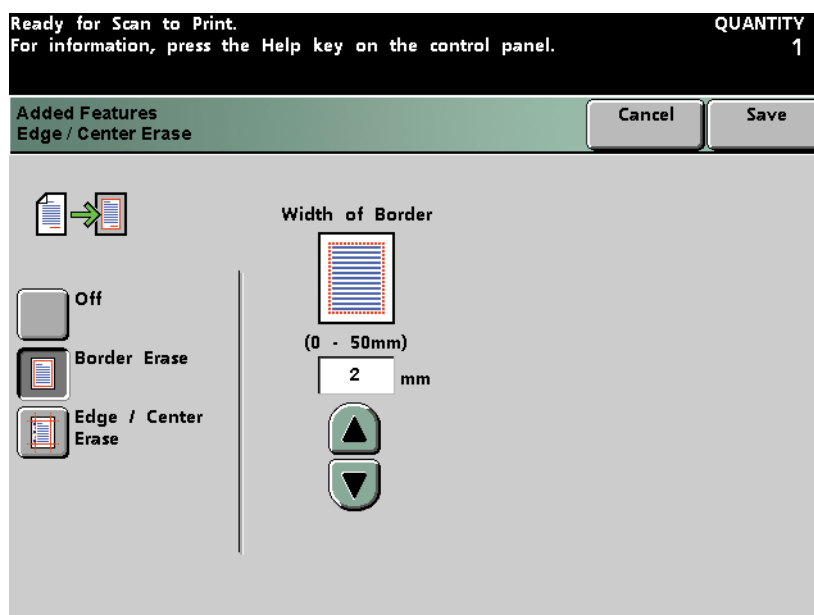

**Figure 33. Border Erase Screen**

## ***Edge/Center Erase***

---

Edge/Center Erase allows you to erase the Left/Right edge, Top/Bottom edge, and Center from 0 to 50 mm in increments of 1 mm. Left/Right and Top/Bottom can be set independently.

Edge Erase is proportional to Reduce/Enlarge. For example, if Edge Erase is set for 30 mm and 50% reduction is programmed then the amount of Edge Erase will be 15 mm on the output.

When using 2-Sided Output, the same amount of erasure applies to sides 1 and 2.

Center Erase erases the shadow line from scanning the spine of a bound original (for example a book or a magazine). It is also useful for erasing the boundary line between two documents placed side by side on the Document Glass.


Center Erase may be specified between 0-50 mm in increments of 2 mm. When you specify a value, each side of the center is erased by half of the specified value. A Center Erase value of 30 mm results in 15 mm being erased from either side of the center.

For some original image sizes, Edge/Center Erase does not occur exactly in the center of the output image. Center Erase default is 0 mm, which can be changed in Tools Mode. Refer to the *System Administration Guide* for more information on how to change this setting.



123...

- 1 Touch the **Edge Erase** button on the *Added Features* screen.
- 2 Touch the **Edge/Center Erase** button. The *Edge/Center Erase* screen is displayed.

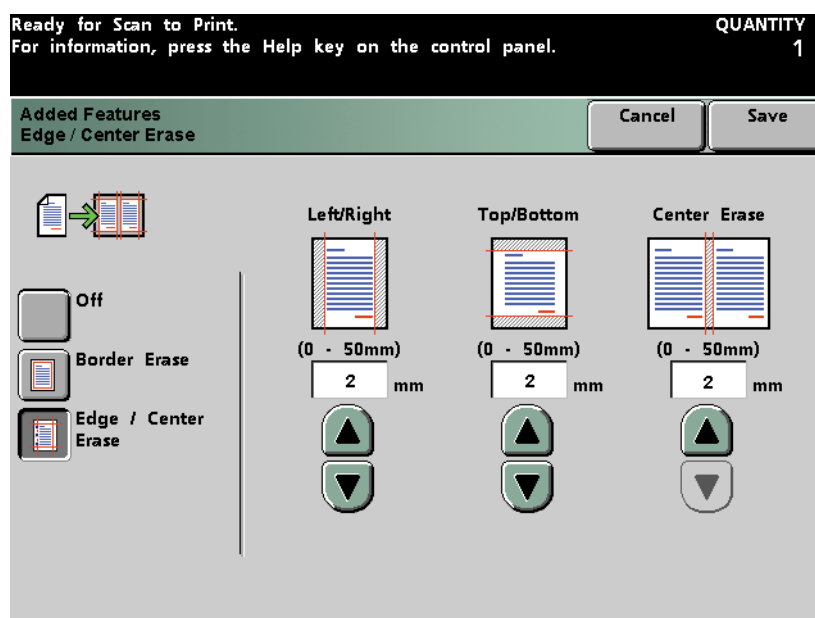

**Figure 34. Edge/Center Erase Screen**

- 3 Input the Left/Right, Top/Bottom, and Center Erase as desired using the appropriate up and down arrow buttons.
- 4 Press **Save**.
- 5 Continue selecting options for your job.
- 6 When you are finished selecting options, press **Start**.

### Stored Programming

The Stored Programming feature, located on the *Added Features* screen, enables you to store up to 10 scan to print jobs in memory. Store Programming, Recall Programming, and Delete Programming are available in both Interrupt and Normal Modes. Use the up and down arrow buttons to select a storage location, then select one of the choices described below:

### Store Programming

Store Programming saves the current job programming selections. Use Store Programming to save complex feature settings that you use frequently.


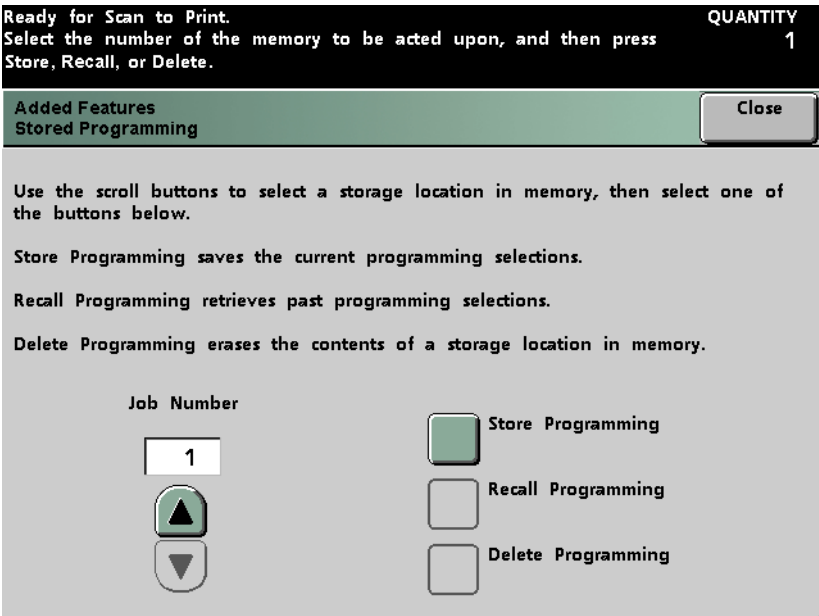


Figure 35. Store Programming Screen

## Recall Programming


Recall Programming retrieves stored jobs and applies their programming features to a new copy job.

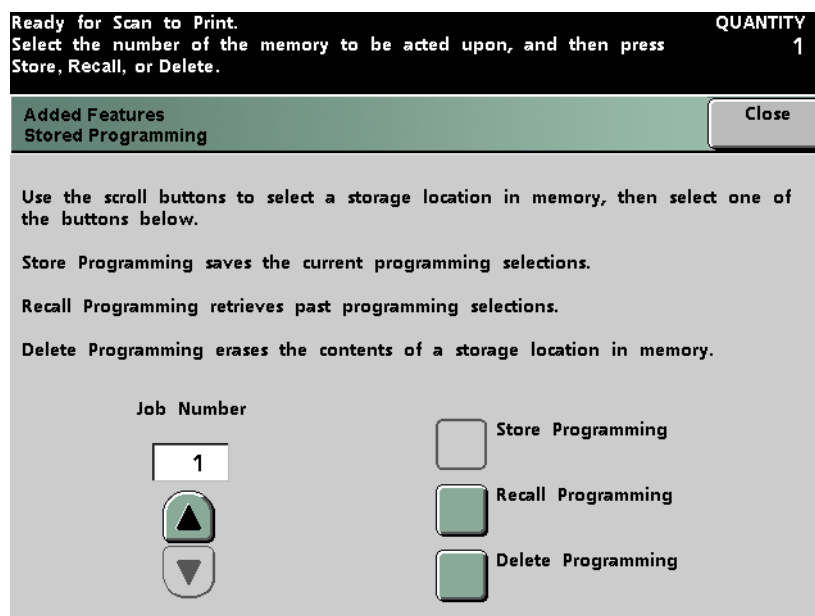

**Figure 36. Recall or Delete Programming Screen**

## Delete Programming

Delete Programming erases the contents of a stored job and frees that memory position when you select Yes on the *Delete Stored Programming Confirmation* screen.

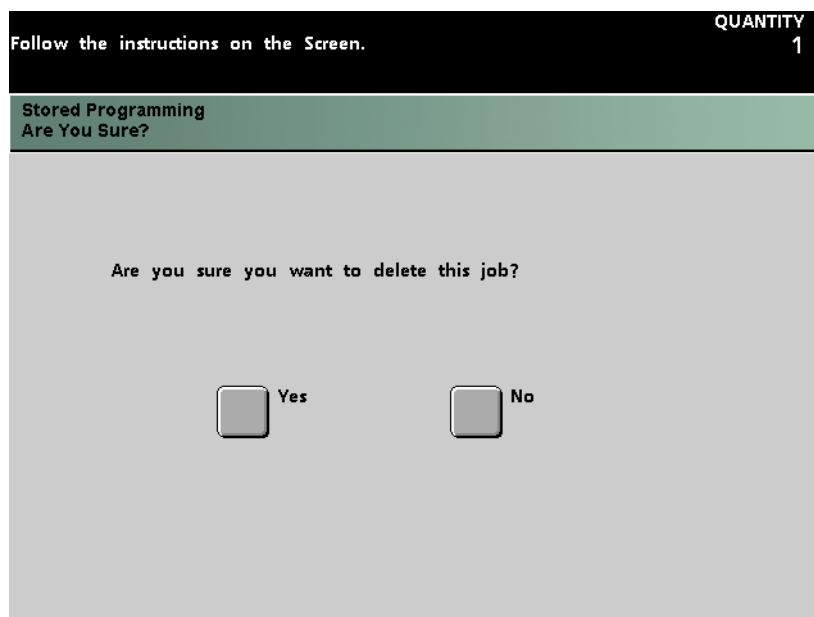


**Figure 37. Delete Stored Programming Confirmation Screen**

Use the job number buttons to assign, access, or delete the jobs that have been stored in the digital press memory and to indicate the next available memory position.

## Image Quality

Image Quality allows you to select options to enhance and modify the original image to reach your desired output.

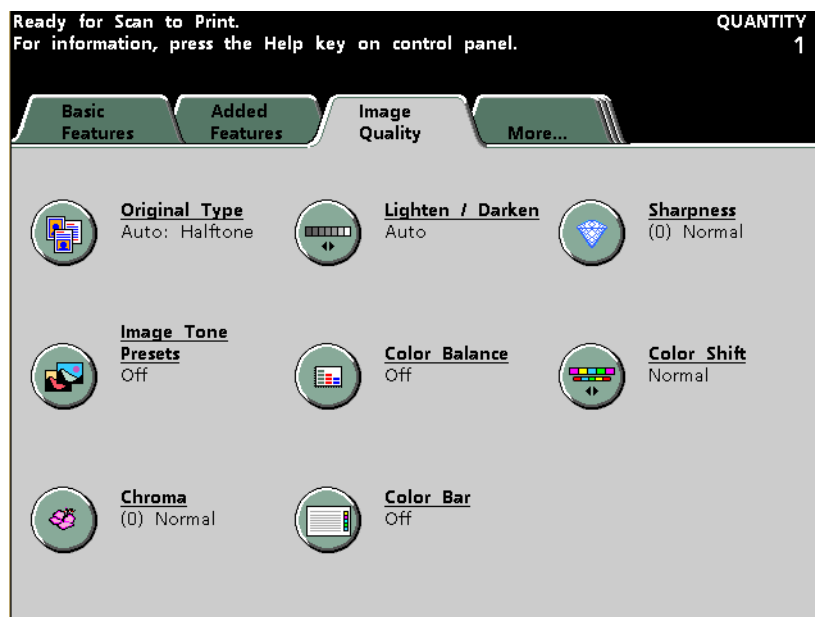


**Figure 38. Image Quality Screen**

## Original Type

The Original Type feature enables you to define the kind of original document you wish to copy. The digital press automatically makes fine adjustments to optimize the copy sharpness based on document type. Specifying an Original Type increases the probability that your output will be an accurate reproduction of your original document.

123...

- 1 Touch the **Original Type** button on the *Image Quality* screen. The *Original Type* screen is displayed.

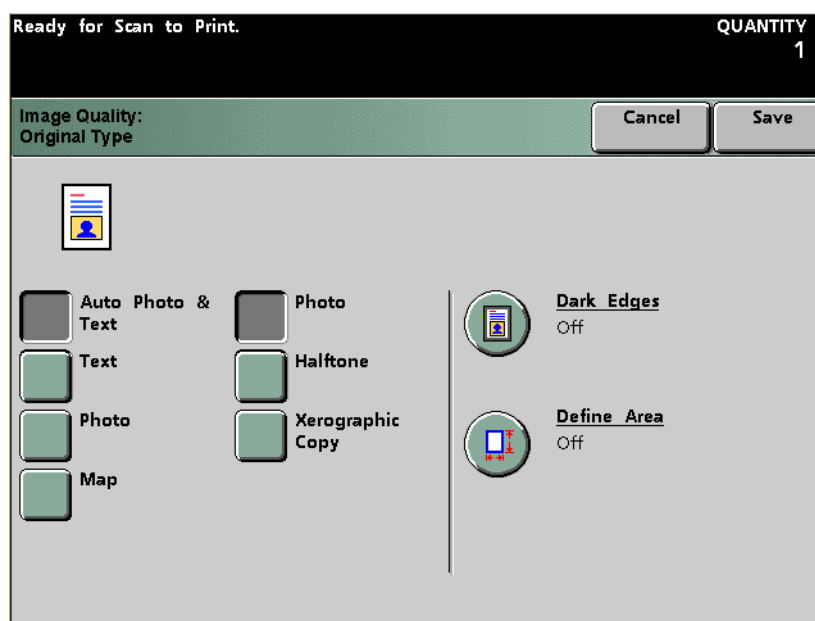


**Figure 39. Original Type Screen**

- 2 Select the appropriate original type from the descriptions on the following pages.
- 3 Press **Save**.
- 4 Continue selecting options for your job.
- 5 When you are finished selecting options, press **Start**.

## Auto Photo & Text

Use Auto Photo & Text for original documents that contain pictures and printed text. The default for column 2 (Photo, Halftone, or Xerographic Copy) can be selected in the Tools Mode. Refer to your *System Administration Guide* for more information on how to change this setting.

In the Auto Photo & Text mode, the digital press copies the text areas with the Text option and the photo areas with the selection from Column 2 (Photo, Halftone, or Xerographic Copy) to optimize the output. Output copies will be made using the best sharpness and density levels for pictures and charts combined with the best levels for text.

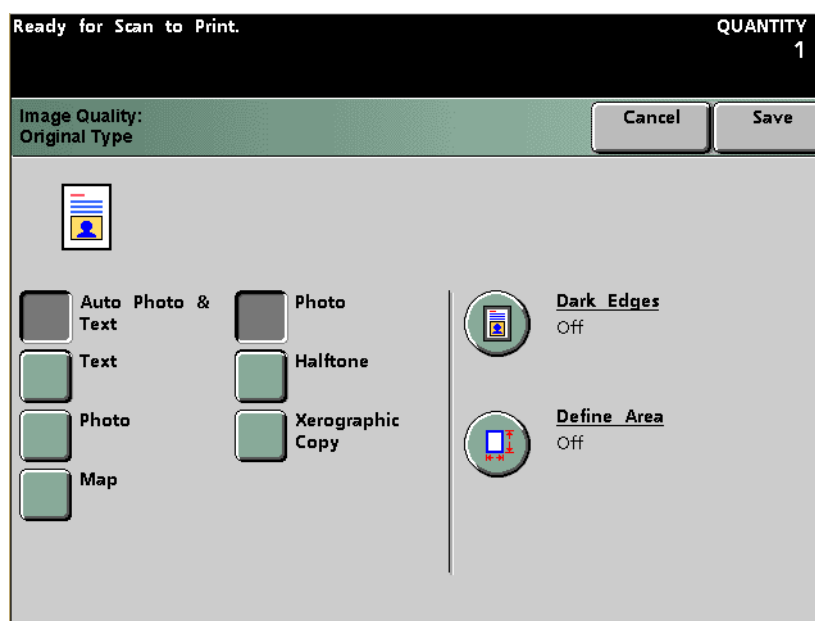

**Figure 40. Auto Photo & Text Screen**


- **Photo** refers to an original photograph (continuous tone). Photo is the best selection when true reproduction of light skin colors, light colors, or gray areas is important. The Photo option is appropriate for very high quality halftone documents.
- **Halftone** refers to the type of photograph found in most magazines. The Halftone option uses a fine screen that varies the darkness and density of dots that make up the copied image.
- **Xerographic Copy** refers to the type of image produced by copying a photograph on a xerographic copier or text that has already been reproduced and is not an original document.

## Text

Text documents are composed of fine line characters or other high contrast documents with bright, dense colors. Text suppresses background color.

The following options allow you to optimize your output:

- Select **Normal** (the default) if the text on the original document is of normal darkness.
- Select **Light Text** (pencil text) if the text on the original document is light and needs to be darkened, or is indistinct or in pencil and should be enhanced to be reproduced. Light Text can only be selected when Black Only is selected in Color Mode.

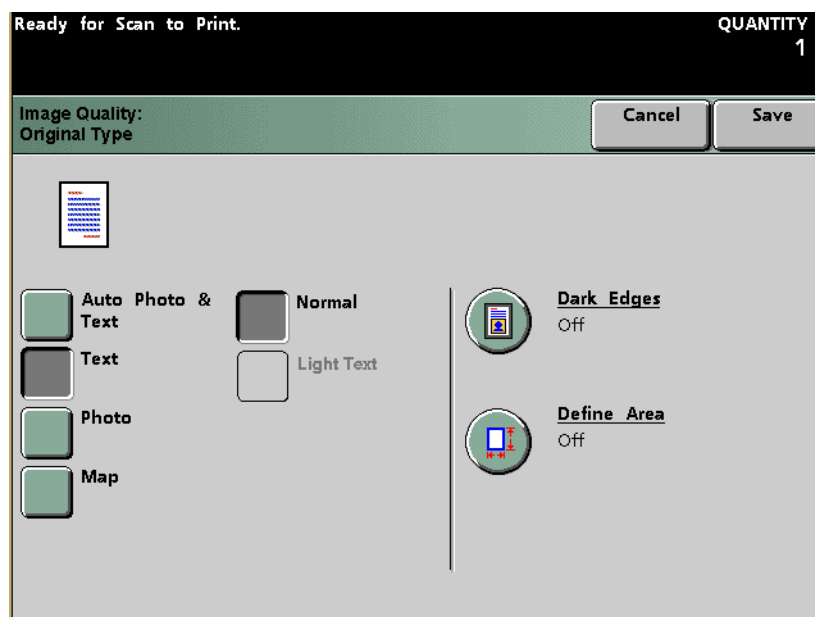

**Figure 41. Text Screen**



## Photo

The Photo option is for photographs or lithographs including paintings that contain a variety of pastel colors. The default for column 2 (Photo, Halftone, or Xerographic Copy) can be selected in the Tools Mode. Refer to your *System Administration Guide* for the procedure.

The Photo option provides the most accurate color and density copy for continuous tone documents that contain a wide range of densities from very dark to very light images.

You must make a selection from Column 2 (Photo, Halftone, or Xerographic Copy) to optimize the output.

- **Photo** is the best selection when true reproduction of light skin colors, light colors, or gray areas is important. The Photo option is appropriate for very high quality halftone documents.
- The **Halftone** option uses a fine screen that varies the darkness and density of dots that make up the copied image.
- **Xerographic Copy** refers to the type of image produced by copying a photograph on a xerographic copier or text that has already been reproduced and is not an original document.


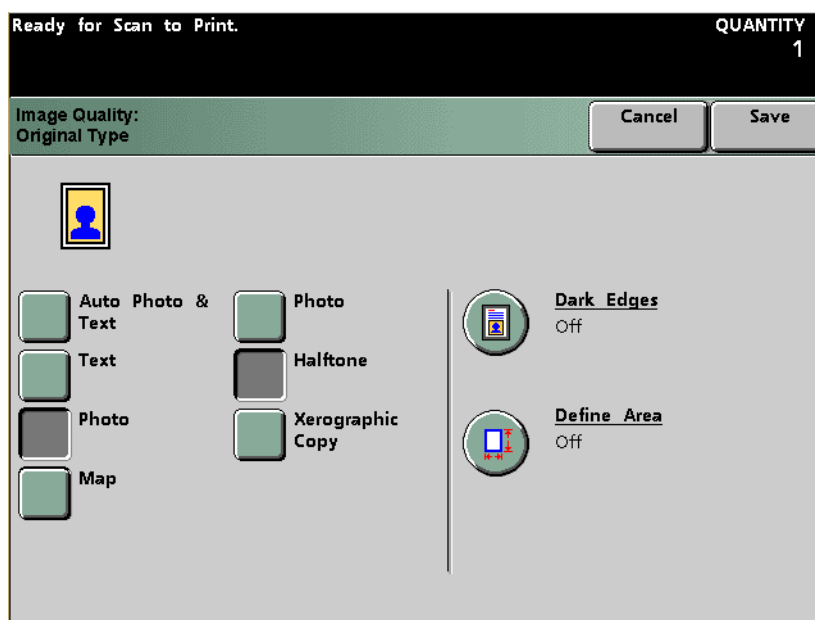


Figure 42. Photo Screen

## Map

Use the Map option to optimize the reproduction of detailed graphics, maps, or map-like originals.

With this option, text on a light-colored background is enhanced more than if you used the Photo option or the Text option.

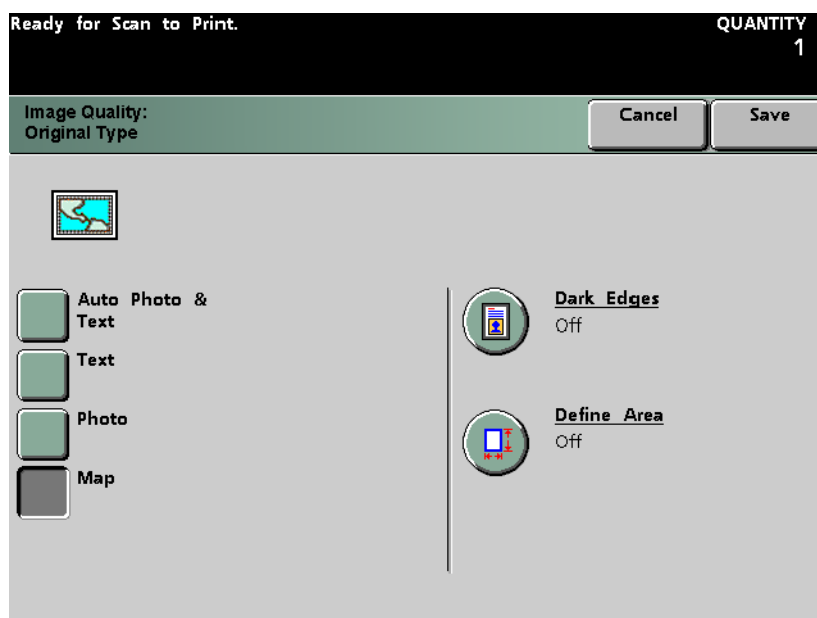

**Figure 43. Map Screen**

## Dark Edges

The scanner cannot detect the size of an original when there is no white border. Touch the **Dark Edges** button on the *Original Type* screen when documents such as photos or text extend to the edge of the original. When Dark Edges is on, it is possible to specify the size of the original document


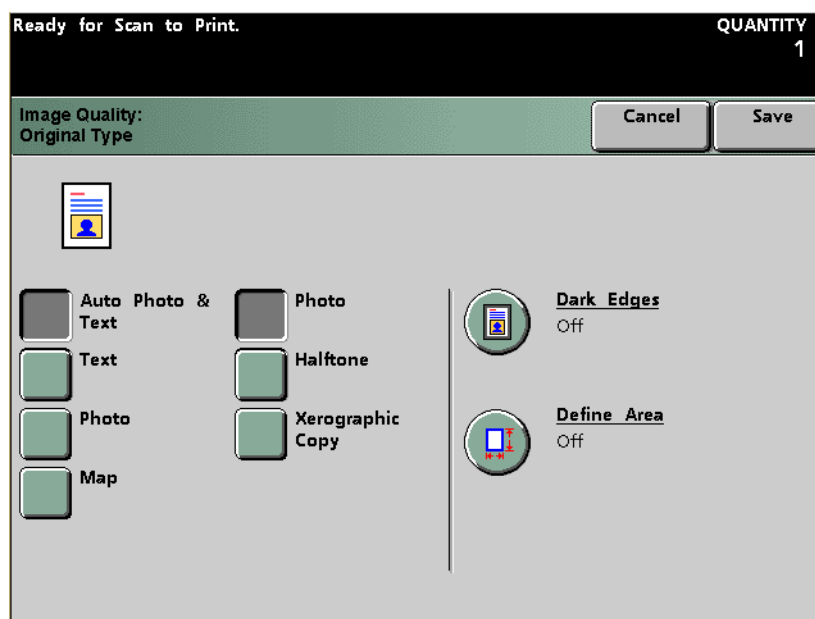


Figure 44. Original Type Screen


When you select **On**, standard sizes appear. Touch the original size, and touch the **Save** button so that the full document is scanned.

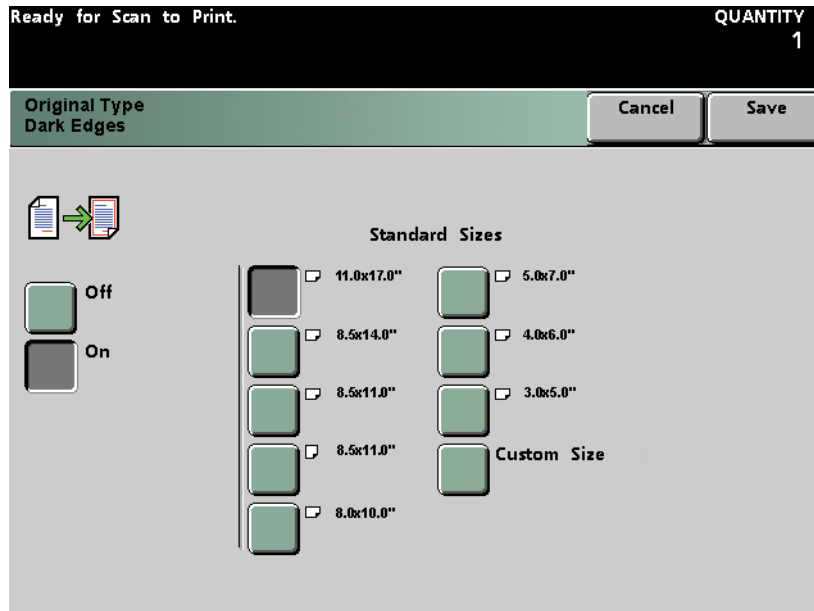

*Figure 45. Dark Edges On Screen*

OR

Touch **Custom Size** to input the size of the original on the X (0.4 - 17 inches) and Y (0.4 - 11.7 inches) axis. The size you select applies to all the documents for that job. Touch the **Save** button.

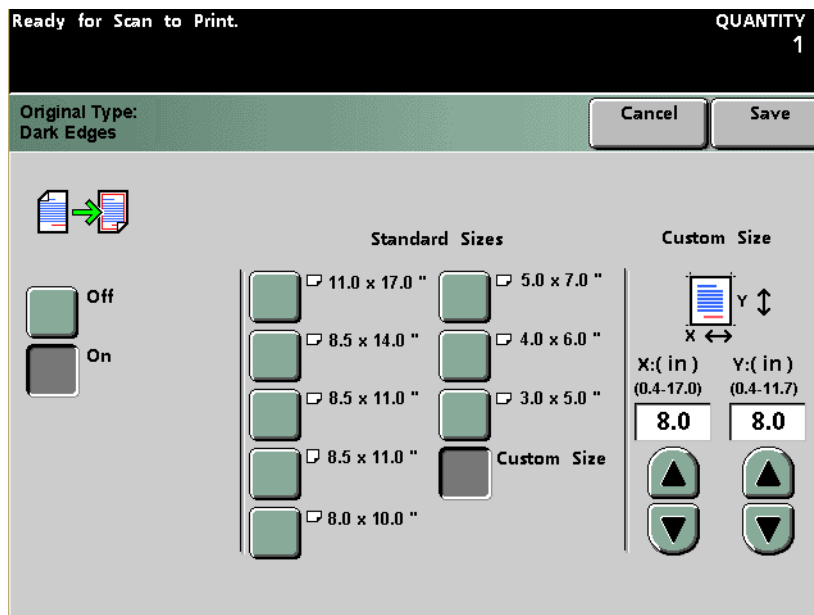

*Figure 46. Custom Size Screen*

## Define Area

Select Define Area when it is necessary to define different areas as different types on the same document. The total number of rectangular areas that can be defined is four. X can be defined 0 - 432 mm and Y can be defined 0 - 297 mm from the upper right corner of the document as you are reading it.

When areas overlap, the area you defined last has priority. Areas that are not defined are copied in the Document Type (Text, Photo, or Map) that is selected for the entire document.

You can enter up to four coordinates, change coordinates, delete an area, define the next area, or check the entries made for the previous area.

123...

- 1 Touch the **Original Type** button on the *Image Quality* screen.
- 2 Touch the **Define Area** button. The *Define Area* screen is displayed.

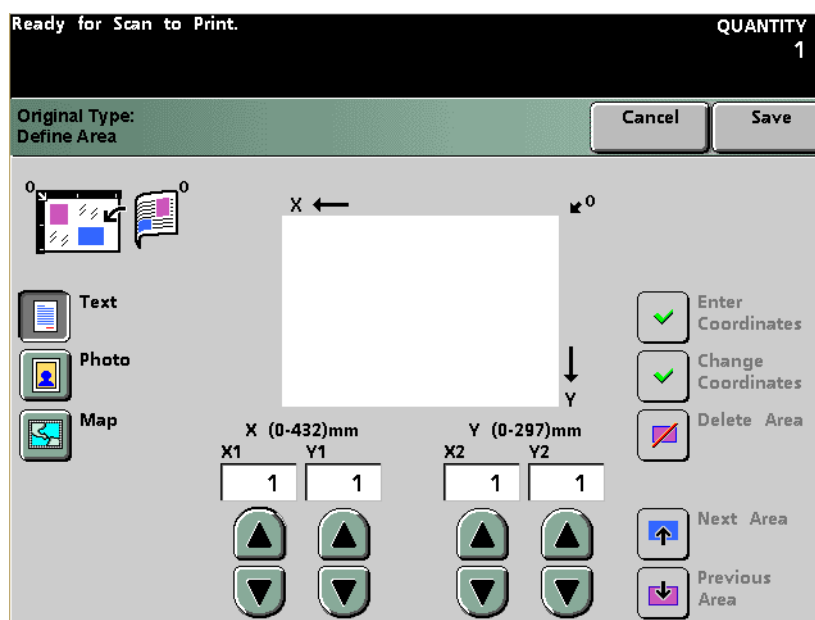


Figure 47. Define Area Screen


- 3** Touch the document type for the area (**Text**, **Photo**, or **Map**) to be defined.
- 4** Use the up and down arrows to enter the size of the area for the starting points, X1 and Y1, and the ending points, X2 and Y2. Measure the area to be defined using a ruler with millimeters.  
  
Measure from the registration edges of the document to obtain the X and Y values.
- 5** Press the **Enter Coordinates** button.
- 6** Touch **Next Area** to define any additional areas with the same document type (up to four areas). Press the **Enter Coordinates** button after each set of coordinates is selected.
- 7** Repeat steps 3 through 6 until all areas are input.
- 8** Press the **Save** button.
- 9** If you need to change the type of document for another area, touch the document type for the area (**Text**, **Photo**, or **Map**) to be defined.
- 10** Continue selecting job options for your job.
- 11** When you are finished selecting options, press the **Start** button.

- **Change Coordinates**

Use Change Coordinates to redefine a defined area using the up and down arrows.

123...

- 1 Touch the **Change Coordinates** button on the *Define Area* screen.

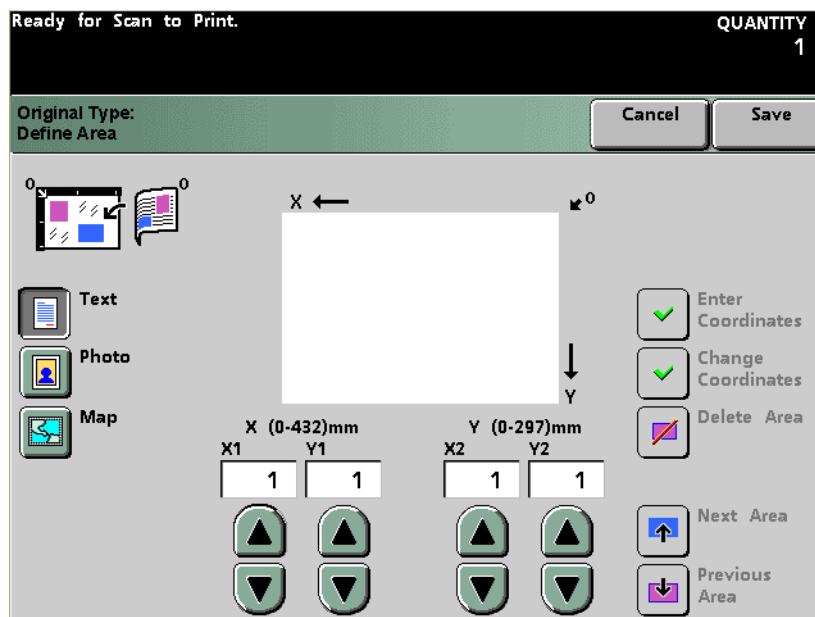

**Figure 48. Define Area Screen**


- 2 Touch either the **Next Area** or **Previous Area** button until the desired area is displayed.
- 3 Touch the **Enter Coordinates** button to input the new coordinates. To cancel your changes, touch the **Cancel** button.
- 4 Touch the **Save** button.
- 5 Continue selecting options for your job.
- 6 When you are finished selecting options, press the **Start** button.

### • Deleting an Area

After a Document Type has been selected for a document area, and the area has been defined, it may be that the area is not needed or it is incorrect. Delete the area or change the Document Type by pressing the Delete Area button on the *Define Area* screen.

123...

- 1 Touch the document type for the area (**Text**, **Photo**, or **Map**) to be defined. To cancel the selected Document Type, touch the **Cancel** button on the *Define Area* screen.

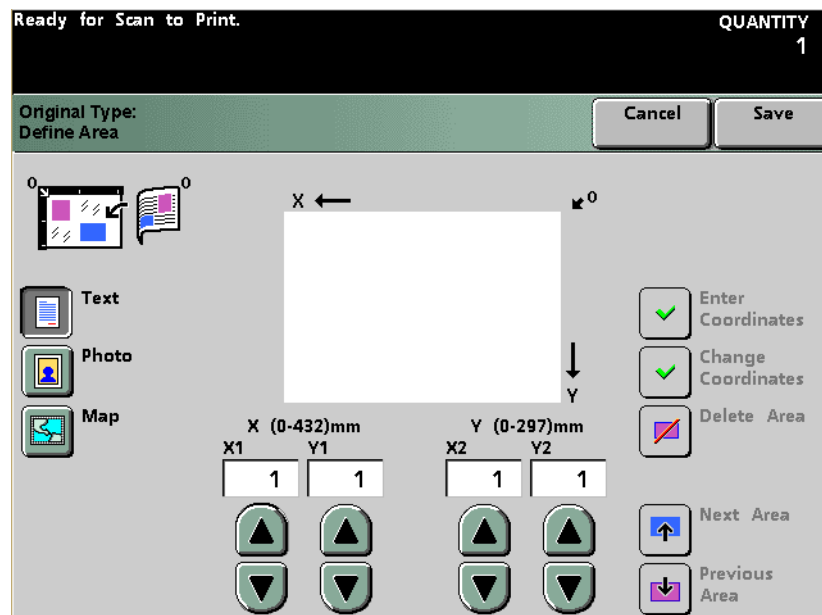

**Figure 49. Define Area Screen**

- 2 To delete an area, touch either the **Next Area** or **Previous Area** button until the desired area is displayed.
- 3 Touch the **Delete Area** button. All of the displayed coordinates change back to 0. Touch the **Cancel** button to restore the deleted area or areas.
- 4 Touch the **Save** button.
- 5 Continue selecting options for your job.
- 6 When you are finished selecting options, press the **Start** button.




## Lighten/Darken

The Lighten/Darken feature, located on the *Image Quality* screen, enables Auto or Manual selection from among the 13 density levels available for desired output. Auto or Manual may be set as the default in Tools Mode. Refer to your *System Administration Guide* for instructions.

When the Auto option is selected, the digital press determines the overall density of the document and adjusts the level accordingly. This feature is more effective for black and white copying. If Auto is selected, you can change to Manual by pressing one of the arrows.

The Normal (0) level is the digital press default for Lighten/Darken. Use the Normal setting to copy original documents that have the desired overall lightness or darkness. There are six levels of darker and six levels of lighter to select to enhance the output copy.

SCANNER

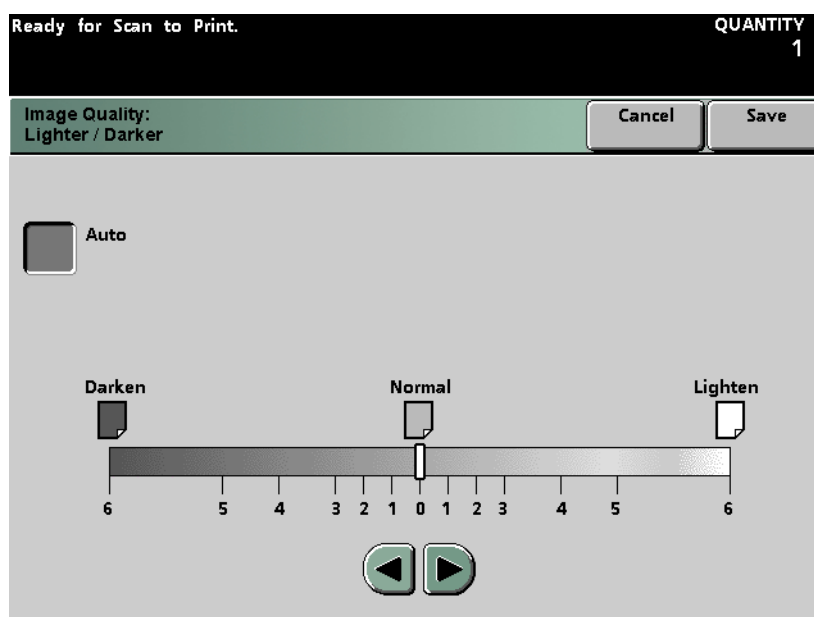

**Figure 50. Lighten/Darken Screen**


## Sharpness

The Sharpness feature, located on the *Image Quality* screen, allows you to adjust the amount of image definition on your copies.

Normal (0) is best for most copies.

Adjust for sharpness when you require copies with crisp lines and fine definition.

Adjust for softness when you require copies with softer, less focused images.

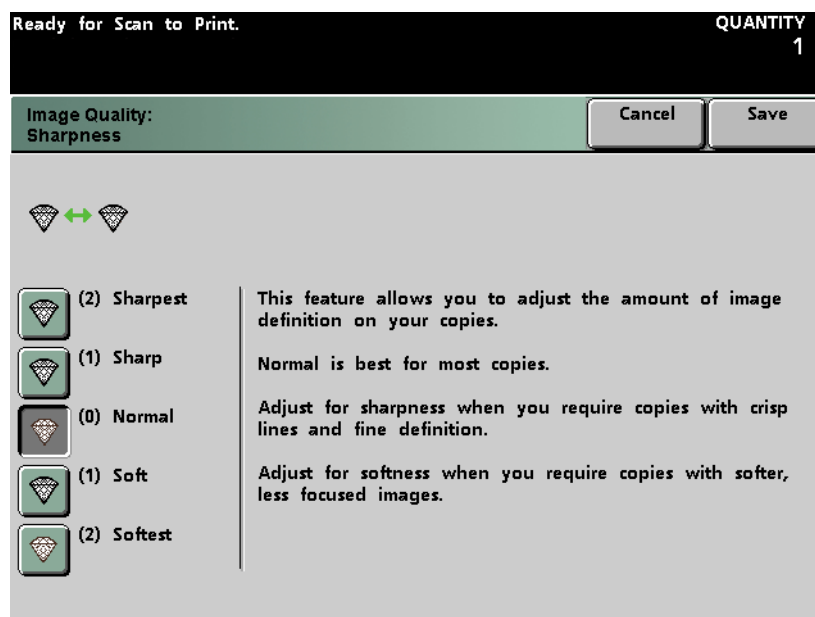

**Figure 51. Sharpness Screen**


## Image Tone Presets

The Image Tone Presets feature, located on the *Image Quality* screen, changes Image Quality settings to produce balanced image tones described below.

The Image Tone Preset feature also lets you enable Background Erase.

### Normal

The Normal option makes no changes to image quality and produces copies with the same quality and density as those of the original. The Image Tone Preset default is Normal.

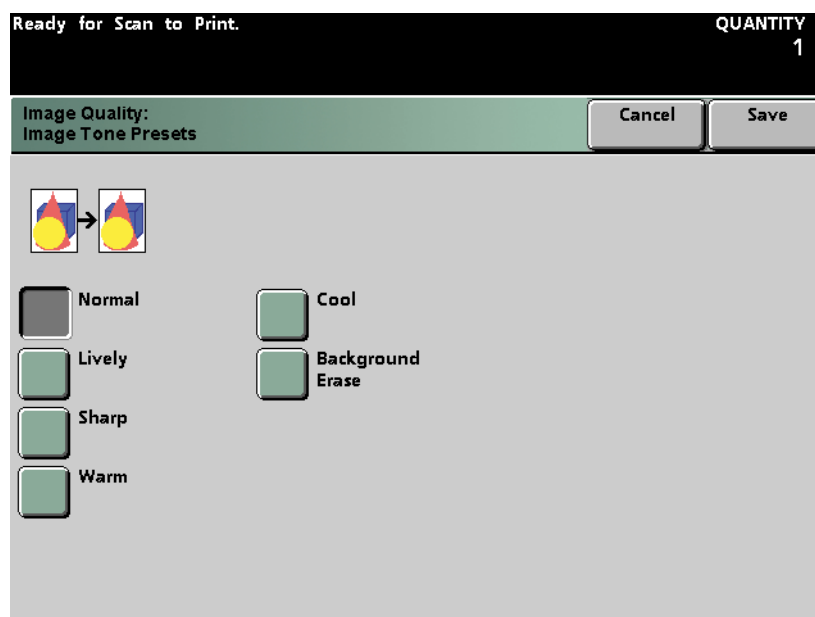

**Figure 52. Image Tone Presets Screen**

### ***Lively***

---

The Lively option uses the highest color saturation to produce rich, vivid output colors. The option increases the Color Saturation to the most vivid setting and adjusts the Lighten/Darken setting one step lighter



**Before**



**After**

### ***Sharp***

---

The Sharp option produces a sharp, clear image on the copy; increases the color saturation; and selects the highest Sharpness setting.



**Before**



**After**

## ***Warm***

The Warm option produces a soft image on the copy adding a warm reddish tint to low density colors. Use this setting to apply a light pink tone to skin colors and to give a soft tone to dark, warm colors.



**Before**



**After**

## ***Cool***

The Cool option produces a strong, clear blue tone on the copy. This setting makes blue color stronger and makes dark, cold colors clearer.



**Before**



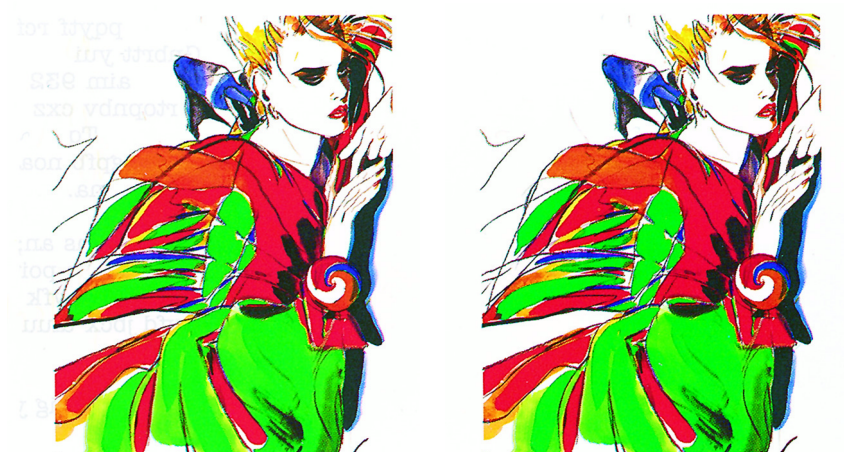
**After**



## ***Background Erase***

Background Erase prevents undesired marks or images that are printed on the back of an original from appearing on the output copy.

This feature is similar to Lighten/Darken but Lighten/Darken removes less of the background.



**Before**

**After**

## Color Balance

The Color Balance feature, located on the *Image Quality* screen, allows you to adjust the balance for areas of high, medium, and low density image areas for Cyan, Magenta, Yellow, and Black.

For each color there are three density levels (low, medium, and high). There are three higher settings, three lower settings, and the normal setting within each density level.

Each color can be adjusted independently and in any combination. It is important to remember that adjusting the amount of any of the process colors has an effect on the other colors.

The default value for Color Balance may be set in Tools Mode. Refer to the *System Administration Guide* for more information on how to change this setting.

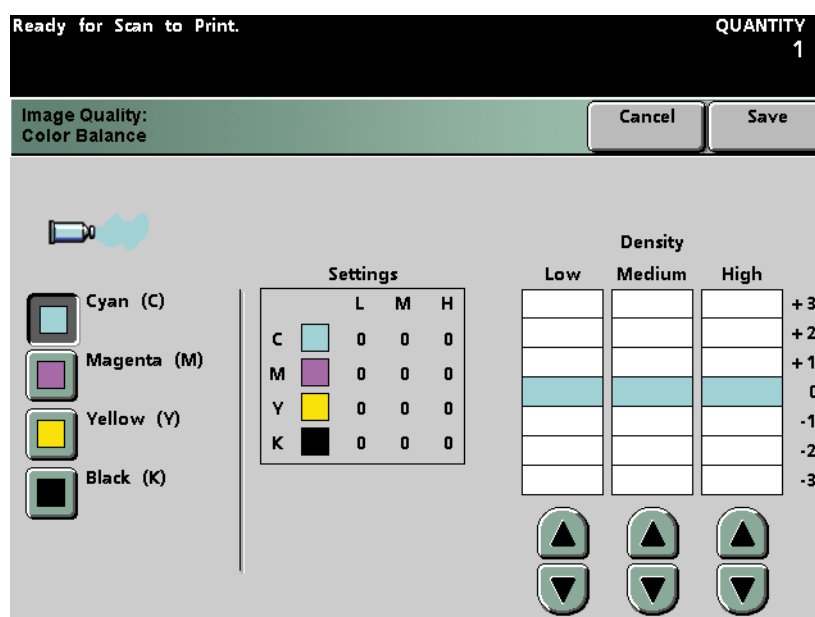



Figure 53. Color Balance Screen

## Color Shift

The Color Shift feature, located on the *Image Quality* screen, allows you to shift all hues in an image simultaneously in order to make the overall character of the output image warmer or cooler.

The illustration on the *Color Shift* screen helps you anticipate the results of the requested shift. The lower bar illustrates the relationship between colors and adjacent hues. The top bar shifts to the left or right to reflect your choice. When Normal is selected, the upper bar is centered above the lower bar.

The default value for Color Shift may be set in Tools Mode. Refer to the *System Administration Guide* for more information on how to change this setting.

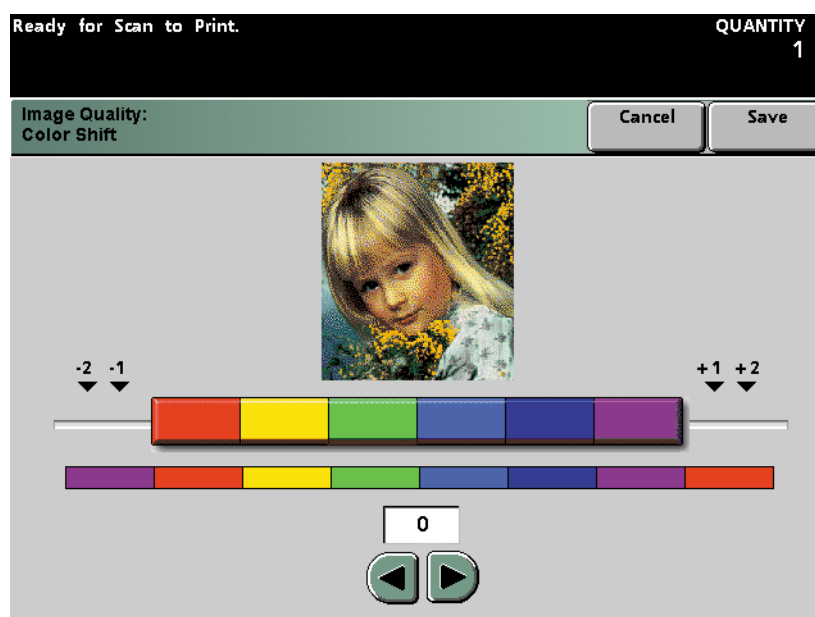


**Figure 54. Color Shift Screen**



## Chroma

The Chroma feature, located on the *Image Quality* screen, allows you to adjust the overall color saturation of the copy. The higher the color saturation, the more vivid the color. The lower the color saturation, the more subtle the color. Normal Chroma results in the output colors that match the colors of the original document.

The default value for Chroma may be set in Tools Mode. Refer to the *System Administration Guide* for more information on how to change this setting.

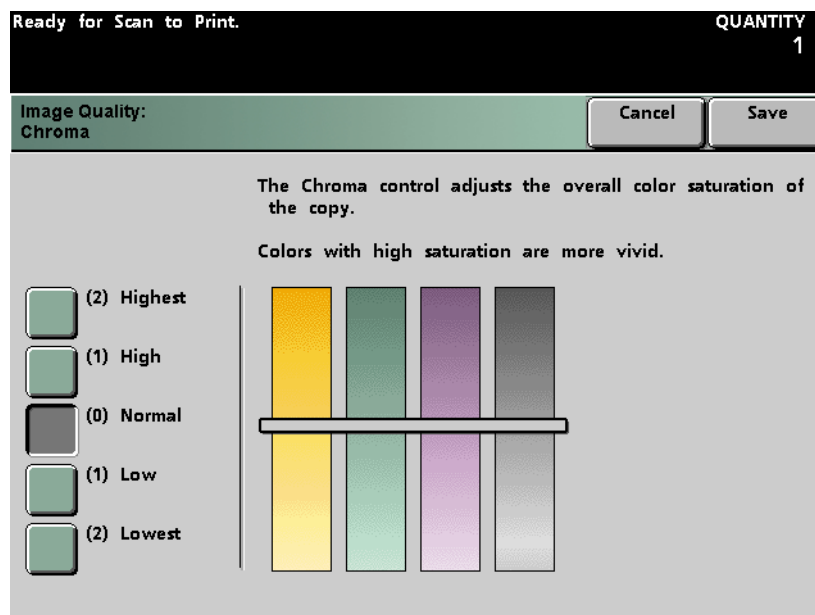

**Figure 55. Chroma Screen**


## Color Bar

The Color Bar option places a color bar on the printed output, which enables you to determine if image quality needs to be adjusted. When this feature is turned on, a Color Bar image appears on the lead edge of the output, as long as the distance between the leading edge of the paper and the leading edge of the image is greater than or equal to 15mm. The Color Bar continues to appear on all output that contains enough space until the feature is turned off.

You must select a specific Paper Tray on the *Basic Features* screen for the Color Bar button to be selectable.

123...

- 1 Touch the **Color Bar** button on the *Image Quality* screen. The *Color Bar* screen is displayed.

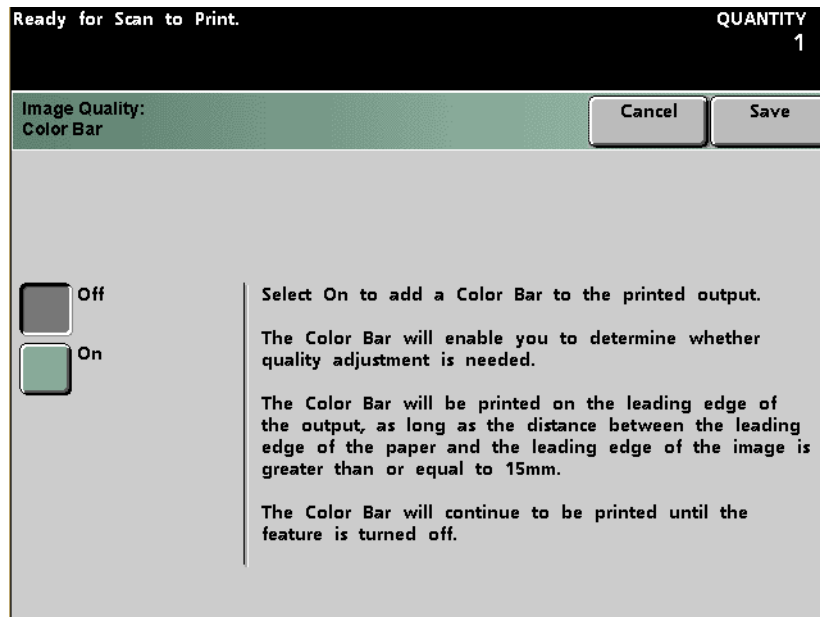

**Figure 56. Color Bar Screen**

- 2 Touch either the **On** or **Off** button.
- 3 Touch the **Save** button.
- 4 Continue selecting options for your job.
- 5 When you are finished selecting options, press the **Start** button.

## More...

Touching the *More...* tab allows you to select the features on the *Output Format* and *Job Assembly* screens.

## Output Format

The *Output Format* tab contains features associated with the organization of the finished product. It is recommended that you run a Proof Set (refer to Job Assembly in this chapter for the procedure) to ensure that all job settings are correct and that they produce the desired output.

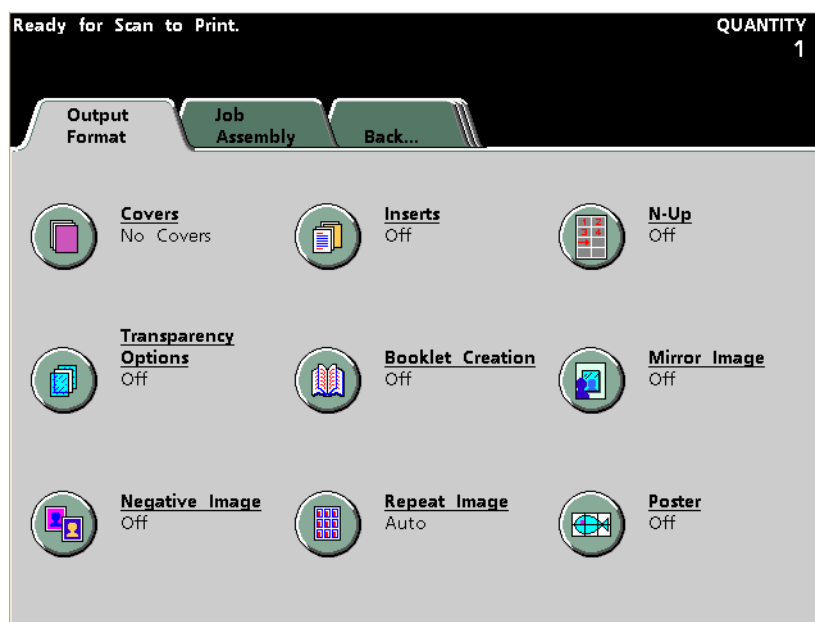


Figure 57. Output Format Screen

## Covers

The Covers option allows you to run covers from any tray loaded with the proper paper. You may run Front Covers and Back Covers from different trays for the same job. Paper used for Covers must be the same size and orientation as that used for the body of the job.


If the Covers require 2-sided output, paper used for Covers must be the same weight and material as paper used for the body of the job. Heavyweight paper or transparencies may be used for 1-sided Covers only.

You must select Collated and a specific Paper Tray on the *Basic Features* screen for the Covers button to be selectable. The Covers feature may not be used in combination with the N-Up, Transparency Options, Booklet Creation, Repeat Image, or Poster features.

123...


1

Touch the **Covers** button on the *Output Format* screen. The *Covers* screen is displayed.

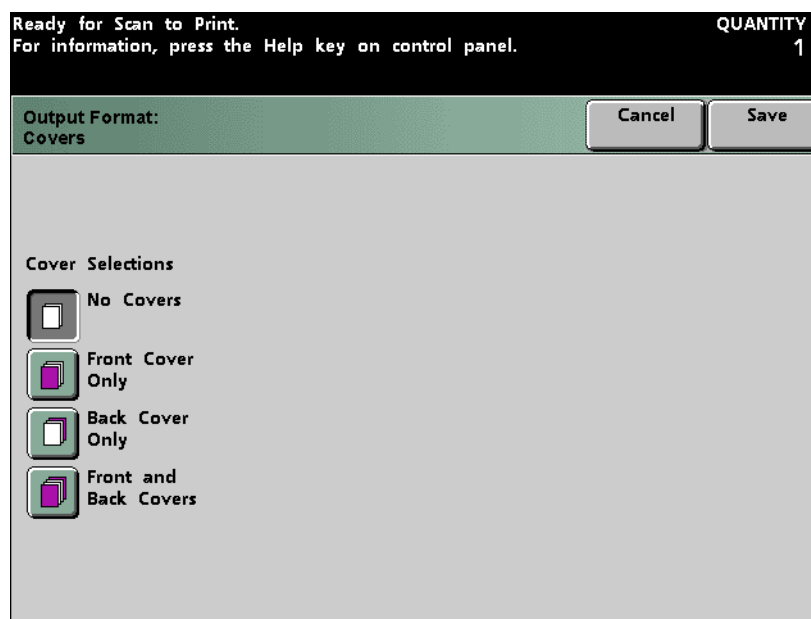


**Figure 58. Covers Screen**

- 2 Touch **No Covers**, **Front Cover Only**, **Back Cover Only**, or **Front and Back Covers**.
- 3 If you select **Front Cover Only**, you must indicate if there is an image on the cover. Touch **None** for no image and **Front Only** if there is an image on the front side of the Front Cover.

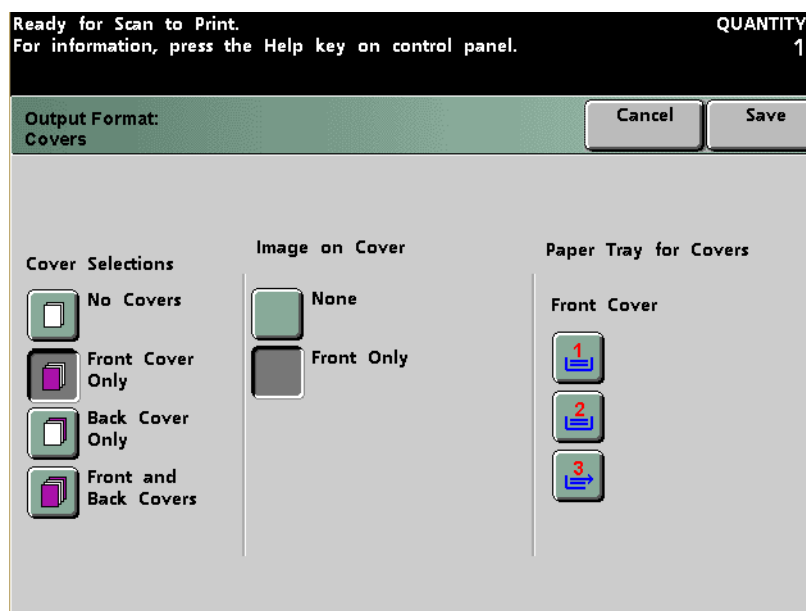


**Figure 59. Front Cover Only Screen**

If you select **Back Cover Only**, you must indicate if there is an image on the cover. Touch **None** for no image and **Back Only** if there is an image on the back side of the Back Cover.

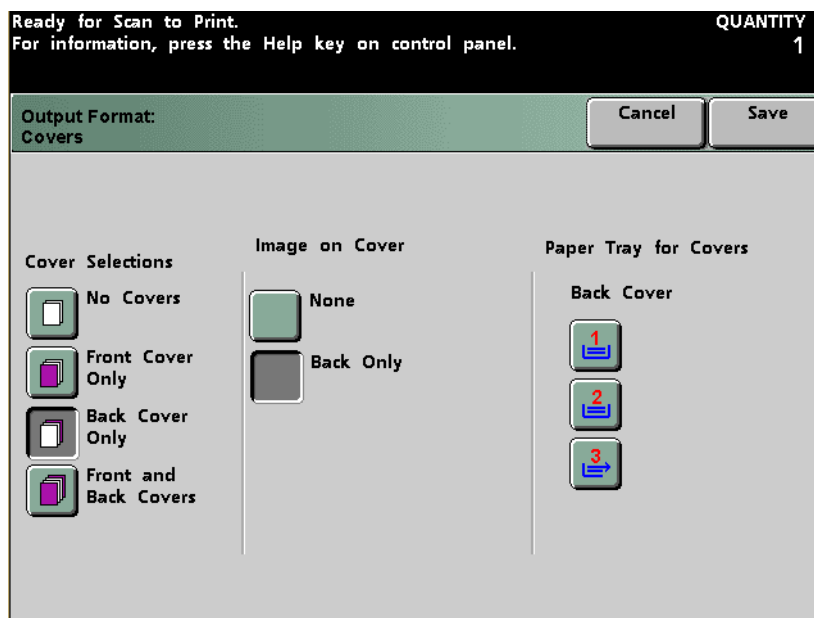

*Figure 60. Back Cover Only Screen*

If **Front and Back Covers** has been selected, you must indicate if there is an image on either cover. Touch **None** for no image, **Front Only** if there is an image on the front side of the Front Cover, **Back Only** if there is an image on the back side of the Back Cover, or **Front & Back** for an image on the exterior side of both covers.

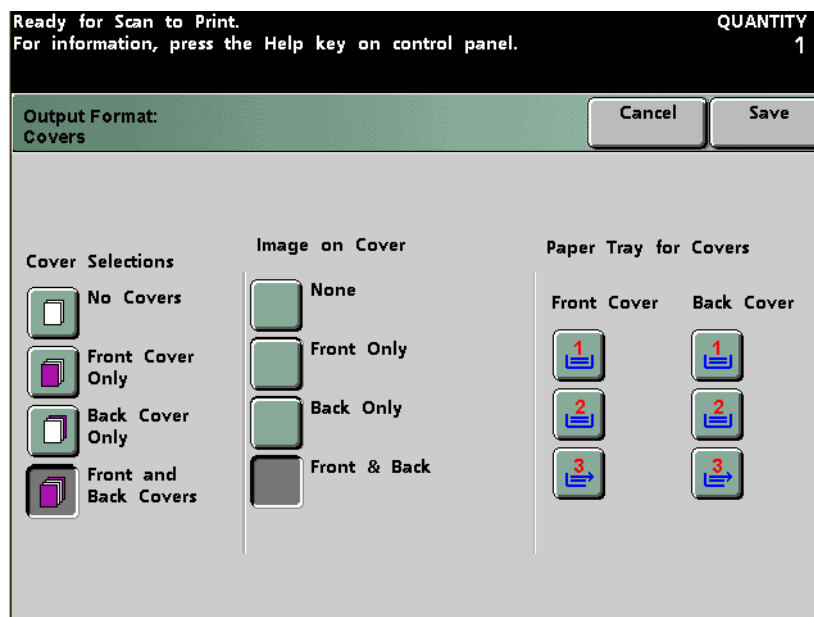

**Figure 61. Front and Back Covers Screen**

- 4** If **Front Cover Only**, **Back Cover Only**, or **Front and Back Covers** have been selected, you must indicate the tray from which the cover stock is fed.
- 5** Touch the **Save** button.
- 6** Continue selecting options for your job.
- 7** When you are finished selecting options, press the **Start** button.

Inserts

Inserts allows you to insert blank or preprinted sheets into a job after predetermined pages. Inserts must be the same size and orientation as the paper used for the body of the job and can be loaded into any of the available trays. An image cannot be printed on an insert. Inserts are not subject to billing.

Up to 10 inserts can be placed in a single set of a job. Up to 300 inserts can be inserted into the sets of a job. (For example: If you choose to have 10 inserts placed in a single set of output for a job, you will be able to run 30 sets of the job.)

You cannot place more than one insert in the same predetermined location. Automatic Tray Switching may be used in combination with the Inserts option. Output must be Collated, and a specific Paper Tray must be selected on the *Basic Features* screen for the Inserts button to appear. Inserts may not be used in combination with the N-Up, Transparency Options, Booklet Creation, Repeat Image, or Poster features.

123...

- 1 Touch the **Inserts** button on the *Output Format* screen. The Inserts screen is displayed.

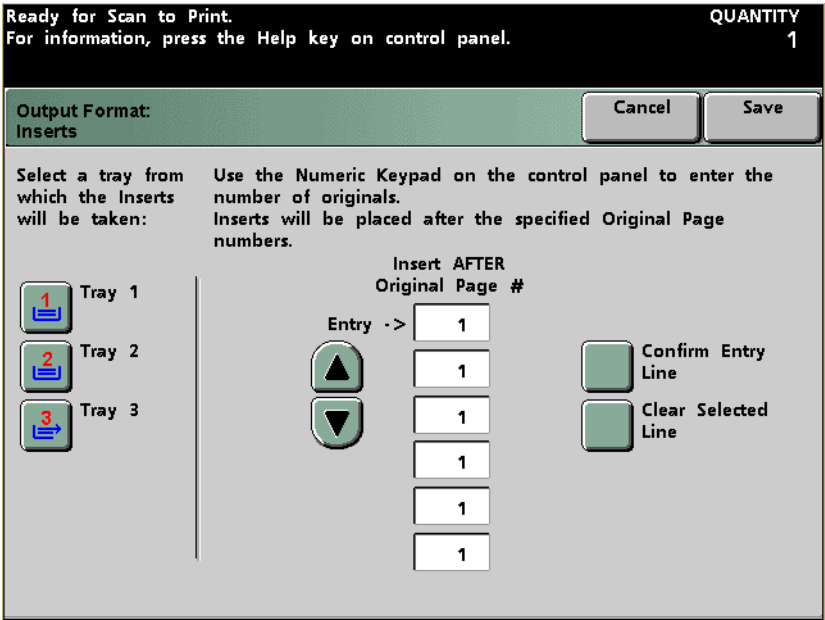


Figure 62. Inserts Screen



- 2 Choose the tray that holds the Inserts.
- 3 Using the keypad on the Control Panel, select the page number after which you want to place an insert. Confirm the Entry Line or Clear the Selected Line and reinput the page number.
- 4 Repeat step 3 up to 10 times.
- 5 Touch the **Save** button.
- 6 Continue selecting options for your job.
- 7 When you are finished selecting options, press the **Start** button.

N-Up

N-Up allows you to print multiple document images, in a specified order, on a single sheet of paper. The images may be printed 2-Up, 4-Up, or 8-Up. If you have an odd number of images, add a blank image to make it an even number. A graphic representation appears on the right side of the display depicting your choice.

You must specify the orientation of the original document, the original image, and the paper in the chosen tray. You may select only one Original Type that will apply to all originals for the job.

Each image will be centered within its position on the output page. Edge Erase is used for the individual images in their section of the output page. When Auto is selected in Lighten/Darken (refer to Image Quality), the setting of the first image applies to the rest of the images.

Mixed Size Originals may be used in combination with N-Up, but image loss may occur. The N-Up feature cannot be used in combination with the Interrupt, Inserts, Covers, Booklet Creation, Mirror Image, Negative Image, Repeat Image, Poster, Bound Originals, or Image Shift features.

123...

- 1 Touch the **N-Up** button on the *Output Format* screen. The *N-Up* screen is displayed.

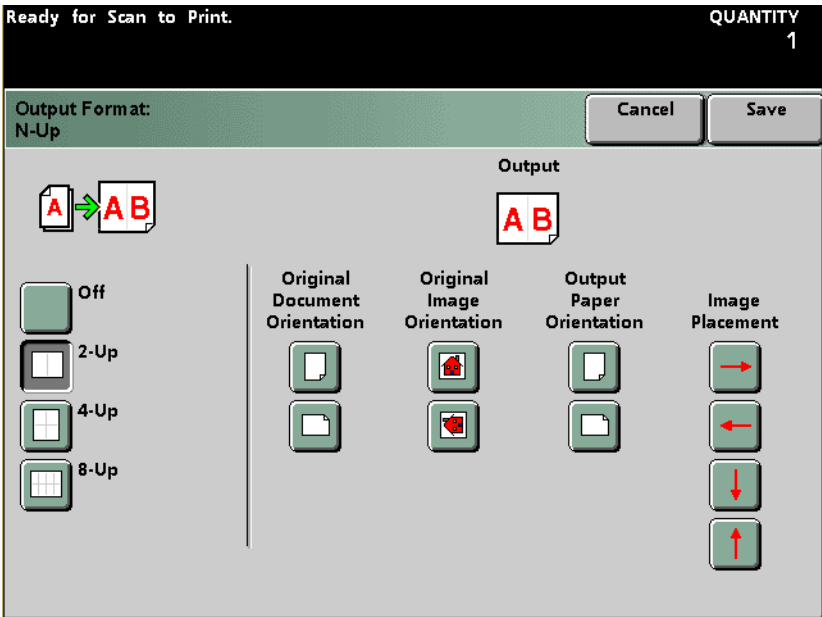


Figure 63. N-Up Screen with 2-Up selected

- 2** Choose the number of images required (**2-Up**, **4-Up**, or **8-Up**).
- 3** Touch either **Portrait** or **Landscape** for the Original Document Orientation.
- 4** Indicate the Original Image Orientation.
- 5** Touch either **Portrait** or **Landscape** to indicate the Copy Paper Orientation.
- 6** Using the arrow buttons, indicate the Image Placement. (Refer to the Output display at the top of the screen for image placement and orientation.)
- 7** Touch the **Save** button.
- 8** Continue selecting options for your job.
- 9** When the option selections are complete, press the **Start** button.

## Transparency Options

---

Transparency Options allows you to do the following:

- **Transparency Set** produces a single set of transparencies with a designated number of sets of paper output. Only one set of transparencies is produced regardless of the number of paper sets requested.
- **Transparency Set + Dividers** produces a single set of transparencies + dividers with a designated number of sets of paper output. Only one set of transparencies is produced regardless of the number of paper sets required.
- **Dividers Only** produces a continuous stream of dividers to be incorporated into a job programmed for transparencies only. This is the option to choose if you are running multiple sets of transparencies and require a divider to be inserted between each set.

Off is the permanent default for Transparency Options. The default cannot be changed in Tools Mode.


Tray 3 is automatically selected when Transparency Options is selected.

Transparencies should be run from Tray 3 ONLY. If you have an optional Tray 4 you can run transparencies but it is not recommended. Any other tray may be selected for Dividers. If Transparency Options is selected and paper is in Tray 3, a message appears in the message area on the Touch Screen indicating that transparencies must be loaded into Tray 3.

Collated must be selected on the *Basic Features* screen for the Transparency Options button to appear. The Transparency Options feature cannot be used in combination with the Covers, Inserts, Booklet Creation, or Poster features.

123...


- 1 Touch the **Transparency Options** button on the *Output Format* screen. The *Transparency Options* screen is displayed.

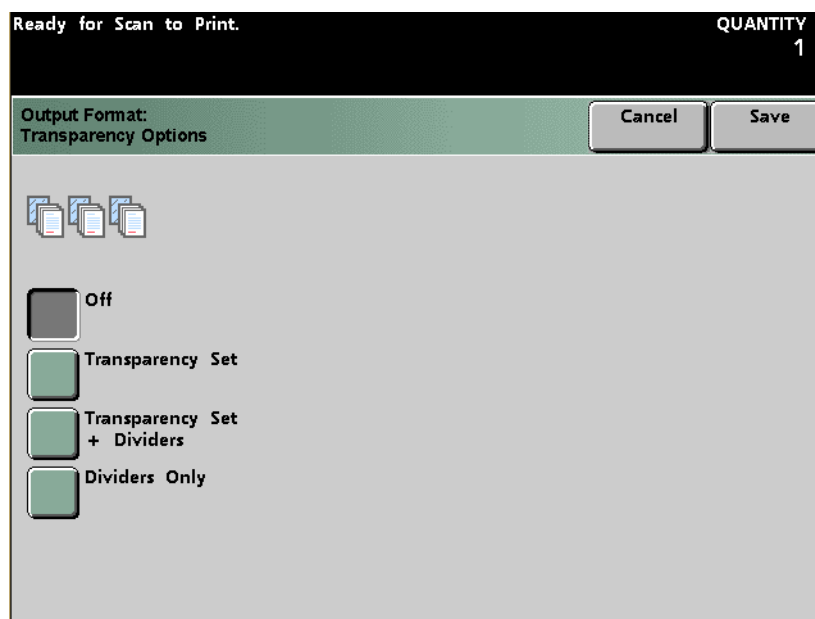

**Figure 64. Transparency Options Screen**

- 2 Select the type of transparency job required (**Transparency Set**, **Transparency Set + Dividers**, or **Dividers Only**).

- 3** If a finishing device is attached to your configuration, select where to feed the output. It is recommended that the transparencies be output to the Top Tray even though both selections are valid.

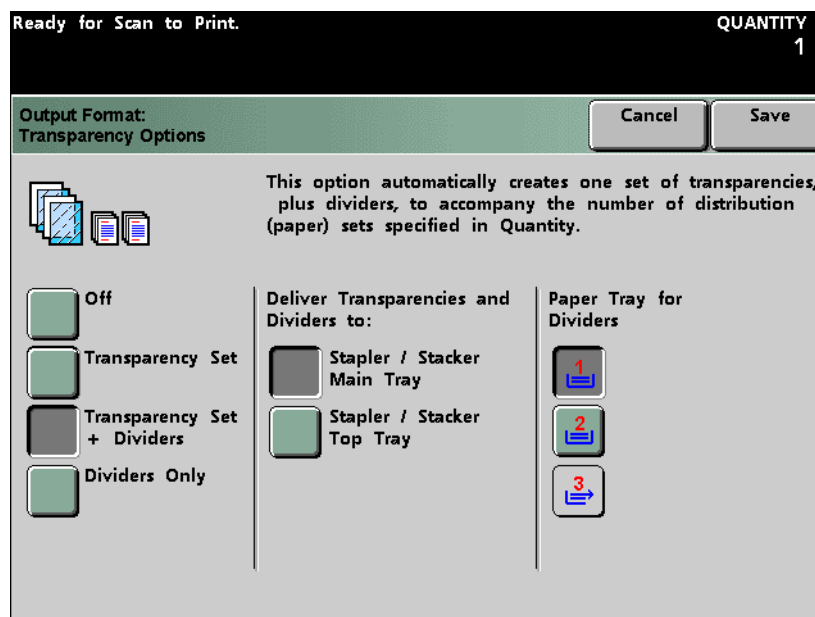

**Figure 65. Transparency Set + Dividers Screen**

- 4** If **Transparency Set + Dividers** or **Dividers Only** is selected, indicate the paper tray where the dividers are loaded.
- 5** Touch the **Save** button.
- 6** Continue selecting options for your job.
- 7** When you are finished selecting options, press the **Start** button.

## Booklet Creation

Booklet Creation allows you to create multi-page booklets from an ordered set of 1-Sided or 2-Sided originals. When Auto% is selected, the digital press reduces or enlarges the image as required. Any other Reduce/Enlarge selection could result in image loss.


When Booklet Creation is selected, the output is automatically set to 1 - 2 Sided. The selected paper tray must have the paper oriented SEF. Auto Paper is not available with Booklet Creation. The orientation of the original, whether you use the DADF or the Document Glass, must be LEF. The maximum paper size used is 8.5 x 11 inches (A4). There is a maximum output of 25 sheets, including covers, per booklet.

Output must be Collated, and a specific Paper Tray must be selected on the *Basic Features* screen for the Booklet Creation button to be selectable. The Booklet Creation feature cannot be used in combination with the Covers, Inserts, N-Up, Transparency Options, Mirror Image, Repeat Image, Poster, 2-Sided Output, Color Bar, Bound Originals, or Image Shift features.

123...


1

Touch the **Booklet Creation** button on the *Output Format* screen. The *Booklet Creation* screen is displayed.

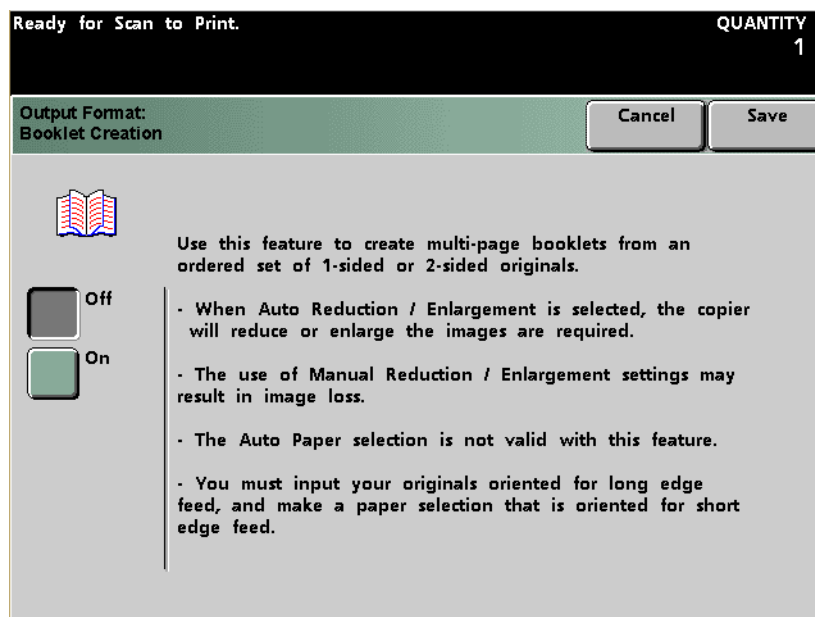

**Figure 66. Booklet Creation Screen**


- 2 Touch the **On** button.
- 3 Indicate whether the original documents are **1-Sided**, **2-Sided Head to Head**, or **2-Sided Head to Toe**.
- 4 Touch the **Binding Margin** button and input the Binding Margin in millimeters.

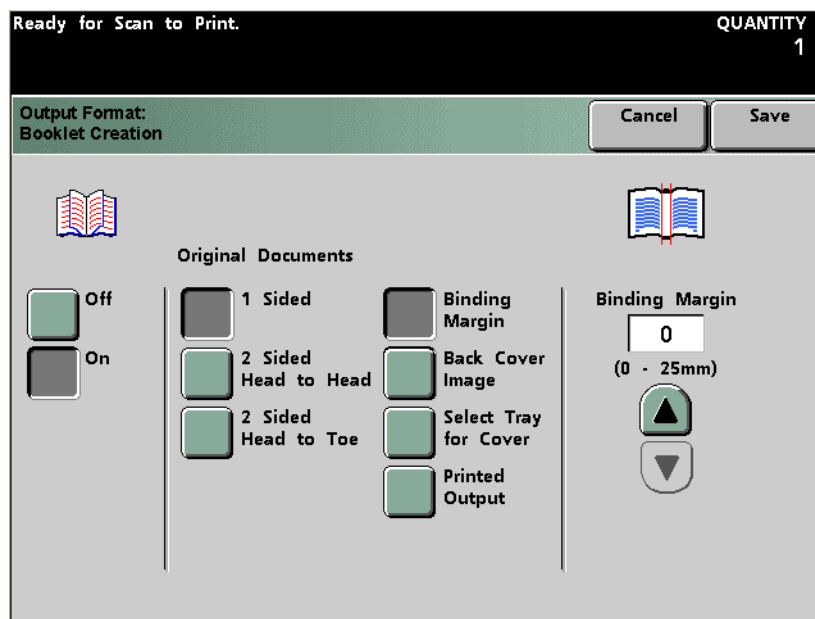

*Figure 67. Binding Margin Screen*




- 5** Touch **Back Cover Image** and **On** if required. (The default is Off. This option puts the last scanned image on the last booklet page when there are more booklet pages than scanned images.). If a Binding Margin is set, you may not select this option.

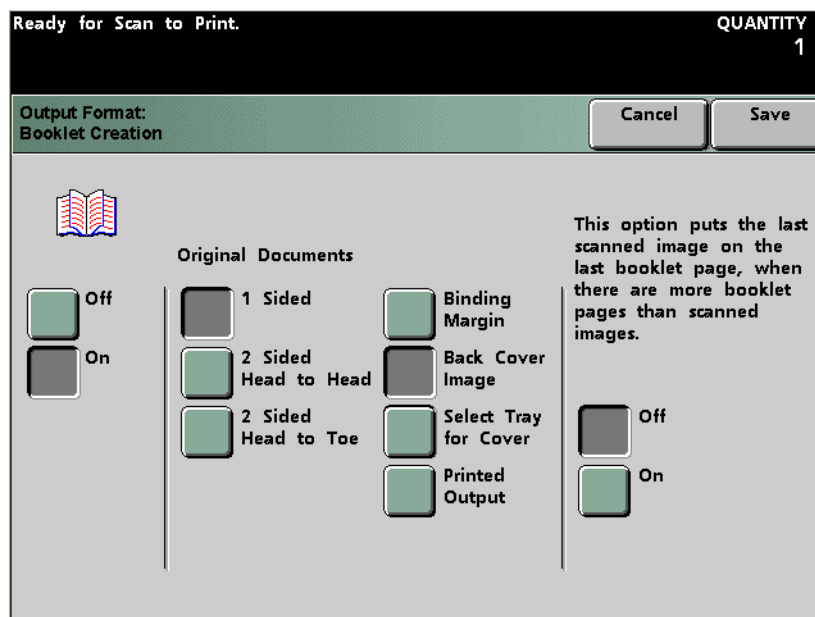


**Figure 68. Back Cover Image Screen**

- 6** Touch **Select Tray for Cover** and **On** if required. (The default is Off. Since the Cover for the Booklet Creation is 8.5 x 11 inch maximum size sheet of paper, the front and back option does not appear here.) Touch the Paper Tray where the Covers are loaded.

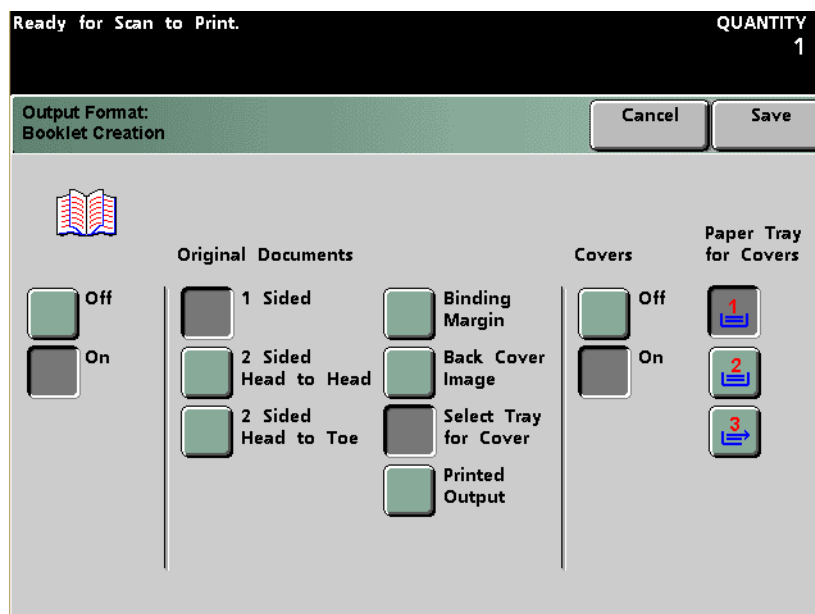

**Figure 69. Select Tray for Cover Screen**

- 7** Touch **Printed Output**. Touch the button for the final output orientation (**Left Bound Head to Head**, **Right Bound Head to Head**, or **Top Bound Head to Toe**).

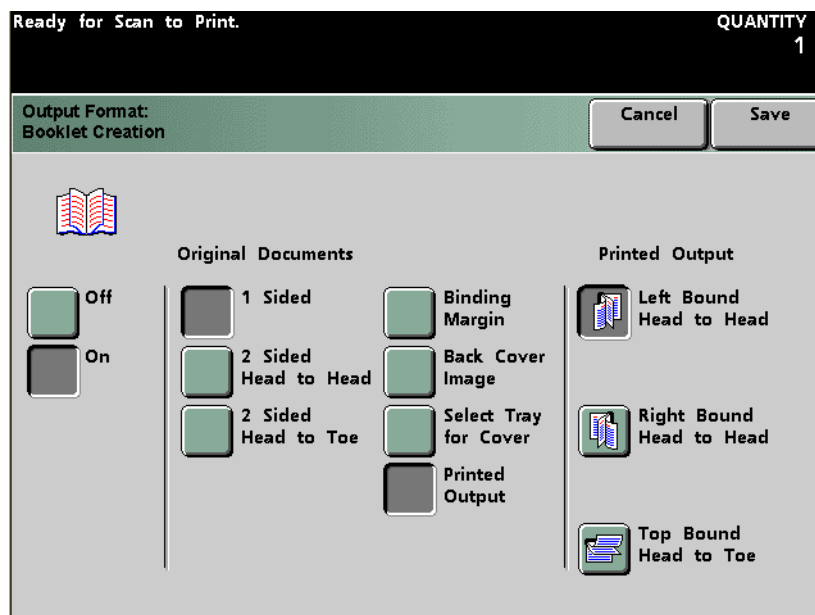

*Figure 70. Printed Output Screen*

- 8** Touch the **Save** button.
- 9** Continue selecting options for your job.
- 10** When you are finished selecting options, press the **Start** button.


## Mirror Image

Mirror Image enables you to make a mirror image (reversed image) copy of an original document.

Mirror Image cannot be used with N-Up, Booklet Creation, Repeat Image, 2-Sided Output, Poster, or any of the Image Shift options.

123...

- 1 Touch the **Mirror Image** button on the *Output Format* screen. The *Mirror Image* screen is displayed.

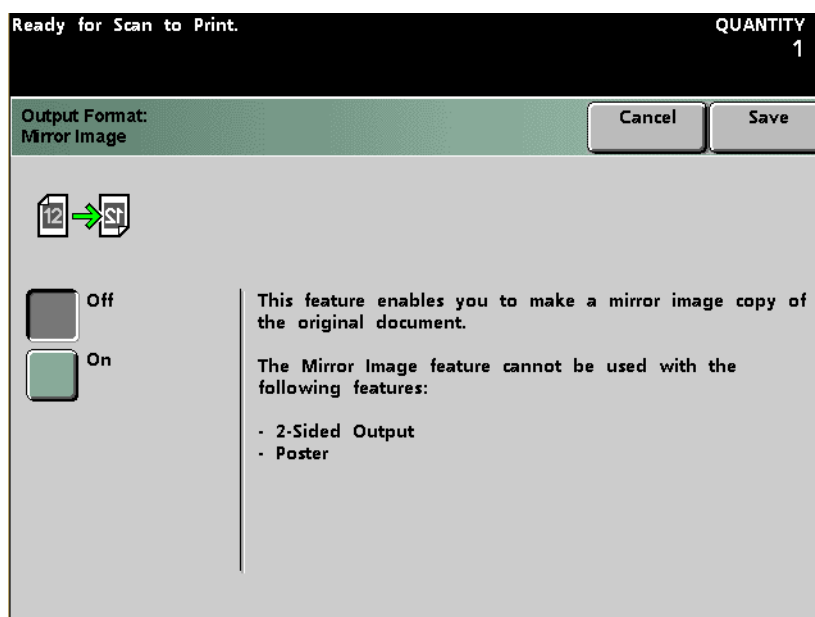

**Figure 71. Mirror Image Screen**

- 2 Touch either the **On** or **Off** button.
- 3 Touch the **Save** button.
- 4 Continue selecting options for your job.
- 5 When you are finished selecting options, press the **Start** button.


## Negative Image

Negative Image allows you to create a negative of an original document. The output color depends on the selections you choose in *Basic Features*, Color Mode. If you select Black Only, the black and white on the original is reversed. If you select a single color, the color and white on the original is reversed. If you choose Full Color or 3 Color in the Color Mode, the output produced is in complimentary colors.

The Negative Image feature cannot be used in combination with the N-Up, Repeat Image, or Bound Originals features.

123...

- 1 Touch the **Negative Image** button on the *Output Format* screen. The *Negative Image* screen is displayed.

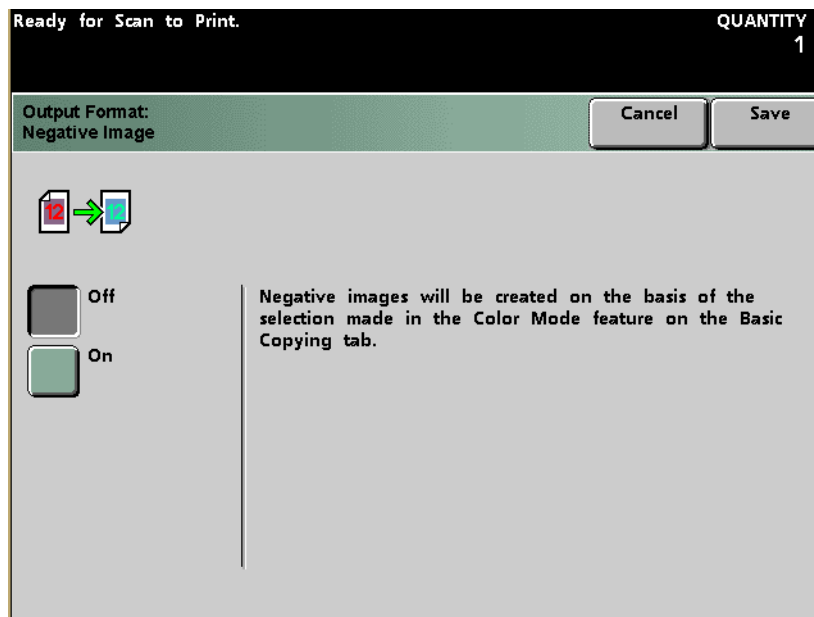

**Figure 72. Negative Image Screen**

- 2 Touch either the **On** or **Off** button.
- 3 Touch the **Save** button.
- 4 Continue selecting options for your job.
- 5 When you are finished selecting options, press the **Start** button.

## Repeat Image

Repeat Image enables you to print a single image repeatedly on a single sheet of paper or transparency up to 15 times in both the horizontal and vertical directions for any desired quantity of output.


- **Auto** automatically computes and place as many images in the horizontal and vertical directions as will fit within the limits calculated for the image size (document size x magnification) and paper size. You must choose a reduction ratio before this option has any effect on your output.
- **Manual** allows you to choose from 1 to 15 repetitions in both the horizontal and vertical directions.

A specific Paper Tray must be selected on the *Basic Features* screen for the Repeat Image button to be selectable. Repeat Image cannot be used in combination with Corner Shift, Image Shift, Margin Shift, 2-Sided Output, N-Up, Poster, Booklet Creation, Center Erase, Negative Image, Bound Originals, Covers, or Inserts.

123...


1

Touch the **Repeat Image** button on the *Output Format* screen. The *Repeat Image* screen is displayed.

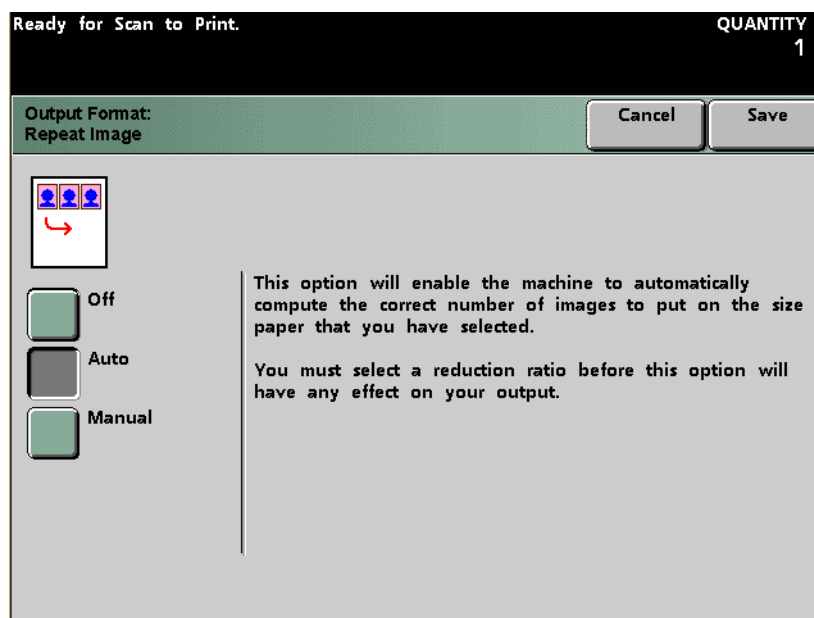

**Figure 73. Repeat Image Screen**

## 2 Select **Auto** or **Manual**.

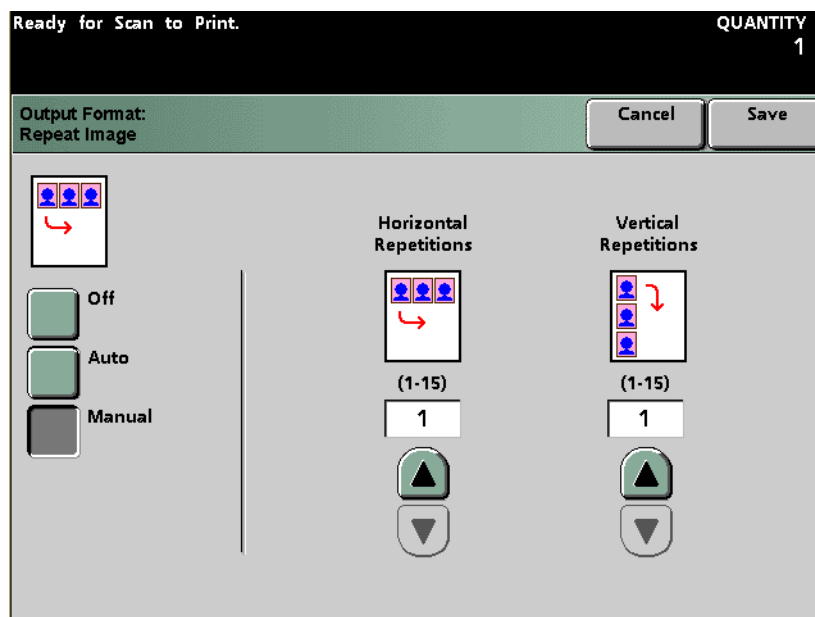

**Figure 74. Manual Repeat Image Screen**

- 3 If you select **Auto**, ensure that a reduction ratio has been chosen. If you select **Manual**, indicate the number of images (1 to 15) in both the horizontal and vertical directions.
- 4 Touch the **Save** button.
- 5 Continue selecting options for your job.
- 6 When you are finished selecting options, press the **Start** button.

## Poster

Poster allows you to create a multi-page enlargement of an original. The number of copies is automatically set at one for this feature.

The arrangement of the image on the output depends on the document orientation (portrait or landscape) and the paper orientation (LEF or SEF).

Poster size is specified in two ways:

- **Preset**, specifies the output poster size by indicating the number of sheets of the paper size that will make up the finished Poster.
- **Enlarge%**, which permits independent specification of the X and Y axis percentages (100% to 400%) using the X and Y up and down arrows OR by selecting the percentage simultaneously for the X and Y axis using the center X/Y up and down arrows.

Output must be Collated, and a specific Paper Tray must be selected on the *Basic Features* screen for the Poster button to be selectable. The Poster feature cannot be used in combination with the Image Shift, N-Up, Repeat Image, Booklet Creation, Bound Originals, Mirror Image, Transparency Options, Mixed Size Originals, 2-Sided Output, Covers, or Inserts options.

123...

1

Touch the **Poster** button on the *Output Format* screen. The *Poster* screen is displayed.


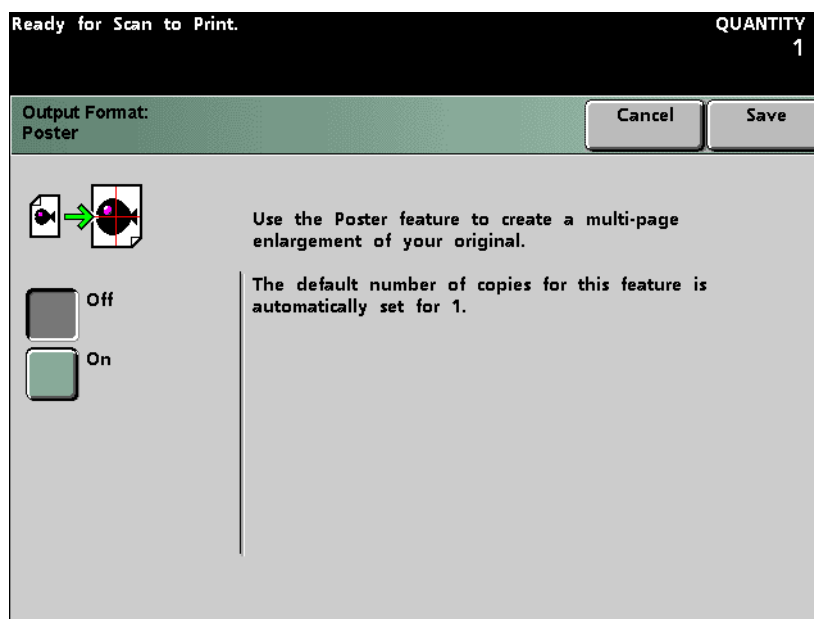


Figure 75. Poster Screen


- 2 Touch the **On** button.
- 3 Choose either **Presets** or **Enlarge%**.
- 4 If you select **Presets**, select the number of sheets for the output size indicated by touching the desired button.

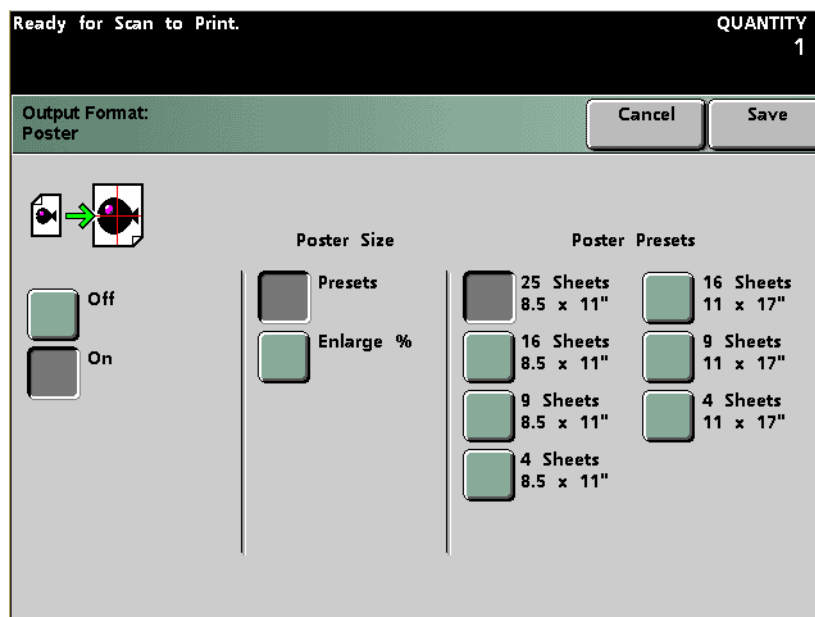

**Figure 76. Poster Presets Screen**



If you select **Enlarge%**, input the X and Y axis enlargement values (100% to 400%) independently or simultaneously.

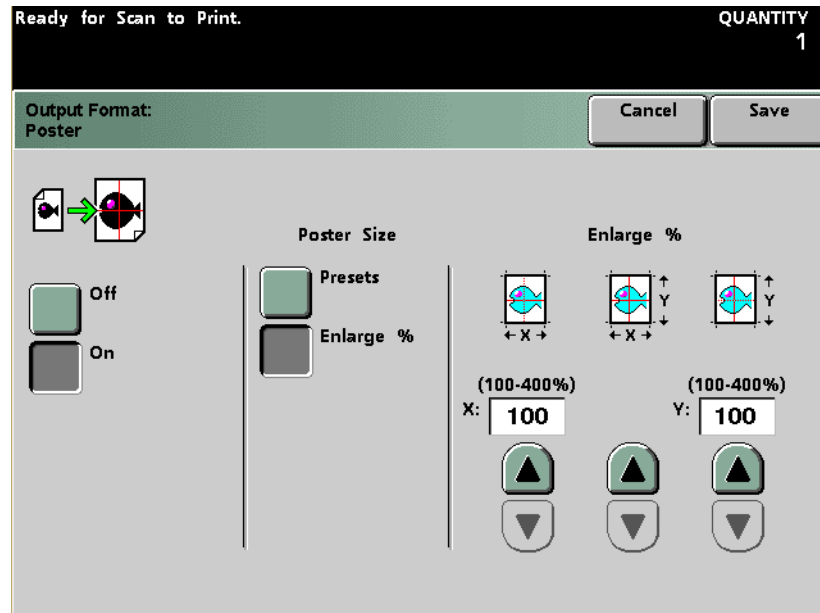


**Figure 77. Poster Enlarge% Screen**

- 5** Touch the **Save** button.
- 6** Continue selecting options for your job.
- 7** When you are finished selecting options, press the **Start** button.

## Job Assembly

Job Assembly allows you to build individual jobs and to print a proof set to ensure all settings for your job are correct.

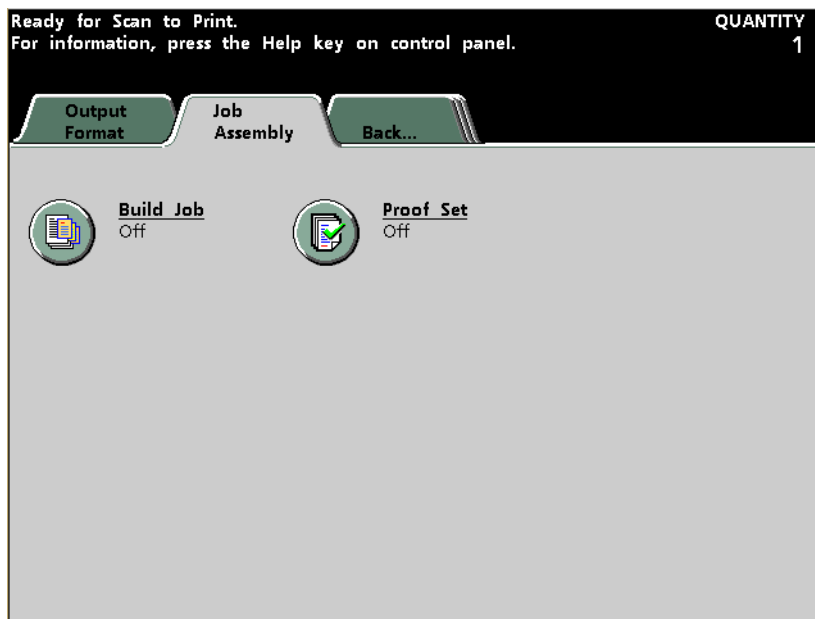

*Figure 78. Job Assembly Screen*

## Build Job


Build Job allows you to program, scan, and store individual job segments of a large or complex copy job, and then print all the segments as one complete job. This feature is useful when you have copy jobs containing more than fifty originals. Segments are programmed as if they were ordinary, independent jobs, and scanning is initiated for each segment by pressing the Start button.

When you press the Save button, the *Build Job* screen closes, and control reverts to the *Basic Features* screen. A new button, Build Job Controls, appears at the top right of all primary screens. Press this button to access features that are available after a segment is saved.

Output must be Collated, and a specific Paper Tray must be selected on the *Basic Features* screen for the Build Job button to appear on the *Job Assembly* screen. The Build Job feature cannot be used in combination with the Inserts, Covers, or Poster options.


123...

- 1 Touch the **Build Job** button on the *Job Assembly* screen. The *Build Job* screen is displayed.

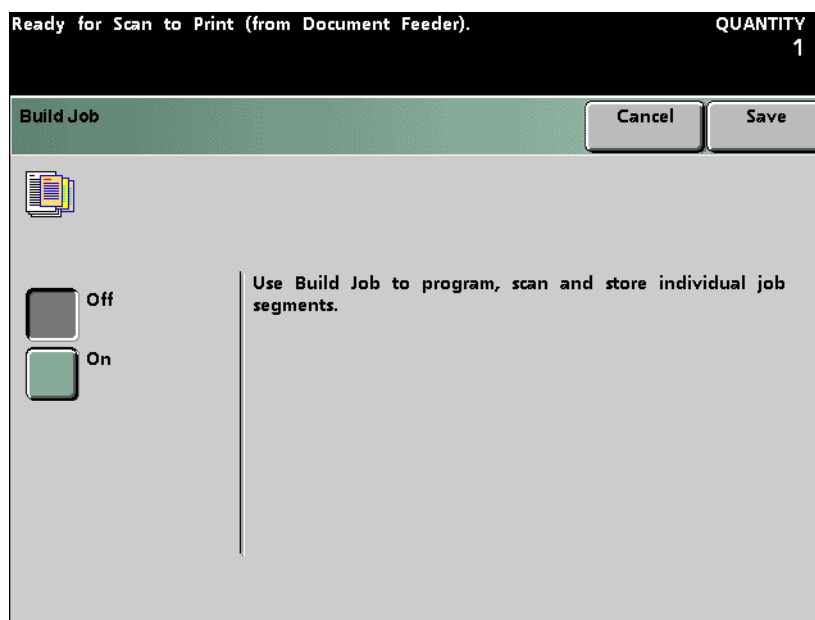

**Figure 79. Build Job Screen**

- 2 Touch the **On** button. The *Build Job On* screen is displayed.

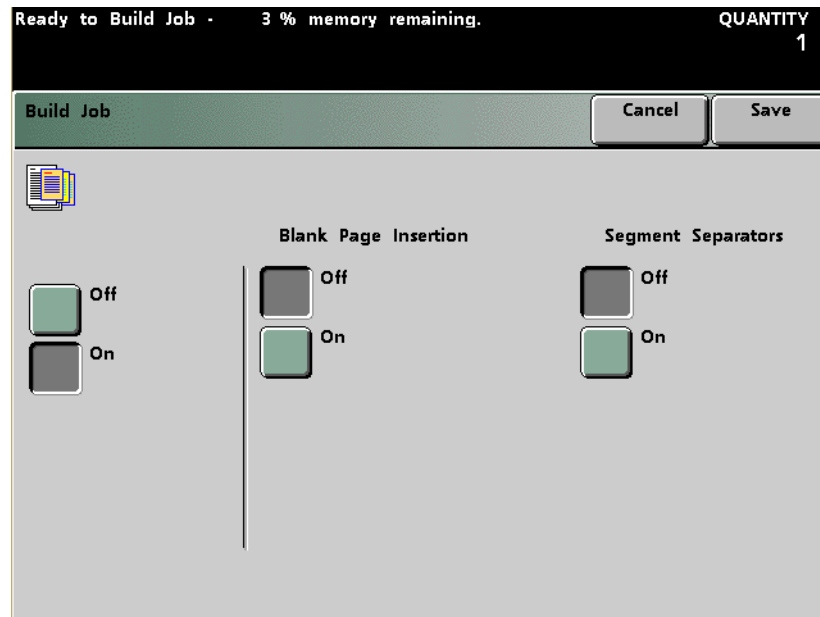

**Figure 80. Build Job On Screen**


- 3 Touch either the **On** or **Off** button (under Blank Page Insertions) to have a blank page placed at the end of the job.
- 4 Touch either the **On** or **Off** button (under Segment Separators) to have a separator inserted between segments.
- 5 Touch the **Save** button to save your settings and return to the *Basic Features* screen.
- 6 Continue selecting options for this segment just as you would for any ordinary scan to print job.



**NOTE:** *Options are programmed independently for each individual segment. Therefore, after this segment is programmed and the Start button is pressed, all options will return to the default settings. You will have to program the desired options each time you scan a segment.*

- 7 When you are finished selecting options for this segment, press the **Start** button. Repeat steps 6 and 7 for each segment or press the Build Job Controls button, described in steps 8 through 10, to access features available after each segment is scanned.

- 8** Press the **Build Job Controls** button at the top-right corner of the screen. The *Build Job Controls* screen is displayed.

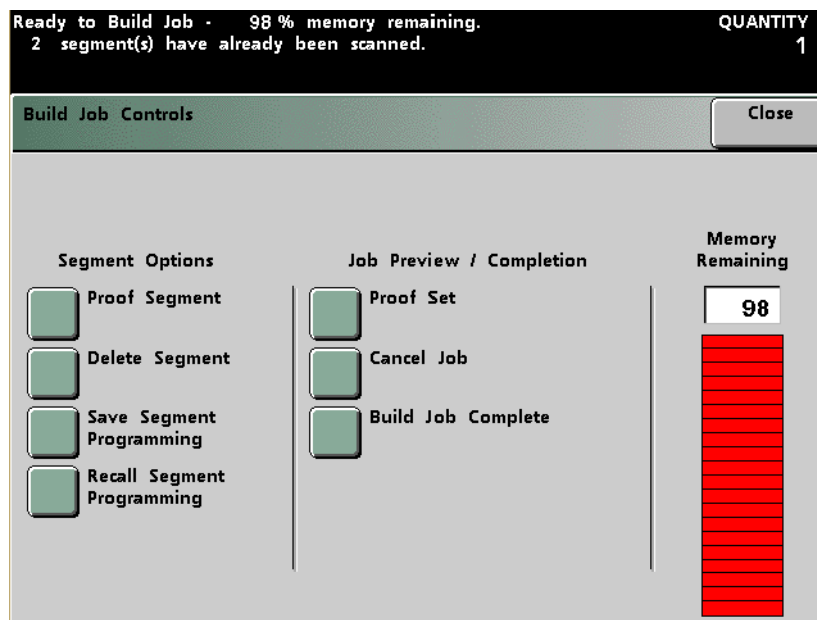

**Figure 81. Build Job Controls Screen**

- 9** Choose the desired Segment Option:
- Touch the **Proof Segment** button to print out a proof set of the last segment that was scanned.
  - Touch the **Delete Segment** button to delete the last segment that was scanned.
  - Touch the **Save Segment Programming** button to save the programming options for the last scanned segment for later use in the build job.
  - Touch the **Recall Segment Programming** button to recall programming that was saved for a previously scanned segment. This button is only selectable after the first segment is scanned.
- 10** Choose the desired Job Preview/Completion option:
- Touch the **Proof Set** button to print out a proof set of all the segments scanned for this build job.
  - Touch the **Cancel Job** button to cancel the entire build job and exit the Build Job feature.
  - Touch the **Build Job Complete** button when you are finished compiling the build job. The entire build job will be output to the printer.
- 11** When all segments are completed, press the **Build Job Complete** button. Every segment that you programmed for this build job will be output to the printer as one complete job.

## Proof Set


Proof Set outputs one full set of a job, allowing you to ensure that all job settings are correct and to produce the desired output.

Collated must be selected on the *Basic Features* screen in order for the Proof Set button to appear on the *Job Assembly* screen. The Proof Set feature cannot be used in combination with the Poster option.

123...


1

Touch the **Proof Set** button on the *Job Assembly* screen. The *Proof Set* screen is displayed.

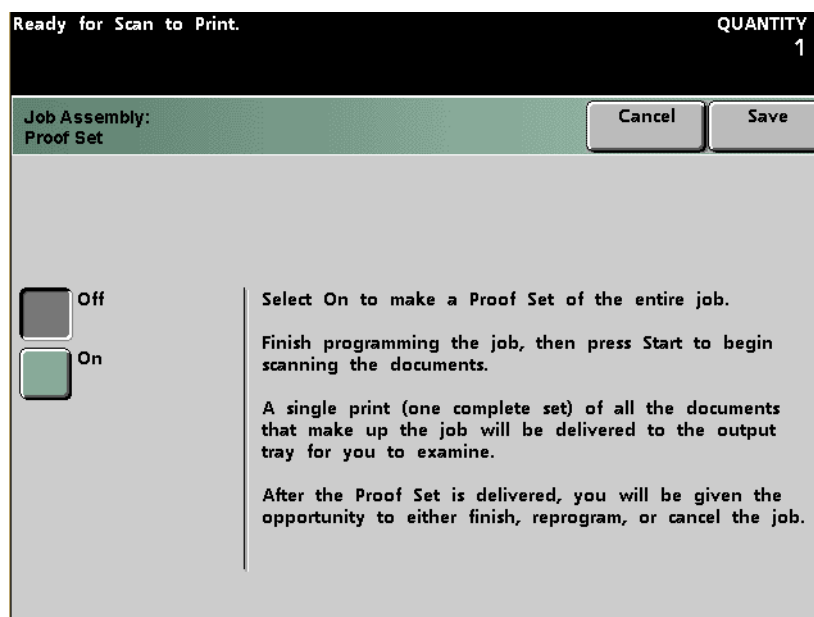

**Figure 82. Proof Set Screen**

- 2 Touch the **On** button. One full set of your job is output, and the *Proof Set Job Completion* screen is displayed.

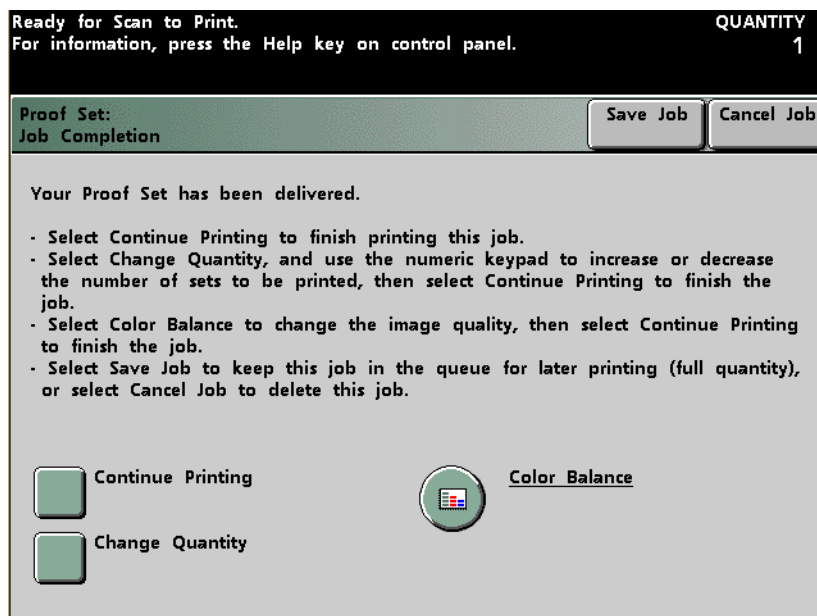

**Figure 83. Proof Set Job Completion Screen**

- 3 Touch the **Continue Printing** button to finish printing the job. Touch the **Change Quantity** button, and use the numeric keypad on the Control Panel change the number of sets to be output. Touch the **Color Balance** button to change the image quality.
- 4 If you select **Change Quantity** or **Color Balance**, touch the **Continue Printing** button to finish printing the job.
- 5 Touch either the **Save Job** or **Cancel Job** button.

## Back

Selecting the *Back...* tab returns you to the *Basic Features* screen.

This page is intentionally left blank.



## 5. Accessories

---

### Tray 4


---

Tray 4 is an optional high capacity paper tray with a capacity of 2500 sheets of 24 pound (64 - 80 g/m<sup>2</sup>) paper.


Refer to the *Color Materials User Guide* and the *Recommended Materials List* for paper guidelines. The *Recommended Materials List* is a downloadable file at [www.xerox.com](http://www.xerox.com). Use the search parameters DC 2060 or DC2045 and follow the path until you reach the files that can be downloaded.

### Identifying Tray 4 Parts


---

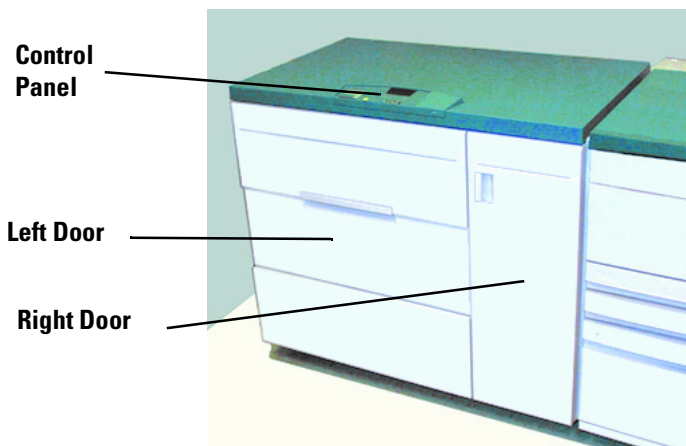

**Figure 1. Tray 4**

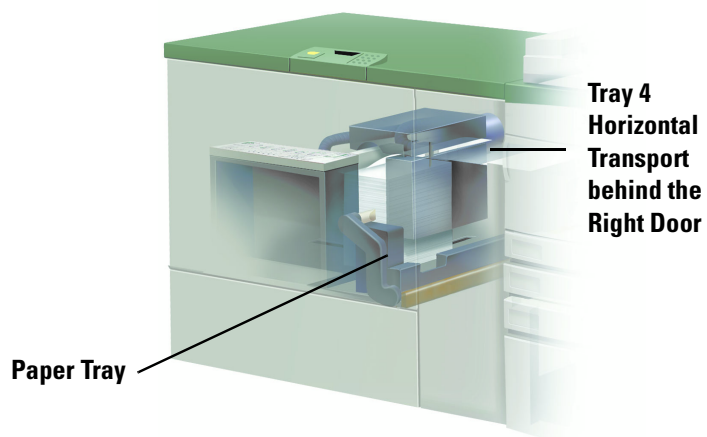

*Figure 2. Internal View of Tray 4*

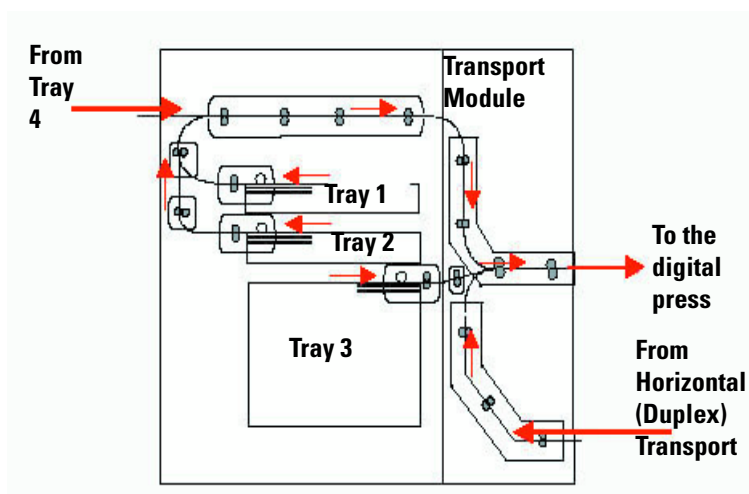

*Figure 3. Paper Path of Tray 4*

Control Panel

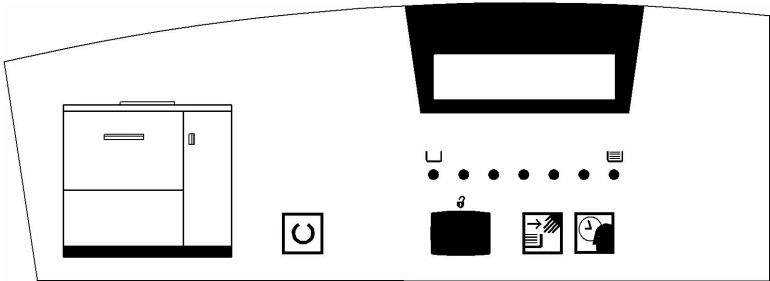






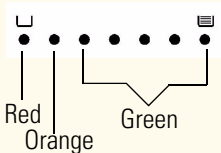



Figure 4. Tray 4 Control Panel

Symbol	Function
	Left Door: Misfeed jam indicator. Also blinks when Tray 4 is out of paper and the tray is open.
	Right Door: Open to clear jams for the Tray 4 Horizontal Transport and the Digital Press Left Side Door.
	Ready.

ACCESSORIES

Symbol	Function
	Tray Unlock: Use to load paper or lower the paper tray.
	Ready to open.
	Wait. The paper tray is in motion, wait until the light goes out.
	Paper level indicator. The far left indicator is red: Tray 4 will not function until paper is loaded. The second indicator is orange, warning of a low paper level. The other indicators are green, which indicates the level of paper in the tray.
	When Tray 4 is turned on, the display flashes, then the software version number is shown. After initialization, a green indicator light appears in the lower left corner of the screen. All other codes shown are for the Xerox representative to run diagnostics when servicing Tray 4. If there is a problem that you can rectify, the problem and the corrective action appears on the digital press Touch Screen.
	The keypad under the door at the right of the Control Panel is for the Xerox representative to run diagnostics when servicing the unit.

## Paper Stock Specifications

There are two positions in which paper is fed into the digital press. One of the positions is called long edge feed (LEF). Long edge refers to the long edge of your paper. When you see LEF, position your paper so that the long edge is fed first. The other position is called short edge feed (SEF). Short edge refers to the short edge of your paper. When you see SEF, position your paper so that the short edge is fed first.

Tray 4 handles paper from a minimum of 64 g/m<sup>2</sup> up to 220 g/m<sup>2</sup>, either coated or uncoated. It accepts all standard paper sizes supported by the DocuColor 2060/2045, with the exception of JIS B5 LEF (Asian standard size).

Non standard sizes from 182 to 320mm (7.2 to 12.6") across the feed direction, and 203 to 488 mm (8.0 to 19.2") in the feed direction, with the exception of some long narrow paper sizes are also accepted by Tray 4. Paper longer than 305 mm (12") in the feed direction must measure at least 210 mm (8.3") across the feed direction.

Special paper stock for Tray 4:

- Letterhead (refer to Letterhead procedure in this section).
- 3 hole drilled paper is not recommended.
- Colored paper.
- Coated/Non-coated paper (coated paper less than 100 g/m<sup>2</sup> may not feed as reliably as coated paper greater than 100 g/m<sup>2</sup>).
- Tabbed Inserts can be run but are not recommended for Tray 4. Refer to Tabbed Inserts procedure in this section.

Tray 4 holds a maximum of 2500 sheets of 24 pound (64 - 80 g/m<sup>2</sup>) paper (five reams). DO NOT fill above the MAX line.

For further instructions on loading special stock, refer to the Loading Special Stock section in this chapter.

Paper	Tray 4
Paper Size	JIS B5 (SEF) 8.5 x 11 inch/A4 (LEF/SEF) JIS B4 (SEF) 11 x 17 inch/A3 (SEF) 8 x 10 inch (SEF) 8.5 x 13 inch (SEF) 8.5 x 14 inch (SEF) 12 x 18 inch (SEF) SRA3, 320 x 450 mm (SEF) 12.6 x 19.2 inch (SEF)
Paper Weight Range	64 - 220 g/m <sup>2</sup>
Transparencies	No
Transfer Paper	No
Coated Paper	Yes
Tabbed Inserts	Can be run but is not recommended



**KEY POINT:** *When feeding 8.5 x 11" and A4 paper to the optional High Capacity Stacker Stack Tray, the paper must be fed LEF.*


## Tray 4 Special Features

Special features help control the environmental conditions in the paper tray to ensure optimum print capability:

- Paper Tray 4 has an optional heater kit available.

## Loading Special Stock in Tray 4

To ensure that the output is correct follow the orientation shown on the Tray 4 indicator when loading special stock.



### Tabbed Inserts

Tabbed Inserts can be run from Tray 4 but it is not recommended. Load the non-tabbed, short edge of the tabbed insert as the lead edge, and select non-standard paper. If a jam occurs while running tabbed sets, there is no recovery procedure. You have to manually reassemble your originals and prints, determine where the job left off and resume printing or cancel the job and start again.

The size of the tabbed insert should be 9 x 11 inch (229 x 279 mm) for letter size tabs (223.5 x 296 mm for A4 equivalent tabs). Select the proper weight of the insert on the tray. Select Non-standard size and input 11 inches or 296 mm for A4 as the X axis and 9 inches or 223.5 mm for A4 as the Y axis dimensions for SEF. Refer to the *System Administration Guide*, Tools Mode chapter, for programming non-standard size paper.



**KEY POINT:** *If you are using drilled Tabbed Inserts, you may experience sporadic jams caused by the holes passing over the sensors.*

---

## Non-standard Size Paper


---

Non-standard size paper (7.2 to 12.6 (LEF) or 7.2 to 19.2 (SEF)) can be loaded into Tray 4. Ensure that Non-standard size paper is selected on Tray 4. Refer to the *System Administration Guide*, Tools Mode chapter, for programming non-standard size paper.

---

## Letterhead

---



Different inks and dry inks/toners are used to produce preprinted letterhead that may not pass through the digital press intact.

Refer to the Specialty Media Guide that came with your documentation for information on using preprinted letterhead paper.

---

## Coated Paper

---


Follow the directions on the ream of paper when loading coated paper.




**NOTE:** *Remove any remaining sheets from the Elevator Tray before loading a different paper stock.*



## Loading Paper in Tray 4

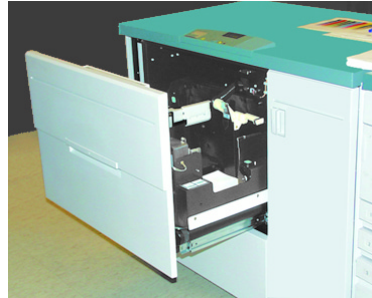

*Figure 5. Tray 4 Left Door Open*

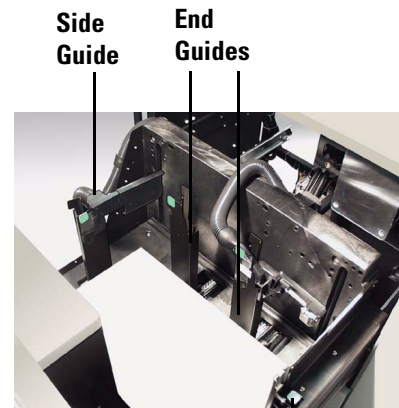

*Figure 6. Tray 4 Paper Guides*

123...

- 1** Press the **Tray Unlock** button.
- 2** Wait until the Ready to Open indicator is illuminated.
- 3** Open the Tray 4 Door.

**4** Remove any remaining sheets from the Elevator Tray if you are changing paper stock.

**5** Load the paper seam side (the side where the ream of paper is sealed) up in Tray 4.

Load the paper onto the Elevator Tray with the sheets even against the front and lead edge registration guides. DO NOT fill above the MAX line. Ensure that the side edge and end guides are against the paper. Incorrect loading of paper can result in excessive sheet skew, misfeeds, or multiple feeds due to paper guides not being aligned properly.



**KEY POINT:** *Tray 4 is an accessory shared with other printers. The Front Edge Paper Stop button is used for smaller sized paper that can be run on other printers. It has no functional use on the DocuColor 2060/2045.*


Although Tray 4 has auto size detection capability, the paper weight (g/m<sup>2</sup>) range must be selected on the Weight Indicator. Selecting the correct paper weight range affects the feed performance and Image Quality.

**6** Press the button until the light next to the correct weight is illuminated.




**KEY POINT:** *When the tray elevator lowers while loading paper, or after clearing a jam in Tray 4, make sure that the paper is registered evenly against the front and lead edge guides. This is most important when the tray is full of paper because the tray can tilt to compensate for curl or other conditions, and the top of the stack moves away from the front edge guides.*

- 7** Select **Standard** or **Non-Standard** paper, the g/m<sup>2</sup> of the paper, **Coated** or **Uncoated** paper, and adjust the Paper Guides until they lightly touch the paper. The Tray 4 will have one of the two labels below depending on the market area.

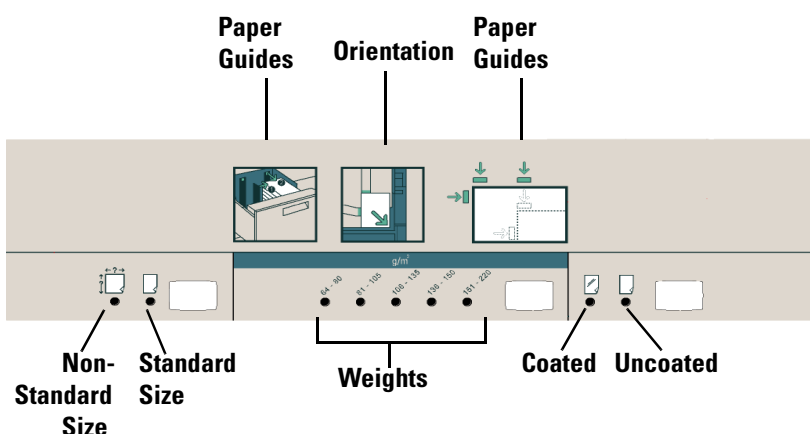

**Figure 7. Tray 4 Label without Words**

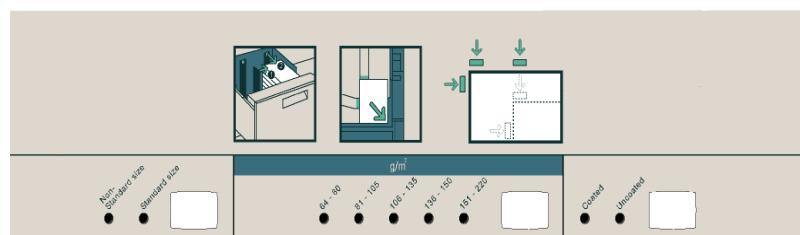

**Figure 8. Tray 4 Label with Words**

- 8** Close the Tray 4 Door.



If the door seems to be locked in the out position, give it a firm push.



**KEY POINT:** If you hear paper crumpling or tearing, stop closing the tray. Remove all pieces of any damaged paper and close the tray slowly.

The Elevator Tray automatically rises and stops at the correct feeding height.


## Selecting Tray 4

Tray 4 can be selected on the digital press Touch Screen for scan jobs, or for networked jobs as a selection through the Raster Image Processor.

The following instructions are for scanned jobs. Refer to the *Printing Guide* that came with your RIP for information on selecting Tray 4.

123...

- 1 Touch **Tray 4** in the Paper Supply column on the *Basic Features* screen.

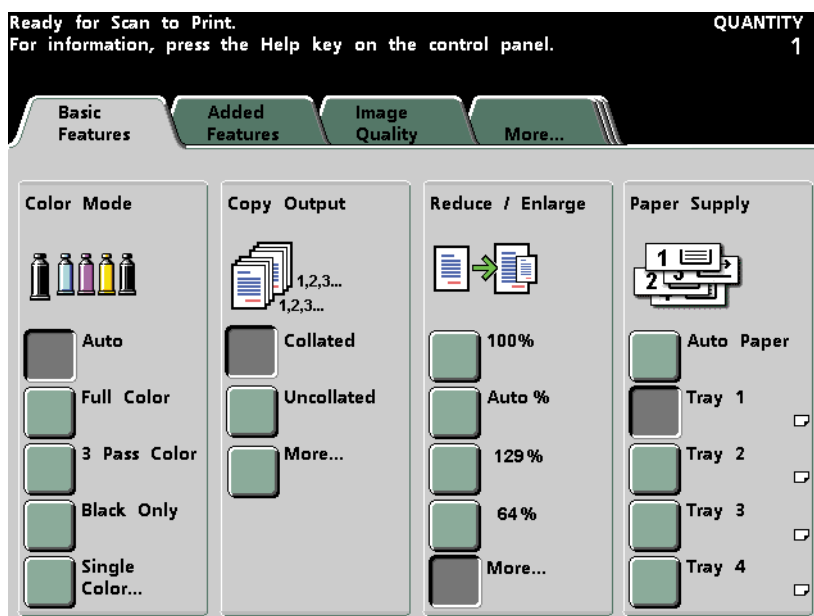

**Figure 9. Basic Features Screen**

- 2 Continue selecting any other desired options for your job.
- 3 When you are finished selecting options, press **Start**.

## Jam Clearance

A paper jam in Tray 4 is indicated by a message on the digital press Touch Screen. Follow the instructions displayed.

Perform the following steps to clear a Tray 4 jam and resume printing.

123...

- 1** The Tray 4 icon on the Tray 4 Control Panel will indicate which door on the Tray 4 to open. Open the doors indicated.
- 2** Press the **Tray Unlock** button.
- 3** Wait until the Ready to Open indicator is illuminated.
- 4** Open the Tray 4 Left Door.
- 5** Remove any misfed paper from the Tray 4 Paper Tray.
- 6** Open the Right Door, and remove any paper from the Tray 4 Horizontal Transport by lifting the green handle and turning the green knob in the direction of the arrow.
- 7** Open the Left Side Door of the digital press and remove any paper found in the digital press. Refer to the Left Side Door Jam Clearance section in the Problem Solving chapter in this manual.
- 8** Close the Left Side Door of the digital press.
- 9** Close the Tray 4 Doors.  
The Elevator Tray automatically rises and stop at the correct feeding height.
- 10** Follow the instructions displayed in the Touch Screen to resume printing.

## Digital Press Paper Reliability

---

The Best performance is obtained by using the baseline/centerline paper for which the system has been designed.

**North America:** Xerox Digital Color Xpressions 94, 24 lb.

**Europe:** Xerox Colotech+ 90 g/m<sup>2</sup>.

Refer to the *Recommended Paper List* found on the Internet at:

<http://www.xerox.com>

Use the search parameters DC 2060 or DC 2045 and follow the path until you reach the files that can be downloaded.

## Tray 4 Maintenance

---

### Cleaning Tray 4

---

Do not clean any area inside of Tray 4. If the exterior of Tray 4 requires cleaning, dampen a paper towel or soft, clean cloth with a liquid, nonabrasive glass cleaner or water.



**WARNING:** *To avoid damage to Tray 4, DO NOT pour or spray the cleaner or water directly onto Tray 4. Always apply the liquid to the cloth first.*



**WARNING:** *DO NOT use any other cleaners or solvents on Tray 4 or they may interact with the paint on the covers, eventually causing the paint to peel.*

## Problem Solving

Tray 4 has an altitude sensor that detects the curl of the paper and adjusts the Elevator Tray accordingly. If misfeeds and jams occur repeatedly:

- Find the problem in the Problem column.
- Follow the suggestion in the Suggested Solutions column until the situation is corrected.

Problem	Suggested Solutions
Fault Code 052-310 Communication problem	<ul style="list-style-type: none"> <li>• Cancel or save the job.</li> <li>• Power off the digital press. Wait 15 seconds and power on.</li> </ul>
Fault Code 052-320 Unexpected connection	<ul style="list-style-type: none"> <li>• Cancel or save the job.</li> <li>• Power off the digital press. Wait 15 seconds and power on.</li> </ul>
Fault Code 052-210 No response from Tray 4	<ul style="list-style-type: none"> <li>• Cancel or save the job.</li> <li>• Power off the digital press. Wait 15 seconds and power on.</li> </ul>
Fault Code 007-532 Tray 4 not ready to print	<ul style="list-style-type: none"> <li>• Cancel or save the job.</li> <li>• Power off the digital press. Wait 15 seconds and power on. If problem persists, use another tray and call for service.</li> </ul>
Fault Code 007-236 Tray 4 Tray Tilt Fault	<ul style="list-style-type: none"> <li>• Cancel or save the job.</li> <li>• Power off the digital press. Wait 15 seconds and power on. If problem persists, use another tray and call for service.</li> </ul>
Fault Code 007-239 Volt Failure	<ul style="list-style-type: none"> <li>• Cancel or save the job.</li> <li>• Power off the digital press. Wait 15 seconds and power on. If problem persists, use another tray and call for service.</li> </ul>
Fault Code 008-201 Drive motor problem	<ul style="list-style-type: none"> <li>• Cancel or save the job.</li> <li>• Power off the digital press. Wait 15 seconds and power on. If problem persists, use another tray and call for service.</li> </ul>
Fault Code 007-242 Air drive motor fault	<ul style="list-style-type: none"> <li>• Cancel or save the job.</li> <li>• Power off the digital press. Wait 15 seconds and power on. If problem persists, use another tray and call for service.</li> </ul>
Fault Code 007-243 Vacuum Valve fault	<ul style="list-style-type: none"> <li>• Cancel or save the job.</li> <li>• Power off the digital press. Wait 15 seconds and power on. If problem persists, use another tray and call for service.</li> </ul>
Fault Code 007-290 Internal software problem	<ul style="list-style-type: none"> <li>• Cancel or save the job.</li> <li>• Power off the digital press. Wait 15 seconds and power on. If problem persists, use another tray and call for service.</li> </ul>
No power to Tray 4	<ul style="list-style-type: none"> <li>• Check that the Tray 4 power cord is connected.</li> <li>• Test the Ground Fault Indicator according to the instructions in this chapter.</li> </ul>

Problem	Suggested Solutions
Repeated Tray 4 misfeeds.	<ul style="list-style-type: none"> <li>• Turn the paper stack around or over in the Elevator Tray.</li> <li>• Replace the paper in the tray with paper from a new package.</li> <li>• Keep paper in the original wrapper and store it flat in a dry environment when not in use.</li> <li>• Fan the paper at all four corners. Change it if it has uneven edges.</li> <li>• Lightweight or heavyweight paper may not feed with as much reliability as papers that are 64 to 220 g/m<sup>2</sup>.</li> <li>• Remove a few sheets from the top and the bottom of the ream in the Elevator Tray.</li> <li>• Ensure that the paper is loaded evenly to the edge of the tray and not overloaded.</li> <li>• Check to ensure that the side guides are lightly against the paper and not too tight.</li> <li>• If the environment is high humidity (50 to 85%) and coated paper is being used, the Tray 4 Heater Kit may have to be installed.</li> </ul>
Tray 4 does not feed.	<ul style="list-style-type: none"> <li>• The digital press should be set to feed from Tray 4.</li> </ul>
Misfeeds occur with lightweight paper.	Use a heavier weight paper.
Prints are skewed.	Ensure that the Rear and Side Guide Adjustment Levers are in the correct position.
Touch Screen displays "Add Paper" message and there is paper in the tray selected	If the Coated Paper button at the front of Tray 4 is selected and Uncoated Paper is not programmed on the Touch Screen or in the RIP print driver screen, an incorrect message, "Add Paper" is displayed. Change the settings so they are consistent.

For additional help, call your Xerox representative.

Follow the instructions below before calling for service.

123...

- 1 Be prepared to provide a complete description of the problem to the service operator. Defining the problem accurately may help you and the operator solve the problem over the phone and minimize downtime. If the problem cannot be solved by telephone, a service representative will be dispatched to your site promptly.
- 2 Record the displayed Fault Codes.



- 3 Record the Machine Serial Number. Press the **Machine Status** button on the Control Panel. Touch the **Machine Details** tab and the serial number is displayed.
- 4 If copy quality is a problem, take a copy sample to the telephone with you to help you describe the problem or to assist you when answering the questions from the service operator about the defects.
- 5 If possible, use a phone near the press when calling for assistance. Follow the instructions provided by the operator.
- 6 For system support, user help, and service support, call the appropriate number:  
US: **1-800-821-2797**  
Canada: **1-800-939-3769**  
Europe: \_\_\_\_\_  
Latin America: \_\_\_\_\_


## Loss of Power

Tray 4 is equipped with an additional safety feature, the ground fault indicator (GFI). The ground fault indicator is located at the bottom center of the back cover of Tray 4.

If power to Tray 4 is interrupted:

- Ensure the power cord is plugged in to the proper wall receptacle (the ground fault indicator must be plugged in to reset).
- Check to see if the GFI switch was tripped. Press and release the **RESET** button. Power should be restored to Tray 4.
- If the device interrupts power to Tray 4 immediately, or if the power has not been restored by the above procedure, call Xerox Customer Support.

Also call your Xerox service representative if the loss of power to Tray 4 seems to be frequent or excessive.

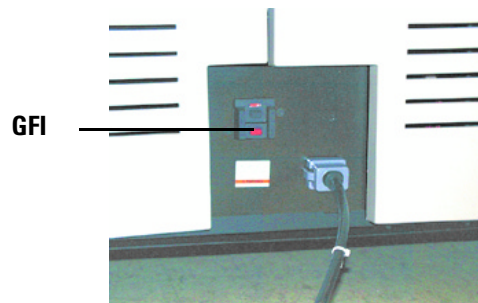

**Figure 10. Tray 4 GFI**

## Tray 4 Specifications

---

### Electrical Requirements

---

**Western Hemisphere:** 115 VAC, 15 amp for 60 Hz. and 220 VAC, 10 amp for 50 Hz installations.

**Europe:** 200/240 Volt, 10 amp 50 Hz service outlet.

Tray 4 requires a single power source separate from the digital press.

### Power Consumption

---

Standby - 1.5 KVA

Run - 1.5 KVA

### Heat Output

---

Standby - 5100 BTU

Run - 5100 BTU

## Environmental Requirements

### Atmosphere Requirements

Temperature:	10° C (50° F) Min.	32° C (90° F) Max.
Relative Humidity (% RH):	15% Min.	85%
Altitude:	N/A	Greater than 2000 meters (6560 ft.) above sea level may require field adjustments.

Better performance is achieved when conditions are maintained between 20-25° C (68-77° F).

### Noise Levels

	Continuous Noise	Impulse Noise
Standby	49.5 dBa	N/A
IOT Operation	64.0 dBa	72.0 dBa
Full System Operation	72.0 dBa	72.0 dBa

### Ozone Emissions

Not to exceed 0.02 PPM (maximum)

Imaging material: No unpleasant odor

### Dust

Dust concentration during continuous run should be 0.1mg/cubic meter.

## Capabilities

---

### Tray Capacity

---

Paper Tray 4 (optional) has a capacity of 2500 sheets.

### Throughput

---

Tray 4 (optional): Inches/JIS B5 (LEF/SEF) to 12.6 x 19.2 inch (320 x 487mm) SEF.

## Physical Characteristics

---

### Tray 4 Size

---

48.07 inches/1221 mm (W) x 29.53 inches/750 mm (D) x 55.6 inches / 1412 mm (H).

### Tray 4 Weight

---

425 pounds/192.95 Kg.

### Floor Space Requirements

---


Ask your Xerox representative to refer to the *DocuColor 2060/2045 Installation Planning Guide*.

## High Capacity Stacker (HCS)

The High Capacity Stacker (HCS) is an optional finishing device that provides stacking and offsetting capabilities for output into a stacker cart. The HCS connects to the right end of the digital press and replaces the Offset Catch Tray on the press.

The stacker cart has a capacity of 3500 sheets of 64 - 80 g/m<sup>2</sup> coated or uncoated paper. You can select the Offset mode on the digital press Touch Screen when sets are sent to the stacker cart. This provides offset separation between the stacked sets. The High Capacity Stacker can also send documents to the Top Tray. The Top Tray has a capacity of 250 sheets of 64 - 80 g/m<sup>2</sup> paper.

### Identifying High Capacity Stacker Parts

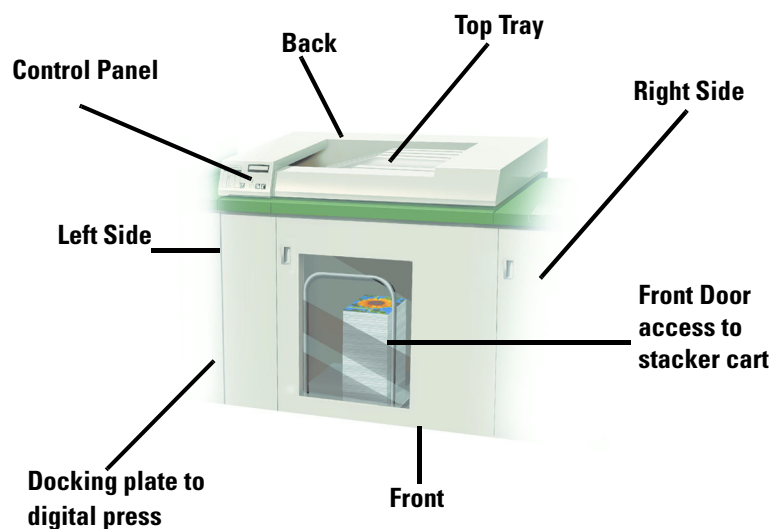

**Figure 11. High Capacity Stacker**

Control Panel

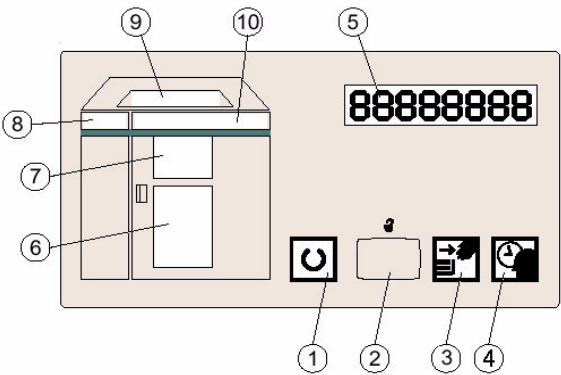


Figure 12. HCS Control Panel

	Name	Function
1	Ready Indicator	The Ready Indicator blinks when the digital press is being initialized. The Ready Indicator is constant when in use or in standby.
2	Table Down Switch	Press once to lower the elevator and unlock the front HCS door. Press again to stop the elevator from lowering. If pressed while running a job, all sheets in the paper path are delivered before the elevator will lower.
3	Ready To Open	Illuminates when the elevator has reached the down position and the Stacker Door can be opened.

ACCESSORIES

	Name	Function
4	Please Wait	Please Wait will illuminate while the elevator is in motion.
5	Fault Codes	When there is a fault in the HCS, the Fault Code appears here. Refer to the Touch Screen for further information.
6	Main Tray	Illuminates when paper is being delivered to the elevator tray. Blinks when the cart is full or not in place. The indicator is OFF when the Stacker is in standby mode.
7	Baffle Area	Illuminates when paper is being stacked. Blinks when there is a jam. The indicator is OFF when the Stacker is in standby mode.
8	Entry	Blinks when there is a jam in baffle area 1. The indicator is OFF when the Stacker is in standby mode. Refer to Jam Clearance in this section.
9	Top Tray	Illuminates when in Top Tray Mode. Blinks when the tray is full. The indicator is OFF when the Stacker is in standby mode.
10	Horizontal Transport	Blinks when there is a jam in the registration area or in the baffle areas. The indicator is OFF when the Stacker is in standby mode. Refer to Jam Clearance in this section



## Paper Stock Specifications

The following papers are considered to be baseline/centerline and are recommended to ensure you receive the best quality from your HCS:

Uncoated Xerox Digital Color Xpressions 94, 24 lbs. In Europe, Xerox Colotech+ 90 g/m<sup>2</sup>.

Coated Xerox Digital Color Xpressions GlossCoated Text (120 g/m<sup>2</sup> /80 lbs.) In Europe, Xerox ColoTech Gloss Coated 120 g/m<sup>2</sup>.



**NOTE:** *Manufacturers of coated stock do not recommend its use when the ambient relative humidity exceeds 60%.*

The **Stack Tray** accepts the following papers:

- Paper weights from a minimum of 64 g/m<sup>2</sup> up to 220 g/m<sup>2</sup> - either coated or uncoated stock. It also accepts paper from 221 g/m<sup>2</sup> up to 280 g/m<sup>2</sup> with the possibility of degraded stack quality and an increased jam rate.
- All standard media sizes supported by the digital press with the exception of JIS B5 LEF (Asian standard size) and 8.5 x 11"/A4 SEF
- Non-standard sizes from 182 to 320 mm (7.2 to 12.6") across the feed direction, and 203 to 488 mm (8.0 to 19.2") in the feed direction.
- 3 hole drilled 8.5 x 11" and A4 paper must be run LEF to the Stack Tray.

The **Top Tray** accepts the following papers:

- All media types, sizes, and weights that are supported by the digital press.
- Duplexed 3 hole drilled paper must be fed short edge first, therefore must be sent to the Top Tray.


**Media Types Accepted:** Coated or uncoated stocks, drilled stock, Transparencies and labels (labels can be sent only to the Top Tray).

**Paper Weight Range for Trays:** Stack Tray = 64 – 220 g/m<sup>2</sup>,  
Top Tray = 64 – 280 g/m<sup>2</sup>.

**Special Notes:**

- Special materials may not run as reliably as the baseline paper
- Transparencies may be run to either the Top Tray or the Stack Tray. Stack height should be limited to 100 transparencies.
- Coated paper lighter than 100 g/m<sup>2</sup> may not run as reliably as coated paper heavier than 100 g/m<sup>2</sup>.
- Papers that are 80 g/m<sup>2</sup> or lighter require 210 mm (8.3") minimum measurement in the feed direction.
- Non-standard papers longer than 305 mm (12") in the feed direction require 210 mm (8.3") minimum measurement across the feed direction.

**Top Tray Mode**

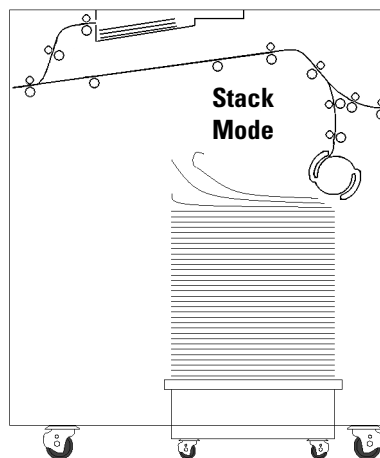

**Figure 13. HCS Paper Path**

## Selecting High Capacity Stacker Features

Use the following instructions to select the High Capacity Stacker when using the digital press scanner to make prints.

If sending a job through the network, refer to the *Printing Guide* that came with your Raster Image Processor for information on how to set the job Properties/Parameters when using the HCS.

123...

- 1 Touch **More...** on the *Basic Features* screen in the Copy Output column on the digital press Touch Screen.

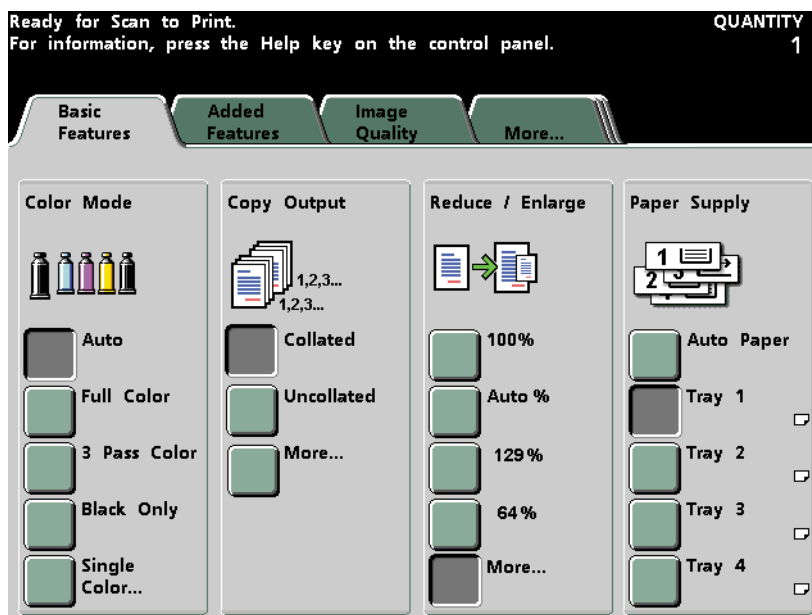


Figure 14. Basic Features Screen

- 2 On the next screen, make the desired selections under *Output Delivery* and *Output Assembly*, then touch the **Stacker** button.

Ready for Scan to Print. QUANTITY 1

Basic Features Output

Cancel Save

Output Delivery

☐ Auto

☐ Face Up

☐ Face Down

Output Assembly

☐ Collated

☐ Uncollated

Output Device

☒ Stacker

**Figure 15. Output, More... Screen**

- 3** Select the desired *Output Catch Tray* and your choice under *Offset* (refer to the descriptions on the following pages).

Ready for Scan to Print. QUANTITY 1

Output Stacker

Cancel Save

Output Catch Tray

☐ Stacker

☐ Top Tray

Offset

☐ Offset

☐ No Offset


**Figure 16. Output Device, Stacker Screen**

- 4 Touch **Save**.
- 5 Select any other options for your job.
- 6 Press the **Start** button on the digital press Control Panel.

### Stacker Mode

The Stacker Mode stacks collated sets sent from the digital press. The stacker tray has a capacity of 3500 sheets of 64 - 80 g/m<sup>2</sup> paper.

**NOTE:** *Labels should not be sent to the Stack Tray.*

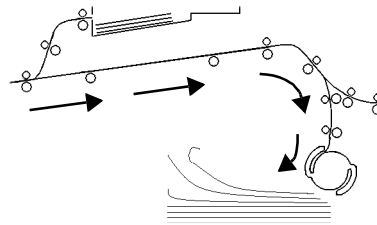


**Figure 17. Stacker Paper Path**

### Offset Mode

The Offset Mode offsets each set of sheets by 15 mm (0.6 inches) for easy separation.

### Top Tray Mode

The High Capacity Stacker diverts sheets that are too small or too large to be stacked to the Top Tray. Any sheets that need to be purged after a paper jam are also sent to the Top Tray.

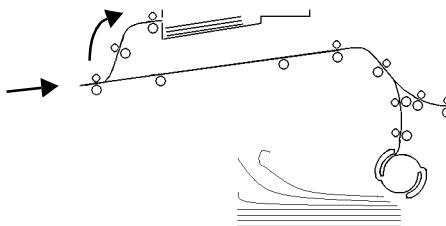


**Figure 18. Top Tray Paper Path**

## Unloading the High Capacity Stacker

When the High Capacity Stacker is full, or you want to retrieve a job that has been completed, the operator may unload the stacker by performing the following steps.


123...

- 1** Press the **Table Down Switch**.
- 2** Wait until the elevator stops and the *Please Wait* indicator is OFF. The *Ready To Open* indicator illuminates.
- 3** Open the High Capacity Stacker front door.
- 4** Position the securing bar onto the stacker cart handle as shown below.

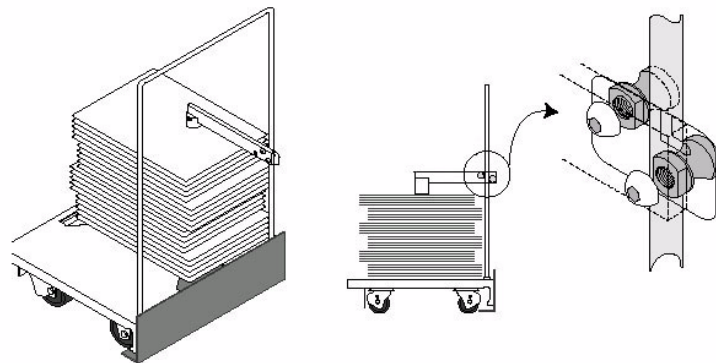

**Figure 19. Positioning the Stacker Cart Handle**

- 5** Ensure that the handle is in the proper position on the top of the paper stack so that the stack will not move when the stacker cart is pulled out.
- 6** Pull the stacker cart straight out and remove the paper.
- 7** Push the empty stacker cart straight into the High Capacity Stacker.
- 8** Return the securing bar back into position as shown below.

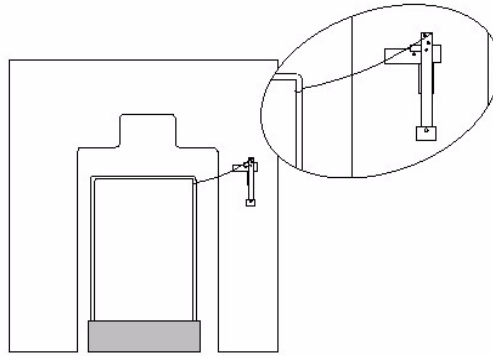


**Figure 20. Securing Bar Storage Position**

- 9** Close the High Capacity Stacker front door.
- 10** Follow the instructions displayed on the digital press Touch Screen to resume printing.

## Jam Clearance

A paper jam in the High Capacity Stacker will be indicated by a message on the digital press Touch Screen. Follow the instructions displayed. The image on the HCSS Control Panel will flash showing the area where the jam is located.

Perform the following steps to clear the High Capacity Stacker jam and resume printing.

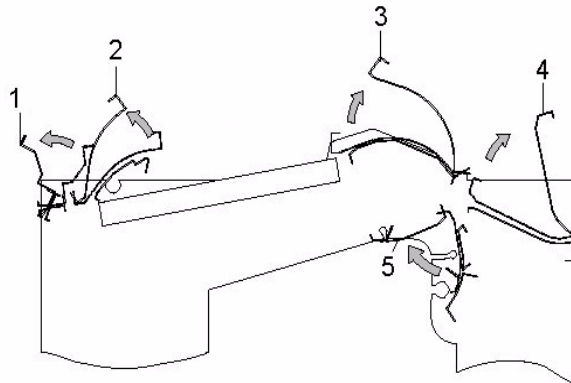

**Figure 21. HCS Jam Clearance Areas**

123...

- 1** Lift the High Capacity Stacker **Top Cover**.
- 2** Lift the green handle, or handles, indicated on the Touch Screen and remove all paper in this area. Remove paper only from the areas indicated.
- 3** Close each green handle.
- 4** Close the High Capacity Stacker **Top Cover**.
- 5** If the Touch Screen indicates there is a jam in the digital press, follow the instructions on the screen to remove any paper in the area indicates. Refer to the *Jam Clearance* section in the *Problem Solving* chapter in this manual.
- 6** Follow the instructions displayed on the digital press Touch Screen to resume printing.



## High Capacity Stacker Maintenance

---

### Cleaning the High Capacity Stacker

---

Do not clean any area inside the High Capacity Stacker. If the covers or Front Door require cleaning, dampen a paper towel or soft, clean cloth with a liquid, nonabrasive glass cleaner or water.

To avoid damage to the High Capacity Stacker, do not pour or spray the cleaner or water directly onto the High Capacity Stacker. Always apply the liquid to the cloth first.

Do not use any other cleaners or solvents on the High Capacity Stacker or they may interact with the paint on the covers, eventually causing the paint to peel.

## Problem Solving

If, after following the recommended solutions, the problem persists, call for assistance.

The Fault Codes described below appear on the HCS display panel.

Problem	Cause	Solution
Fault 052-311	Communication problem	<ul style="list-style-type: none"> <li>Cancel or save the job.</li> <li>Power off the digital press. Wait 15 seconds and power on.</li> </ul>
Fault 212-252	HCS Flipper wheel problem.	<ul style="list-style-type: none"> <li>Open Top Cover.</li> <li>Clear the paper path.</li> <li>If the fault code is still displayed, save or cancel the job, then power off the digital press. Wait 15 seconds and power on.</li> </ul>
Fault 212-253	HCS Flipper wheel problem.	<ul style="list-style-type: none"> <li>Open Top Cover.</li> <li>Clear the paper path.</li> <li>If the fault code is still displayed, save or cancel the job, then power off the digital press. Wait 15 seconds and power on.</li> </ul>
Fault 212-251	HCS Stacking Height problem	<ul style="list-style-type: none"> <li>Open Top Cover.</li> <li>Clear the paper path.</li> <li>If the fault code is still displayed, save or cancel the job, then power off the digital press. Wait 15 seconds and power on.</li> </ul>
Fault 212-254	HCS Registration problem	<ul style="list-style-type: none"> <li>Open Top Cover.</li> <li>Clear the paper path.</li> <li>If the fault code is still displayed, save or cancel the job, then power off the digital press. Wait 15 seconds and power on.</li> </ul>
Ready Indicator does not illuminate	No power	<ul style="list-style-type: none"> <li>Check the power cord connected to the power source.</li> <li>Check that the GFI circuit breaker is not tripped (rear cover).</li> <li>Check that the main switch is on.</li> </ul>
Poor Stacking	Mixed sizes of paper	Run separate jobs and empty stacker.
	High paper curl	<ul style="list-style-type: none"> <li>Adjust digital press decurler.</li> <li>Flip paper in digital press paper tray(s).</li> <li>Rotate paper in the digital press paper tray(s).</li> <li>Switch to heavier paper.</li> </ul>

Poor Stacking continued:	Mixed sizes of paper	Run separate jobs and empty stacker.
	High paper curl	<ul style="list-style-type: none"> <li>Adjust digital press decurler.</li> <li>Flip paper in digital press paper tray(s).</li> <li>Rotate paper in the digital press paper tray(s).</li> <li>Switch to heavier paper.</li> </ul>
	High paper curl	<ul style="list-style-type: none"> <li>Adjust digital press decurler.</li> <li>Flip paper in digital press paper tray(s).</li> <li>Rotate paper in the digital press paper tray(s).</li> </ul>
	8 1/2 x 11 inch, 8 1/2 x 14 inch, A4 paper sizes	<ul style="list-style-type: none"> <li>Check that paper in the digital press is loaded short edge feed (SEF).</li> </ul>
	Mechanical obstruction	<ul style="list-style-type: none"> <li>Check for obstruction in the stacker paper path.</li> <li>Ensure that all transports and baffles are properly seated.</li> <li>Ensure that the cart is properly seated.</li> </ul>
Paper Jams:	Lower paper path	Deselect offset or restart job.
	High paper curl	<ul style="list-style-type: none"> <li>Adjust digital press decurler.</li> <li>Flip paper over in the paper tray being used.</li> <li>Rotate the paper in the paper tray being used.</li> <li>Switch to heavier paper.</li> </ul>
Elevator does not go up.	Handle not in correct position.	<ul style="list-style-type: none"> <li>Open the front door and position the handle correctly.</li> </ul>

## Loss of Power

If power is interrupted to the High Capacity Stacker:

- Ensure the power cord is plugged in to the proper wall receptacle.
- Ensure that the digital press power is on.
- If the power has not been restored by the above procedure, call Xerox Customer Support.

Also call your Xerox service representative if the loss of power to the High Capacity Stacker seems to be frequent or excessive.


## High Capacity Stacker Stapler (HCSS)

The High Capacity Stacker Stapler is an optional finishing device which provides stacking with offset and single or dual stapling output capabilities. Sets of up to 50 sheets of 64 - 80 g/m<sup>2</sup> may be stapled.

The High Capacity Stacker Stapler must be connected to the right end of the digital press, replacing the Offset Catch Tray. The Stack Tray has a capacity of 2000 sheets of 64 - 80 g/m<sup>2</sup> paper. The HCSS also has an Offset mode which provides separation between the stacked sets sent to the Stack Tray. The High Capacity Stacker can also send output (not stapled) of 250 sheets of 64 - 80 g/m<sup>2</sup> paper to the Top Tray.

Banner sheets can be used with your Fiery RIP. The banner sheets must be printed on LEF 8.5" x 11" paper. Refer to the *EX2000 Printing Guide* for more information on how to turn this feature on.

### Identifying High Capacity Stacker Stapler Parts

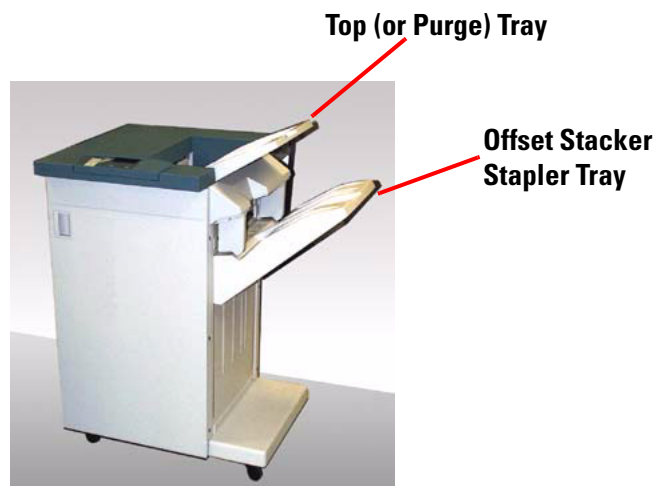

**Figure 22. High Capacity Stacker Stapler**

Control Panel

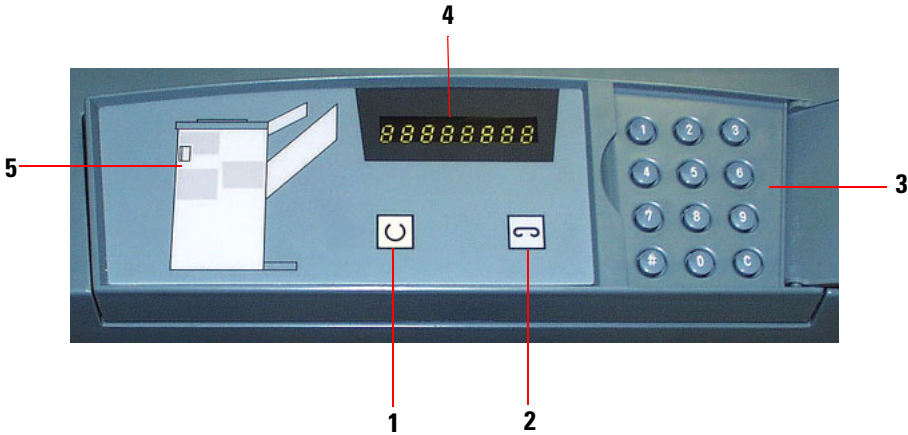


Figure 23. HCSS Control Panel

	Name	Function
1	Ready Indicator	The Ready Indicator blinks when the digital press is being initialized. The Ready Indicator is constant when in use or in standby.
2	Staple Indicator	The Staple Indicator blinks when the staple level in the stapler is low. The Staple Indicator is constant when the stapler is empty.
3	Keypad	The keypad, including the C button, is used only by the Xerox service representative.
4	Message Display	Shows the fault codes.
5	Jam Indicator	Area illuminates to indicate the location of a jam in the HCSS.

ACCESSORIES

Electrical/Environmental Requirements

**Western Hemisphere:** 115 VAC, 15 amp, for 60 Hz. and 220 VAC, 10 amp for 50 Hz installations.

**Europe:** 200-240 Volt 10 amp 50 Hz service outlet.

The HCSS requires a separate power source from the digital press.

Temperature:	10° C (50° F) Min.	32° C (90° F) Max.
Relative Humidity (% RH):	15% Min.	85%
Altitude:	N/A	Greater than 2000 meters (6560 ft.) above sea level may require field adjustments.

Better performance is achieved when conditions are maintained between 20-25° C (68-77° F).

Paper Stock Specifications

The High Capacity Stacker Stapler Top Tray accepts all media types, sizes, and weights supported by the DocuColor 2060/2045. The Stack Tray accepts all standard media sizes supported by the DocuColor 2060/2045 with the exception of sizes greater than A3/11 x 17".


Refer to the chart on the following page for information on accepted media types.

Paper Size				Output		
				Stack Tray 50 sheet maximum for Stapling*		Top Tray
Name	Inches	MM	Orientation	64 - 220 g/m <sup>2</sup>	Staple Position	64 - 280 g/m <sup>2</sup>
JIS B5	7.2x10.1	182 x 257	SEF	Yes	Portrait	Yes
A4	8.3x11.7	210 x 297	SEF/LEF	Yes	Portrait/ Landscape	Yes
Letter	8.5x11	216 x 279	SEF/LEF	Yes	Portrait/ Landscape	Yes
	8.5x13	216 x 330	SEF	Yes	Portrait/ Landscape	Yes
	8.5x14	216 x 256	SEF	Yes	Portrait/ Landscape	Yes
JIS B4	10.1x14.33	257 x 364	SEF	Yes	Portrait	Yes
	11x17	279 x 432	SEF	Yes	Portrait/Dual	Yes
A3	11.7x16.5	297 x 420	SEF	Yes	Portrait/ Dual	Yes
	12x18	305 x 457	SEF	No	—	Yes
SRA3	12.6x17.7	320 x 450	SEF	No	—	Yes
	12.6x19.2	320 x 488	SEF	No	—	
B5	7.2x10.1	182 x 257	LEF	Yes <sup>1</sup>	Portrait	Yes
	8x10	203 x 254	LEF	Yes <sup>1</sup>	Portrait	Yes

<sup>1</sup> The digital press cannot feed paper less than 8.3" (203 mm) in the feed direction below 80 g/m<sup>2</sup>.

\* Refer to the table on page 5-48 for information on the stapling capacity for various paper types and weights.

## Paper Path

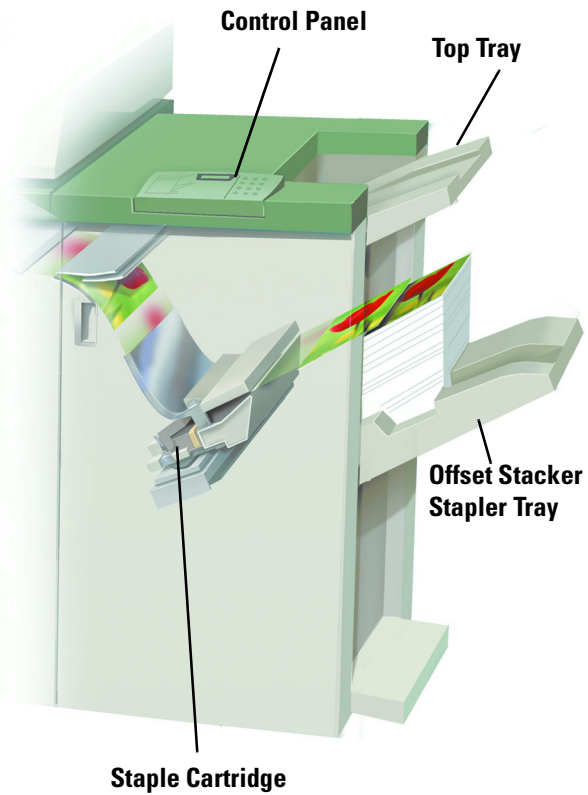

**Figure 24. HCSS Paper Path**

As media enters the HCSS, it is fed to the Top Tray or to the Offset Stacker Stapler Tray, depending on your selections.



## Using the High Capacity Stacker Stapler

Use the HCSS either by scanning documents and making your selections on the Touch Screen, or by sending a document through the network and making your selections under Job Properties/Parameters.

- Use the following instructions to select the High Capacity Stacker Stapler when scanning prints on the digital press.
- If sending a job through the network, refer to the *Printing Guide* that came with your Raster Image Processor for information on how to set the job Properties/Parameters when using the HCSS.

### Hints and Tips

The HCSS cannot staple jobs with mixed sizes of paper.

The stacking may be skewed on the output from mixed size paper jobs.

You can mix coated and uncoated stock.

The HCSS accepts jobs of mixed weight papers below 220 g/m<sup>2</sup>.

Only clear paper jams at the area indicated on the HCSS Control Panel. Do not remove paper from any other areas of the paper path.


### Stapling Hints

There are three stapling options:

- Single Staple Position 1
- Single Staple Position 2
- Dual Staple

If you select Single Staple, the screen in Figure 25 displays. Selecting Position 1 places a staple in the upper left corner of SEF or LEF sets. Position 2 places a staple in the bottom left corner of SEF sets only.

Selecting Dual Staple places two staples closer to the top/bottom center of the sheets than a single staple.

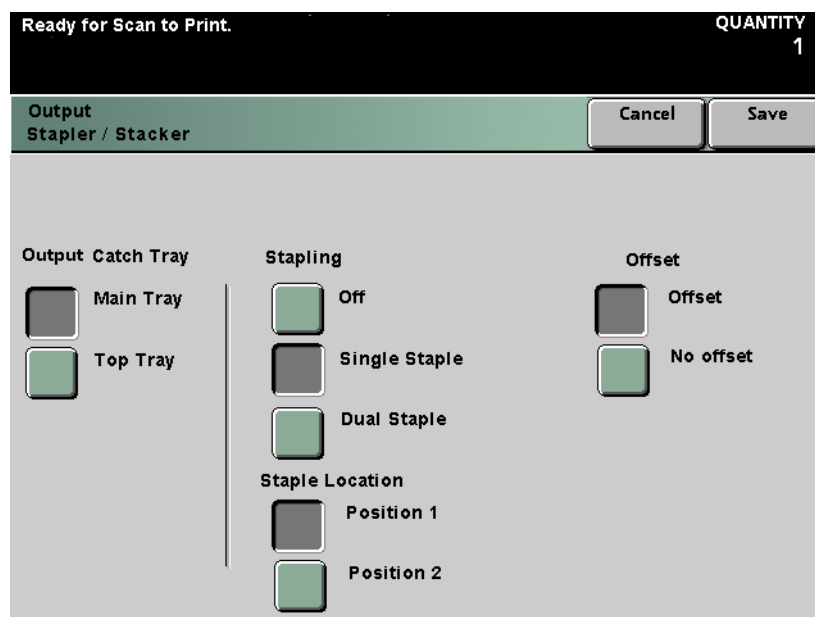


**Figure 25. Output Device, Single Staple Screen**

Read the following procedure for more information on how to use the HCSS.

123...

- 1 Touch **More...** in the *Copy Output* column on the *Basic Features* screen.

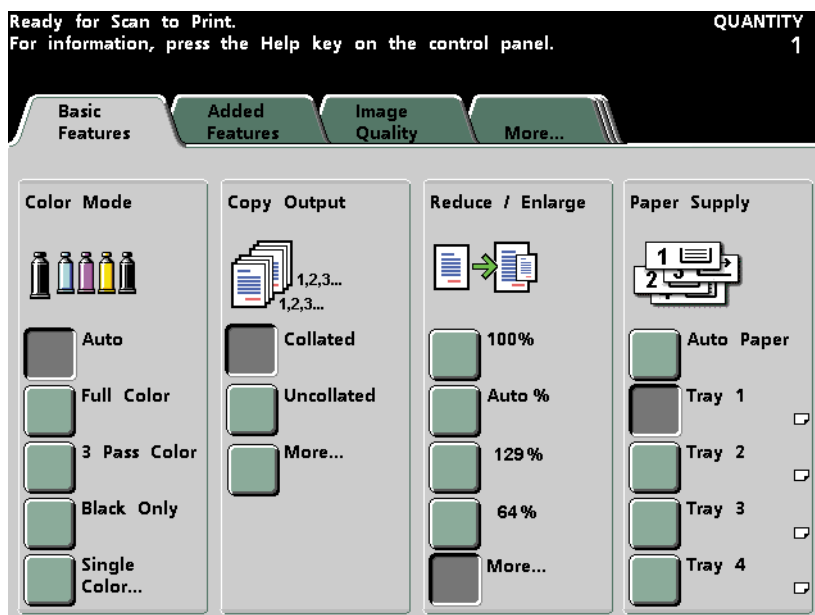

**Figure 26. Basic Features Screen**

- 2** On the next screen, make the desired selections under *Output Delivery* and *Output Assembly*, then touch the **Stapler/Stacker** button.

The screenshot shows a screen titled "Ready for Scan to Print." with a "QUANTITY 1" indicator in the top right. Below the title bar is a green header labeled "Basic Features Output" with "Cancel" and "Save" buttons. The main area is divided into three sections: "Output Delivery" with options "Auto", "Face Up", and "Face Down"; "Output Assembly" with options "Collated" and "Uncollated"; and "Output Device" with a large circular button labeled "Stapler / Stacker".

**Figure 27. Output, More... Screen**

- 3** Select the desired *Output Catch Tray* and *Stapling* option. Then select *Offset* or *No Offset*.

The screenshot shows a screen titled "Ready for Scan to Print." with a "QUANTITY 1" indicator in the top right. Below the title bar is a green header labeled "Output Stapler / Stacker" with "Cancel" and "Save" buttons. The main area is divided into three sections: "Output Catch Tray" with options "Main Tray" and "Top Tray"; "Stapling" with options "Off", "Single Staple", and "Dual Staple"; and "Offset" with options "Offset" and "No offset".

**Figure 28. Output Device, Stapler/Stacker Screen**

- 4 Touch **Save**.
- 5 Select any other options for your job.
- 6 Press the **Start** button on the digital press Control Panel.

---

### ***Feeding 3 Hole Drilled Paper***

---

If you are stacking unstapled 3 hole drilled paper, the following is recommended:

- Send LEF Simplex (one sided) jobs to the Stack Tray.
- Send SEF Duplex (two sided) jobs to the Top Tray.

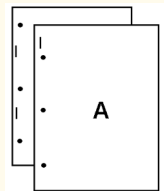
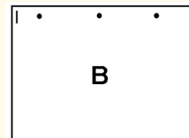
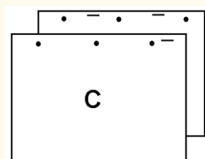
Using the Stack Tray for SEF Duplex jobs leads to an increase in uneven stacking caused by an interference between the holes and corners of subsequent sheets.

You can minimize uneven stacking by loading 3 hole drilled paper SEF in the paper tray with the holes toward the back of the digital press, and selecting Collated sets.

Refer to the following chart only when sending stapled jobs through the **Fiery EX2000**. Selections are made in the Print Driver window, or in Job Properties at the Command Workstation.

When sending jobs scanned on the digital press to the HCSS for stapling, follow the feeding instructions for both plain and 3 hole drilled paper in the *Paper and Paper Trays* chapter.

### Stapling from the Fiery EX2000

Plain Paper	3 Hole Drilled Paper	Sample Output
<p><b>Simplex LEF @ 60 ppm</b></p> <ol style="list-style-type: none"> <li>1. Load any Tray with LEF plain paper.</li> <li>2. Select <b>Front/Dual</b> staple position.</li> <li>3. Select <b>HCSS Stack Tray</b> as the output destination.</li> </ol> <p><b>Duplex LEF @ 30 ppm</b></p> <ol style="list-style-type: none"> <li>1. Load any Tray with LEF plain paper.</li> <li>2. Select <b>Head to Head</b> orientation.</li> <li>3. Select <b>Front/Dual</b> staple position.</li> <li>4. Select <b>HCSS Stack Tray</b> as the output destination.</li> </ol>	<p><b>Simplex LEF @ 60 ppm</b></p> <ol style="list-style-type: none"> <li>1. Load Trays 1, 2, or 3 LEF with 3 hole drilled paper (<b>holes to the left in Trays 1 and 2, holes to the right in Tray 3.</b>)</li> <li>2. Select <b>Front/Dual</b> staple position.</li> <li>3. Select <b>HCSS Stack Tray</b> as the output destination.</li> </ol> <p><b>Duplex SEF @ 22.5 ppm</b></p> <ol style="list-style-type: none"> <li>1. Load Trays 1, 2, or 3 SEF with holes toward the back of the digital press.</li> <li>2. Select <b>Head to Head Duplex</b> orientation.</li> <li>3. Select <b>Rear</b> staple position.</li> <li>4. Select <b>HCSS Stack Tray</b> as the output destination.</li> </ol> <p>Note: Dual staple not available.</p>	
<p><b>Simplex SEF @ 45 ppm</b></p> <ol style="list-style-type: none"> <li>1. Load any Tray with SEF plain paper.</li> <li>2. Select <b>Front</b> staple position.</li> <li>3. Select <b>HCSS Stack Tray</b> as the output destination.</li> </ol> <p><b>Duplex SEF @ 22.5 ppm</b></p> <ol style="list-style-type: none"> <li>1. Load any Tray with SEF plain paper.</li> <li>2. Select <b>Head to Head</b> orientation.</li> <li>3. Select <b>Front</b> staple position.</li> <li>4. Select <b>HCSS Stack Tray</b> as the output destination.</li> </ol>	<p><b>Simplex SEF @ 45 ppm</b></p> <ol style="list-style-type: none"> <li>1. Load Trays 1, 2, or 3 SEF with 3 hole paper (<b>holes toward the front of the press.</b>)</li> <li>2. Select <b>Front</b> staple position.</li> <li>3. Select <b>HCSS Stack Tray</b> as the output destination.</li> </ol> <p><b>Duplex SEF @ 22.5 ppm</b></p> <ol style="list-style-type: none"> <li>1. Load Trays 1, 2, or 3 SEF with holes toward the front of the digital press.</li> <li>2. Select <b>Head to Head Duplex</b> orientation.</li> <li>3. Select <b>Front</b> staple position.</li> <li>4. Select <b>HCSS Stack Tray</b> as the output destination.</li> </ol>	
<p><b>Simplex SEF @ 45 ppm</b></p> <ol style="list-style-type: none"> <li>1. Load any Tray with SEF plain paper.</li> <li>2. Select <b>Front</b> staple position.</li> <li>3. Select <b>HCSS Stack Tray</b> as the output destination.</li> </ol> <p><b>Duplex SEF @ 22.5 ppm</b></p> <ol style="list-style-type: none"> <li>1. Load any Tray with SEF plain paper.</li> <li>2. Select <b>Front</b> staple position.</li> <li>3. Select <b>Head to Head</b> orientation.</li> <li>4. Select <b>HCSS Stack Tray</b> as the output destination.</li> </ol>	<p><b>Simplex LEF @ 60 ppm</b></p> <ol style="list-style-type: none"> <li>1. Load Trays 1, 2, or 3 LEF with 3 hole drilled paper (<b>holes to the left in Trays 1 and 2, holes to the right in Tray 3.</b>)</li> <li>2. Select <b>Front/Dual</b> staple position.</li> <li>3. Select <b>HCSS Stack Tray</b> as the output destination.</li> </ol> <p><b>Duplex SEF @ 22.5 ppm</b></p> <ol style="list-style-type: none"> <li>1. Load Trays 1, 2, or 3 SEF with holes toward the back of the digital press.</li> <li>2. Select <b>Head to Head Duplex</b> orientation.</li> <li>3. Select <b>Rear</b> staple position.</li> </ol> <p>Note: Dual staple not available.</p>	

**Note:** ppm = pages per minute.

### ***Paper Specifications for Stapling***

The following chart shows the stapling details for paper size, orientation, destination, and staple position. Numbers have been rounded up or down.

Staple Positions marked with an "O" may be selected in the position indicated. Positions marked with an "x" are not available for stapling.

Items followed by an asterisk (\*) have the following limitation. Papers that are 210 mm (8.3") in the feed direction must be greater than 80 g/m<sup>2</sup> in weight.

			Output Destination	Staple Position			Output Destination
Inches	MM	Sheet Orientation	HCSS Stack Tray 64-220 g/m <sup>2</sup> (stapling)	Front corner	Rear corner	Dual	HCSS Top Tray 64-280 g/m <sup>2</sup> (no stapling)
7.2 x 10.1	JIS B5 (182 x 257)	SEF	Yes	O	x	x	Yes
8.3 x 11.7	A4 (210 x 297)	SEF	Yes	O	O	x	Yes
8.5 x 11	216 x 279	SEF	Yes	O	O	x	Yes
8.5 x 13	216 x 330	SEF	Yes	O	O	x	Yes
8.5 x 14	216 x 356	SEF	Yes	O	O	x	Yes
10.1 x 14.3	JIS B4 (257 x 364)	SEF	Yes	O	x	x	Yes
11 x 17	279 x 432	SEF	Yes	O	x	O	Yes
11.7 x 16.5	A3 (297 x 420)	SEF	Yes	O	x	O	Yes
12 x 18	305 x 457	SEF	No	--	--	--	Yes
12.6 x 17.7	320 x 450	SEF	No	--	--	--	Yes
7.2 x 10.1	B5 (182 x 257)	LEF	Yes *	O	x	x	Yes *
8 x 10	203 x 254	LEF	Yes *	O	x	x	Yes *
8.3 x 11.7	A4 (210 x 297)	LEF	Yes	O	x	O	Yes
8.5 x 11	216 x 279	LEF	Yes	O	x	O	Yes
10.5 x 15.3	Kai 8 (267 x 388) Asian market size	SEF	Yes	O	x	x	Yes
10.5 x 7.6	Kai 16 (267 x 194) Asian market size	LEF	Yes *	O	x	x	Yes *



**NOTE:** *Stapled sets of large paper (A3, 11 x 17" and greater) may stack slightly skewed. The stapled sets will be of high quality.*

## Stapling Capacity for Different Paper Types and Weights

Following is the staple capacity for various types and weights of paper.

Paper Weight	Coated	Uncoated	Mix Sizes
64–80 g/m <sup>2</sup>	50	50	No
81–105g/m <sup>2</sup>	42	42	No
106–135 g/m <sup>2</sup>	31	31	No
136–150 g/m <sup>2</sup>	26	26	No
151–220 g/m <sup>2</sup>	18	18	No
221–280 g/m <sup>2</sup>	No *	No *	No
Transparencies	No	No	No

\* 221 to 280 g/m<sup>2</sup> paper, either coated or uncoated, cannot be stapled. These weights will be stacked in the Top Tray.

ACCESSORIES

## Unloading the High Capacity Stacker Stapler


To ensure consistent quality, unload sets of less than four sheets and lighter weight paper after 50 sets are made, or when the curl of the sets inhibits the ability of the sets to exit the HCSS.

When the Stack Tray is full, Fault Code 112-550 appears in the message display on the HCSS. The digital press Touch Screen displays a message, "Unload the Main Tray of the Finisher".

The HCSS continues to stack sheets into the Stack Tray after the message appears, but excess sheets may have a degraded stacking quality. For best performance, unload the tray when 2,000 sheets have been stacked.

## Jam Clearance

A paper jam in the High Capacity Stacker Stapler is indicated by a message on the digital press Touch Screen. The HCSS Control Panel display illuminates the area where the jam has occurred.

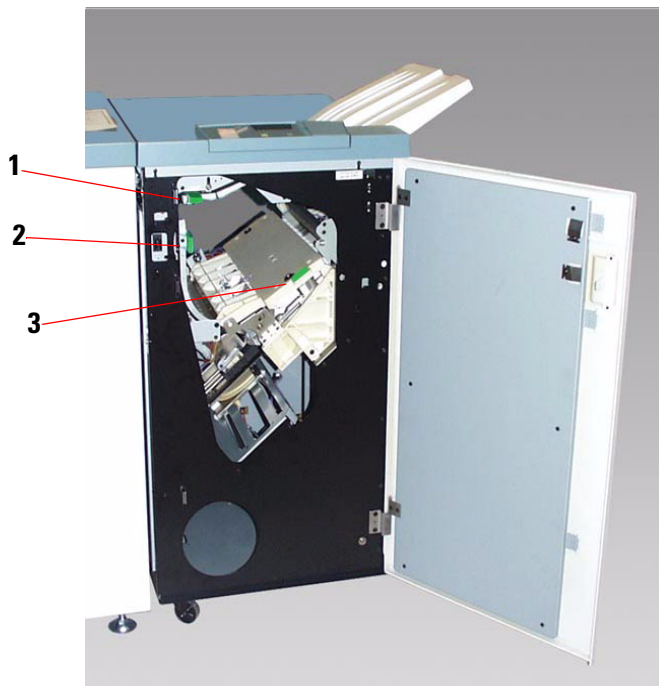

**Figure 29. HCSS Jam Clearance Areas**

Read the following steps for more information on how to clear a jam.


123...

- 1** Open the HCSS Front Door. There are three possible jam areas as indicated in the photo above. Handle one moves down, handle two moves to the right, and handle three moves up.
- 2** Remove all jammed paper only from the area indicated on the Touch Screen and the HCSS Control Panel Display. Do not remove paper from any other areas.
- 3** Reposition the handle.
- 4** Close the HCSS Front Door.
- 5** Follow any instructions on the Touch Screen to restart your print job.



## Ordering and Loading Staples

You can order new staple cartridges through the system you normally use for ordering Xerox supplies. The cartridge number to order is 8R12799. You should keep a supply on hand so production is not interrupted while you are waiting for staples to be shipped.

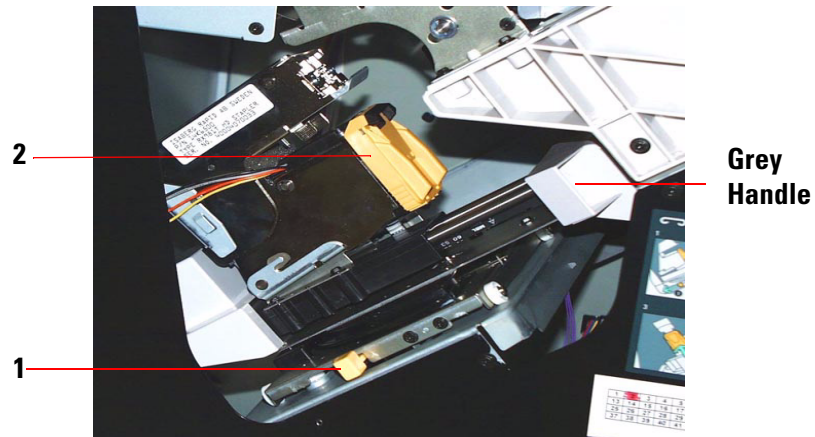

**Figure 30. Staple Cartridge**

123...

- 1** Open the front door of the High Capacity Stacker Stapler.
- 2** Push the yellow (1) lever down with your left hand. Grasp the grey handle on the cartridge unit and pull it towards you until it stops. Release the yellow lever and the unit will lock into place.
- 3** Grasp the yellow staple cartridge and pull it towards you. The entire unit will move forward, then the staple cartridge only will pull free of the unit.
- 4** Insert a new cartridge into the unit, and push it until you hear it click into place.
- 5** Push the yellow lever down and the cartridge unit automatically swings back into place.

## **High Capacity Stacker Stapler Maintenance**

---

### **Cleaning the High Capacity Stacker Stapler**

---

Do not clean any area inside of the High Capacity Stacker Stapler. If the High Capacity Stacker Stapler covers require cleaning, dampen a paper towel or soft, clean cloth with a liquid, nonabrasive glass cleaner or water.

To avoid damage to the High Capacity Stacker Stapler, do not pour or spray the cleaner or water directly onto the High Capacity Stacker Stapler. Always apply the liquid to the cloth first.

Do not use any other cleaners or solvents on the High Capacity Stacker Stapler or they may interact with the paint on the covers, eventually causing the paint to peel.

## Problem Solving

If after reviewing the Problems and following the recommended solutions the problem persists, call for assistance.


Problem	Cause	Solution
Fault Code 112-100 Jam indicated in HCSS, but actually is in the Exit Module.	Jammed Paper not visible in HCSS, and fault code does not clear after opening and closing HCSS door.	<ul style="list-style-type: none"> <li>• Open the HCSS door.</li> <li>• Jammed paper is not visible in the area indicated. Close the HCSS door.</li> <li>• The Touch Screen indicates a jam in the Exit Module. Open the Exit Module and clear any visible sheets.</li> <li>• Open and close the HCSS door.</li> <li>• Clear any other areas indicated on the Touch Screen.</li> </ul>
Fault Code 112-100 Jam indicated in HCSS. No visible jams in HCSS because sheet is located over the Exit Module sensor.	Paper jammed between Exit Module and HCSS sensors	<ul style="list-style-type: none"> <li>• Open the HCSS door.</li> <li>• Jammed paper is not visible in the area indicated. Close the HCSS door.</li> <li>• If the fault code remains, open the Exit Module. No jammed sheets are visible.</li> <li>• Undock the HCSS. Find the jammed sheet between the Exit Module and the HCSS. Refer to the Note below this table for information on how to undock the HCSS.</li> <li>• Clear any other areas indicated on the Touch Screen.</li> </ul>
Fault Code 112-130 Jam indicated in HCSS, but is also in Exit Module.	Paper is jammed over both the Exit Module and HCSS sensors.	<ul style="list-style-type: none"> <li>• Open the HCSS door.</li> <li>• Clear any visible jams.</li> <li>• If no jammed paper is visible in the HCSS area indicated, open the Exit Module door and clear any jammed paper. Close the Exit Module door.</li> <li>• Open and close the HCSS door.</li> </ul>
Fault Code 112-130 Jam indicated in HCSS.	Paper is jammed between the Exit Module and the HCSS sensors.	<ul style="list-style-type: none"> <li>• Open the HCSS door.</li> <li>• If no jammed paper is visible in the area indicated, open the Exit Module door and clear any jammed paper. Close the Exit Module door.</li> <li>• Open and close the HCSS door.</li> <li>• If the fault persists, undock the HCSS and clear the jammed paper between the Exit Module and the HCSS. Refer to the Note below this table for information on how to undock the HCSS.</li> </ul>
Fault Code 112-110	Paper jammed in the HCSS and the Exit Module during a purge of sheets to the Top Tray.	<ul style="list-style-type: none"> <li>• Clear the jammed paper from the HCSS.</li> <li>• Clear the jammed paper from the Exit Module.</li> <li>• Open and close the HCSS door.</li> <li>• Resume job.</li> </ul>
Fault Code 052-310	Communication problem	<ul style="list-style-type: none"> <li>• Cancel or save the job.</li> <li>• Power off the digital press. Wait 15 seconds and power on.</li> </ul>

Problem	Cause	Solution
Fault Code 052-321	Connection problem	<ul style="list-style-type: none"> <li>Cancel or save the job.</li> <li>Power off the digital press. Wait 15 seconds and power on.</li> </ul>
Fault Code 052-320	Unexpected connection	<ul style="list-style-type: none"> <li>Cancel or save the job.</li> <li>Power off the digital press. Wait 15 seconds and power on.</li> </ul>
Fault Code 052-312	Communication problem	<ul style="list-style-type: none"> <li>Cancel or save the job.</li> <li>Power off the digital press. Wait 15 seconds and power on.</li> </ul>
Ready Indicator does not illuminate	No power	<ul style="list-style-type: none"> <li>Check the power cord connected to the power source.</li> <li>Check that the main switch is on.</li> </ul>
Poor Stacking:	Mixed sizes of paper	Run separate jobs and empty stacker.
	High paper curl	<ul style="list-style-type: none"> <li>Adjust digital press decurler.</li> <li>Flip paper in digital press paper tray(s).</li> <li>Rotate paper in the digital press paper tray(s).</li> </ul>
	Mechanical obstruction	<ul style="list-style-type: none"> <li>Check for obstruction in the stacker stapler paper path.</li> <li>Ensure that all transports and baffles are properly seated.</li> </ul>
Paper Jams:	Use Top Tray	Deselect offset or restart job to the Top Tray.
	High paper curl	<ul style="list-style-type: none"> <li>Adjust digital press decurler.</li> <li>Flip paper in digital press paper tray(s).</li> <li>Rotate paper in the digital press paper tray(s).</li> <li>Switch to heavier paper.</li> </ul>



**NOTE:** To undock the HCSS from the digital press, reach into the circular area near the bottom of the HCSS for the Undocking Lever. Refer to the picture below.

**Undocking Lever  
inside here**

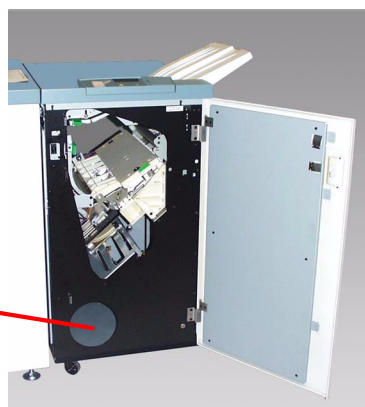

**Figure 31. HCSS Undocking Lever**

Pull the lever toward you and hold it in position while moving the HCSS a small distance (25.4mm, 1") away from the press. Release the lever and continue to move the HCSS as far as required.

## Loss of Power

---

If power is interrupted to the High Capacity Stacker Stapler:

- Ensure the power cord is plugged in to the proper wall receptacle.
- Ensure that the digital press power is on.
- If the power has not been restored by the above procedure, call Xerox Customer Support.

Also call your Xerox service representative if the loss of power to the High Capacity Stacker seems to be frequent or excessive.

This page is intentionally left blank.

## 6. Problem Solving

When a problem occurs with your DocuColor 2060/2045, instructions appear on the Touch Screen. Refer to the information in this chapter to help resolve the problem.

### General Problems

If the DocuColor 2060/2045 has a loss of power and you cannot access the Machine Details tab to get the serial number, open the two main front doors. The serial number label is in the center of the bottom frame of the digital press.

This chart lists problems and suggested solutions that apply to your DocuColor 2060/2045. If the problem persists after following all instructions, call your Xerox representative.

Problem	Suggested solutions
The digital press does not power on. (Continued on next page.)	<ul style="list-style-type: none"><li>• Ensure the power cord is plugged into the receptacle correctly.</li><li>• Ensure the power switch inside the front left door is set to the on position.</li></ul>



**NOTE:** If the RIP indicates that the digital press has a fault and the touch screen does not readily display a message, press the **Machine Status** button and touch Error Log to display the fault history.

Problem	Suggested solutions
The digital press does not power on (continued).	<ul style="list-style-type: none"> <li>• Check the GFI circuit breaker switch.</li> <li>• If the power in your location is working properly, you have tried the suggested solutions, and the digital press power does not power on, call for assistance.</li> </ul>
Prints are not on desired paper size.	<ul style="list-style-type: none"> <li>• Ensure that the proper paper is loaded in the paper trays.</li> <li>• Select the paper size, tray and weight through the digital press options on your PC.</li> <li>• Ensure that the correct weight is selected on the tray.</li> <li>• Ensure that "Fit to Paper" or an equivalent selection is not selected in your print driver.</li> </ul>
Misregistration of the scan to print image from the Document Glass.	<ul style="list-style-type: none"> <li>• Go into Tools Mode and adjust registration. Refer to the Tools Mode in the <i>System Administration Guide</i>.</li> </ul>
Paper is misfed or wrinkles repeatedly.	<ul style="list-style-type: none"> <li>• If a message appears on the Touch Screen, follow the instructions displayed and refer to the information in this chapter.</li> <li>• Ensure the proper paper (refer to the Paper chapter of this manual and the Recommended Materials List) is loaded correctly and not filled above the MAX line.</li> <li>• Turn the paper stack around and/or over in the selected paper tray.</li> <li>• Remove a few sheets from the top and the bottom of the stack in the paper tray.</li> <li>• Fan all four edges of the paper in the selected paper tray.</li> <li>• Replace the paper in the selected paper tray with paper from a new package.</li> <li>• Remove any partially fed paper from the trays.</li> <li>• Ensure the paper you are using had been stored properly.</li> </ul>



Problem	Suggested Solution
The Control Panel Touch Screen does not respond to a touch command.	<ul style="list-style-type: none"> <li>Press <b>Clear All</b> on the Control Panel.</li> <li>Touch a selectable button on the Touch Screen. A slight pressure is required to cause the digital press with scanner to react.</li> <li>If the problem persists, open the Front Door of the digital press with scanner. Close the Front Door and make a selection on the Touch Screen. If the Touch Screen does not respond to any touch commands, switch off the power. Wait 15 seconds. Then switch on the power. Reprogram the digital press with scanner for the copy features that are desired.</li> </ul>
You cannot program a job while a screen is open.	Jobs cannot be programmed or copies made while some screens, such as administration screens, jam clearance screens, or consumable status information screens, are open. Follow the directions on the information screen. Then program the desired job.
Digital press with scanner features are not selectable.	Certain features cannot be selected because of the previous selections. Generally, features or buttons you can select appear selectable to indicate you can use them with the previous selections. Refer to the "Overview" chapter for more information about buttons.

Problem	Suggested Solution
Transparencies	<ul style="list-style-type: none"> <li>• Load the transparencies by following the instructions in Chapter 3, "Paper and Paper Trays."</li> </ul>
Transparencies are too oily.	<ul style="list-style-type: none"> <li>• Make 5 blank sheet copies with the Full Color option on paper stock to purge excess oil from system. Reload the transparencies and continue the copying job.</li> <li>• Refer to the <i>Recommended Materials List</i> and the <i>Color Materials Usage Guide</i> for more information about transparencies.</li> </ul>
Multiple sheets feed from the paper trays.	<ul style="list-style-type: none"> <li>• Do not fill the paper trays above the MAX fill line indicator.</li> <li>• Remove the paper from the tray and fan the sheets to separate the joined sheets.</li> <li>• Predrilled sheets may stick together at the holes. Remove the paper from the tray and fan the sheets to separate the joined sheets.</li> <li>• Paper and transparencies may stick together if environmental conditions are too dry and cause excessive static. Increase the humidity level in the room to minimize static.</li> <li>• Gently fan transparencies to separate the sheets before you load them.</li> </ul>

Problem	Suggested Solution
Sheets will not feed from Paper Tray 4	<ul style="list-style-type: none"> <li>• Ensure that the height of the stack does not exceed the MAX fill line.</li> <li>• Check that the paper guide is not too tight. The paper guide should be adjusted to fit snug against the paper stack.</li> </ul>
Paper jams when exiting the Paper Trays	<ul style="list-style-type: none"> <li>• Ensure that the edge guides of the paper tray fit snugly against the paper stack.</li> <li>• Do not fill the paper trays above the MAX fill line indicator.</li> <li>• Close the tray slowly to avoid shifting the paper stack.</li> </ul>
Output jams when exiting the digital press to the Offset Catch Tray	<ul style="list-style-type: none"> <li>• When no other output device is present, the Offset Catch Tray can hold up to 500 sheets of 24 pound (90 g/m<sup>2</sup>) paper. Empty the catch tray when output approaches this limit to ensure continuous production.</li> <li>• Ensure the first sheet is not blocking the paper exit, particularly for 11 x 17 inch (A3) output.</li> </ul>
Copies originating from Paper Tray 4 are skewed. Jams may be occurring.	The paper guides on Paper Tray 4 may not be set correctly or may be too tight against the paper stack. Ensure that the paper guide lightly touches the paper stack.
Digital press with scanner does not make copies when Auto Paper is selected.	For the Auto Paper selection to function correctly, the size of the original document must be the same size as the paper supply that is loaded in at least one of the trays. If not, select the paper tray size that best meets your needs. Or, if you wish to continue to use the Auto Paper feature, load one of the trays with the same size paper as the original document.

Problem	Suggested Solution
Fresh copies used as original documents cause jams in the Duplex Automatic Document Feeder.	This problem is caused by the oil used in the fusing process. The problem can be reduced or eliminated by allowing output to sit for awhile so oil can evaporate before using them as original documents.
Excessive paper curl (continued on the next page).	<p>Paper curl may be a result of:</p> <ul style="list-style-type: none"><li>• Ensure that the correct paper weight and paper type are selected.</li><li>• The mass of dry ink (toner) coverage on the copy - the greater the toner mass, the greater the paper curl.</li><li>• The paper weight.</li><li>• The humidity conditions at the digital press with scanner.</li><li>• You can sometimes minimize curl problems by flipping the paper over in the tray and making the copies again. If excessive curl is still present, use a heavier paper.</li><li>• Attempt to minimize the amount of dry ink on the copy paper by selecting the Photo feature as the Document Type and/or the lighter and/or less chroma image quality options.</li><li>• Select the Full Color option instead of 3 Pass Color to minimize the amount of dry ink on the copy paper.</li><li>• Empty the output device when output approaches this limit to ensure continuous production.</li></ul>

Problem	Suggested Solution
Excessive paper curl (continued).	<p>Paper curl may be a result of:</p> <ul style="list-style-type: none"> <li>• Allow output to sit for awhile so any excess oil can evaporate before using them as original documents.</li> <li>• Copying high density background areas or documents with alternating high and low density areas results in more curl. Attempt to reduce the amount of curl by adjusting the image quality controls to reduce the amount of dry ink on the copies.</li> <li>• Place the digital press with scanner and paper in a room with air conditioning and low humidity to minimize the moisture in the environment.</li> <li>• Attempt to copy on thicker paper or on paper stock that is less sensitive to moisture.</li> </ul>
Moiré patterns on the copies	<ul style="list-style-type: none"> <li>• This problem sometimes occurs when original documents have halftone images. Perform the following suggested solutions in the following order:</li> <li>• Select Halftone as the Original Type. If selecting Halftone does not solve the problem, select Map as the Original Type.</li> <li>• Rotate the original on the Document Glass by 180 degrees.</li> <li>• Reduce or enlarge the output by 5%.</li> <li>• Use the Sharpness feature to select Softer options until the moiré patterns are not visible.</li> </ul>

Problem	Suggested Solution
The entire document is not being copied	<ul style="list-style-type: none"> <li>• Enter the Original Input.</li> <li>• Reduce the image.</li> </ul>
Scattered, very light show-through images occur when copying a document that is on thin paper.	<ul style="list-style-type: none"> <li>• Select the Background Erase option in the Image Tone Presets feature in the Image Quality tab.</li> <li>• To eliminate the unwanted show-through images, place the thin (translucent) document on the Document Glass. Cover the document with a black (or very dark) sheet of paper that is the same size as the document you are copying.</li> <li>• Place the 2-sided original document on the Document Glass with a blank sheet of paper on top of it.</li> <li>• Adjust the Lighten/Darken control to Lighten.</li> <li>• Select the Photo &amp; Text or Text document type and the Lighten/Darken feature or Background Erase in the Image Tone Presets feature of the Image Quality tab.</li> </ul>
A black border appears.	<ul style="list-style-type: none"> <li>• Select the Auto Center option in the Image Shift feature or the Edge Erase feature of the Added Features tab.</li> </ul> <p>Or:</p> <ul style="list-style-type: none"> <li>• Program the Original Input in the Added Features tab for the dark bordered document that you wish to copy.</li> </ul>

Problem	Suggested Solution
The edge of the original image is deleted from the copies.	<ul style="list-style-type: none"> <li>Edge deletion on all sides of the copy is normal, and is greatest on the lead edge of the copy. Set the Edge Erase feature, Variable Erase option, to 4 mm to minimize the deletion. Select the size for the original document in the Added Features tab and an appropriate setting from the Reduce/Enlarge option.</li> <li>Moisture may be present in the paper. Load a fresh supply of paper into the trays.</li> <li>Some deletions may be caused by small pieces of paper remaining in the digital press with scanner components after a paper jam has been cleared. When clearing a paper jam, be sure to look for and remove any paper fragments.</li> </ul>
Copies made from photographs show color or background on output edges	Most emulsions used to develop photographs have color. Sometimes this color shows on the border of the photograph. To prevent the color from being copied as part of the image or as background, use the Edge Erase feature on the Added Features tab to deliberately erase the unwanted color or background.
Copies made using the 100% Reduce/Enlarge feature do not include the entire image along the edge of the document.	Select the Original Input feature and program the exact size of the dark bordered document that you wish to copy.
Output is too light.	Use the Lighten/Darken feature to select a darker level. Select the Text or Maps option in the Original Type feature.
Output is too dark.	Use the Lighten/Darken feature to select a lighter level. Select the Photo option in the Original Type feature.
Output has too much contrast.	Select less Chroma (toward Pastel) in the Image Quality tab.
Output has low contrast.	Select more Chroma (toward Vivid) in the Image Quality tab. Select the Maps option in the Original Type feature.

Problem	Suggested Solution
Background on the copies.	<ul style="list-style-type: none"> <li>• Examine the input document for the source of the problem.</li> <li>• Ensure that the document is held flat on the Document Glass and that the document cover is closed.</li> <li>• From the Image Quality tab, adjust the Lighten/Darken control to Lighten.</li> <li>• When making Black copies, select Black Only as the Color Mode. Reduce the Color Balance so the background does not appear on the copies.</li> <li>• When copying colors, set the Color Mode to Auto and set the Image Tone Preset Background Erase option so that the background does not appear on the copies.</li> <li>• Determine the type of document you are copying. From the Original Type feature, indicate whether the original is Photo &amp; Text, Text, Photo, or Maps for best image quality.</li> </ul> <p><b>NOTE:</b> Use the Photo option for documents that contain areas of different density, from light to dark, when all levels of density need to be copied.</p>



Problem	Suggested Solution
The copies are blurred when copying thick documents, three-dimensional objects, or books.	<ul style="list-style-type: none"><li>• Increase the Sharpness.</li><li>• Select the Text or Maps option in the Original Type feature.</li><li>• Ensure that the document is held flat on the Document Glass and that the document cover is closed as much as possible. DO NOT force the cover closed.</li></ul>
The image quality gradually degrades on successive copies, or copies made with settings used previously are significantly worse than copies you are making now.	<ul style="list-style-type: none"><li>• The internal process control function of the digital press with scanner has degraded.</li><li>• Place a white sheet of paper on the Document Glass and run 35 blank copies using Full Color in the Color Mode feature. Make a copy of the document again. Ensure that the image quality selections are set properly.</li><li>• If the problem persists, contact your System Administrator or refer to the <i>System Administrator Guide</i>.</li></ul>
Copies have dark bands on the lead edge and a corner when 100% Reduce/Enlarge is selected.	<ul style="list-style-type: none"><li>• The bands may be caused by curled edges on the document or by misregistration of the document on the Document Glass. Ensure that the document is registered correctly.</li><li>• Ensure that the Edge Erase is at No Erase (2 mm). Increasing the amount of Edge Erase should remove more of the dark bands but could cause image loss.</li></ul>


Problem	Suggested Solution
Copies have dark bands on the lead edge and a corner when 100% Reduce/Enlarge is selected and the DADF is used.	The bands may be caused by curled edges on the document or by misregistration of the document by the DADF. Ensure that the Edge Erase is at No Erase (2 mm). Increasing the amount of Edge Erase should remove more of the dark bands but could cause image loss.
Corner Shift appears in the wrong area on the copy.	Ensure the document is positioned on the Document Glass and the correct Corner Shift is selected.
Large black borders appear on the copies with documents smaller than the copy paper size.	<ul style="list-style-type: none"> <li>• No shift is selected. Select the Auto Center feature to eliminate the black borders.</li> <li>• Also, select the Auto Center feature to eliminate the black borders for digital press with scanners equipped with the Duplex Automatic Document Feeder (DADF).</li> </ul>
The image density of the copy seems lighter toward the trail edge.	This defect is noticeable only when the input document has large solid areas. To reduce or eliminate this defect, select the Photo option in the Original Type feature of the Image Quality tab.

Problem	Suggested Solution
Copies made from a newspaper, a map, or a photograph have background when Original Type is defined as Maps or Photo.	<ul style="list-style-type: none"><li>• The DocuColor 2060/2045 digital press with scanner detects low densities of color and reproduces them. This is especially true with the Maps and Photo options.</li><li>• Use the Background Erase option in the Image Tone Presets feature in the Image Quality tab.</li><li>• Newspaper show-through can be reduced or eliminated by backing the document with a black sheet of paper.</li><li>• The background can be reduced or eliminated by adjusting the Lighten/Darken feature toward lighten.</li></ul>
It is difficult to perform secondary operations on the copies, such as writing on them or using adhesives.	This problem is caused by the oil used in the fusing process. The problem can be reduced or eliminated by setting the copies aside for one or two hours before performing a secondary operation on them. Rubbing the copy surface with a soft, clean cloth or eraser may also help.
Greyish spots appear when scanning a glossy photo or glossy original.	Place a transparency on the Document Glass then place the glossy photo or glossy original face down on the transparency to reduce the glare.

## Jam Clearance

If a jam occurs, the DocuColor 2060/2045 stops printing and a message is displayed on the Touch Screen. Follow all instructions displayed completely and in sequence. Refer to this chapter for additional information to resolve the problem.


If power is interrupted during the printing process, it is imperative that you clear all other jam areas before you open and clear areas behind the Right and Left Front Doors of the digital press. Figure 1 illustrates the various parts of the digital press. Follow the jam clearance instructions on the Touch Screen.

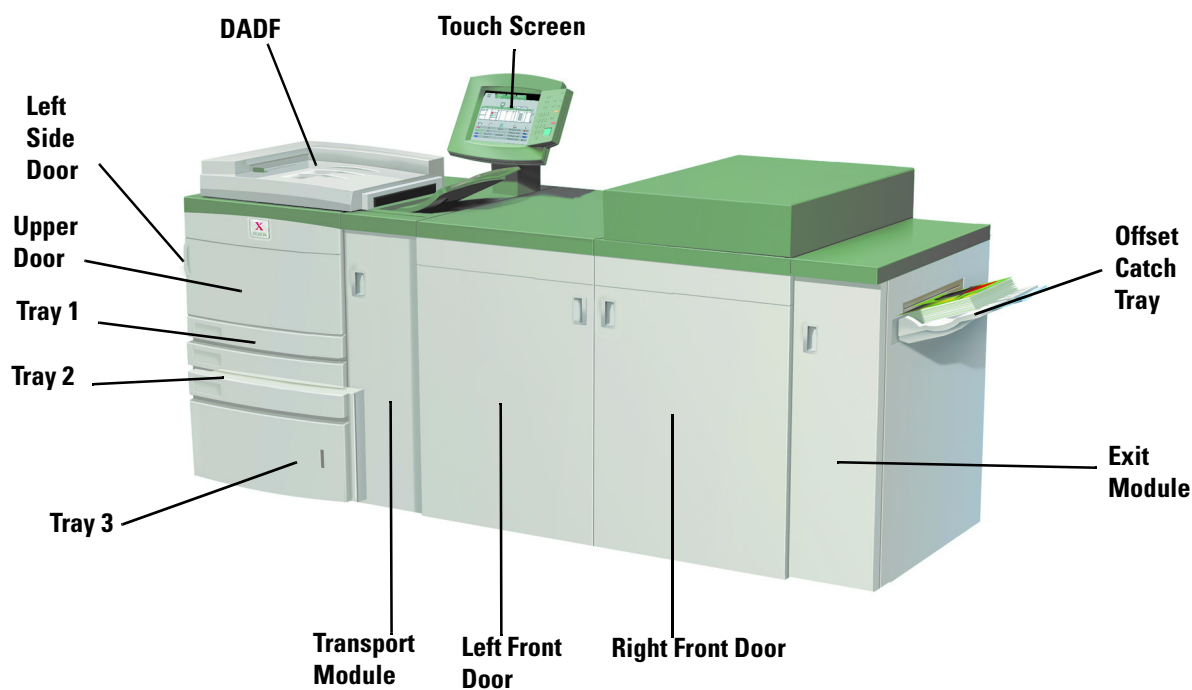

**Figure 1. DocuColor 2060/2045**

## DADF Jam Clearance

When a document jam occurs in the Duplex Automatic Document Feeder, the Document Feed Lamp lights and instructions for clearing the jam appear on the Touch Screen.

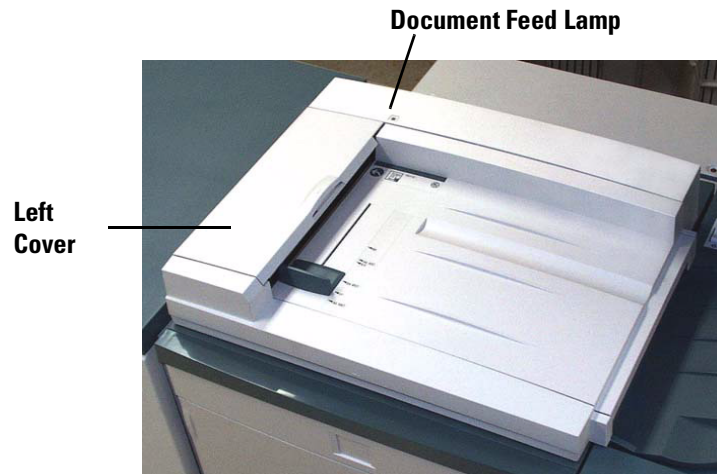

**Figure 2. DADF**

- 1** Open the Left Cover by lifting it to the left.
- 2** Remove the jammed documents. Check for and remove any torn pieces of paper.
- 3** Close the Left Cover.

- 4 Slide the Document Guide away from the stack of documents.
- 5 Raise the DADF and remove any documents from the Document Glass.
- 6 Remove any paper that is on the DADF belt.
- 7 Close the DADF.
- 8 Check the documents for damage, creases, and/or folds before reloading them into the Document Feeder Tray.



**NOTE:** *If a document is damaged, you may have to use Interrupt mode to make a copy from the Document Glass. You can then return to the original job and use the copy instead of the damaged document in the stack of documents you are copying.*

- 9 Check the message on the screen to ensure that all jams are cleared.
- 10 Reload the stack of documents into the Duplex Automatic Document Feeder according to the instructions on the Touch Screen. Reposition the document guide.
- 11 Press the **Start** button to restart your copy job.

## Left Side Door Jam



*Figure 3. Left Side Door (Area 1)*


123...

- 1** Open the Left Side Door of the DocuColor 2060/2045. If you have an optional Tray 4 (refer to the Accessories chapter in this manual), open the Tray 4 Right Door, then open the Left Side Door of the digital press.
- 2** Carefully remove all jammed paper, ensuring that all pieces are removed if the paper rips.
- 3** Close the Left Side Door. If you have an optional Tray 4, close the Tray 4 Right Door.

## Trays 1, 2 and 3 Jams



**CAUTION:** *The Feed Heads and the Feed Rolls are delicate and can be damaged if this procedure is not followed precisely.*

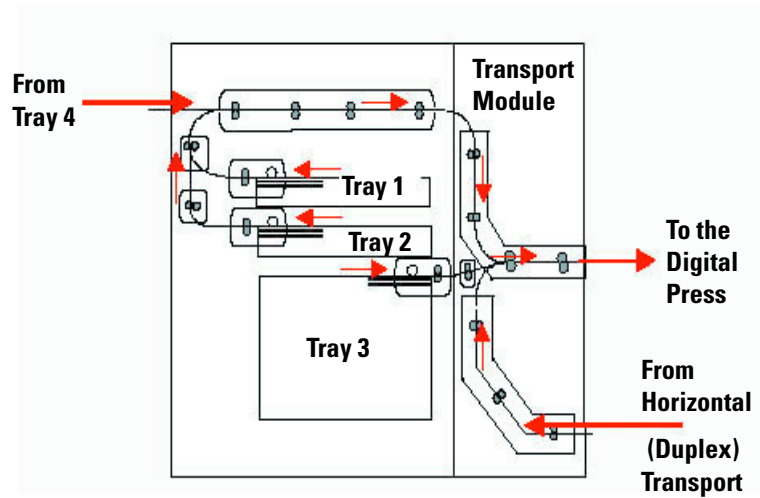

**Figure 4. Paper Path of Trays 1, 2 and 3**


123...

- 1** Perform the Left Side Door Jam procedure on the previous page before opening Trays 1 and 2.
- 2** Open Tray 1.



- 3** Carefully remove all jammed paper.
- 4** Close Tray 1.
- 5** Open Tray 2.
- 6** Carefully remove all jammed paper.
- 7** Close Tray 2.
- 8** Perform the Transport Module Jam procedure later in this chapter before opening Tray 3.
- 9** Open Tray 3.
- 10** Carefully remove all jammed paper.
- 11** Close Tray 3.
- 12** Follow the instructions on the Touch Screen to resume your print job.

## Upper Door Jam

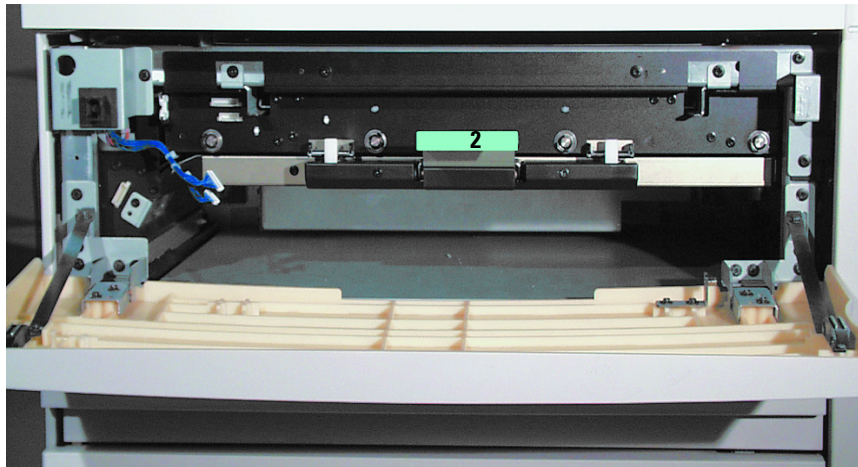

*Figure 5. Upper Door*

123...

- 1** Open the Upper Door above Tray 1.
- 2** Lower the Feed Transport by pulling down on green handle 2.
- 3** Carefully remove all jammed paper.
- 4** Raise the Feed Transport back into its original position.



**NOTE:** *The front door will not close if the Feed Transport handle is not seated properly.*

- 5** Close the Upper Door.
- 6** Follow the instructions on the Touch Screen to resume your print job.

Transport Module Jam

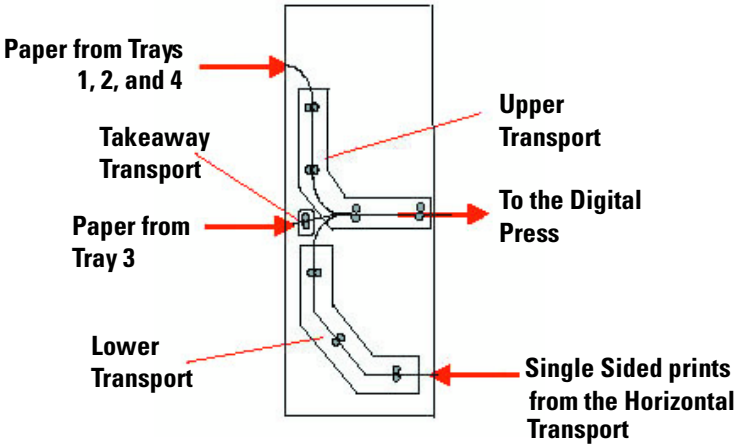


Figure 6. Transport Module Paper Path

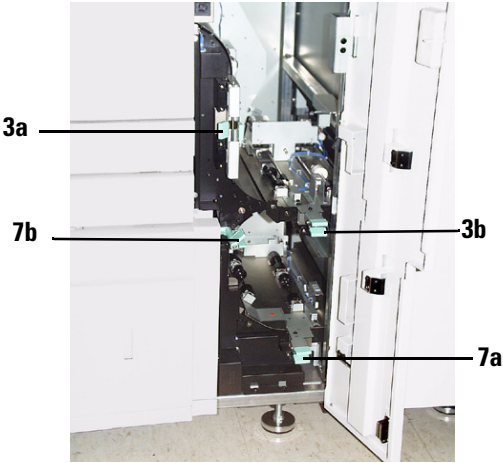


Figure 7. Transport Module

123...

- 1** Open the Transport Module door.
- 2** When printing 1-Sided or 2-Sided, grasp the green handle 3a, squeeze and move it to the right.
- 3** Carefully remove all jammed paper.
- 4** Reposition the green handle 3a.
- 5** Lift green handle 3b.
- 6** Carefully remove all jammed paper and return handle 3b to the original position.
- 7** When printing 2-Sided, also lift handle 7a and remove all jammed paper. Return handle 7a to the original position.
- 8** When a Tray 3 misfeed occurs, release handle 7b and remove all jammed paper. Return handle 7b to the original position.
- 9** Close the Transport Module door.
- 10** Follow the instructions on the Touch Screen to restart your print job.

Exit Module Jams

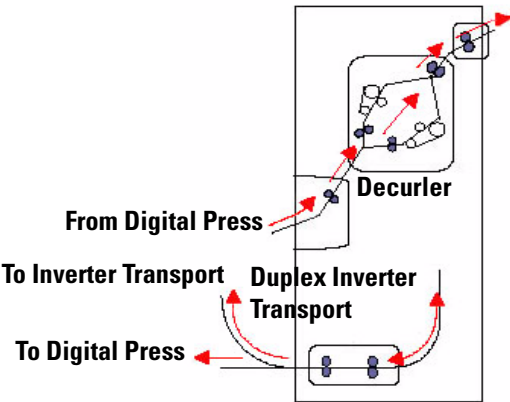


Figure 8. Exit Module Paper Path

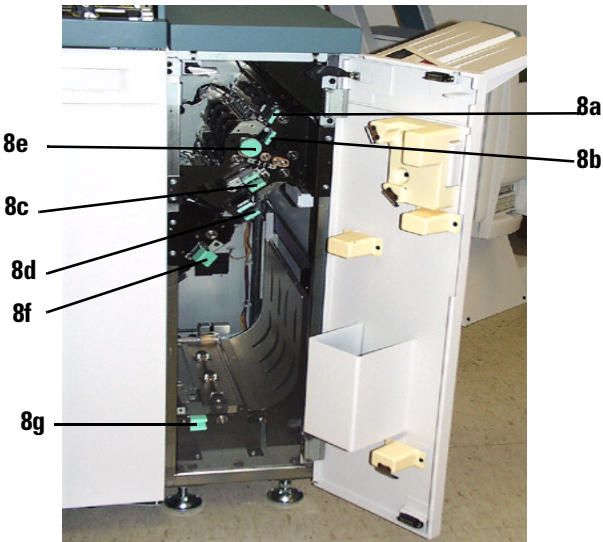


Figure 9. Exit Module

**123...**

- 1** Open the Exit Module door.
- 2** When printing 1-Sided or 2-Sided, squeeze and open green handle 8a.
- 3** Squeeze and open green handle 8b.
- 4** Squeeze and open green handle 8c.
- 5** Squeeze and open green handle 8d.
- 6** Squeeze and open green handle 8f.
- 7** Carefully remove all jammed paper. Turn green knob 8e to free any immovable paper.
- 8** Reposition the green handle 8a and ensure the handle is seated properly.
- 9** Reposition the green handle 8b and ensure the handle is seated properly.
- 10** Reposition the green handle 8c and ensure the handle is seated properly.
- 11** Reposition the green handle 8d and ensure the handle is seated properly.
- 12** Reposition the green handle 8f and ensure the handle is seated properly.
- 13** When printing 2-Sided or face down output, lift handle 8g.
- 14** Carefully remove all jammed paper.
- 15** Reposition the green handle 8g and ensure the handle is seated properly.
- 16** Close the Exit Module door.
- 17** Follow the instructions on the Touch Screen to restart your print job.

## Right/Left Door Paper Path Jams

### Registration, Vacuum Transport and Fuser

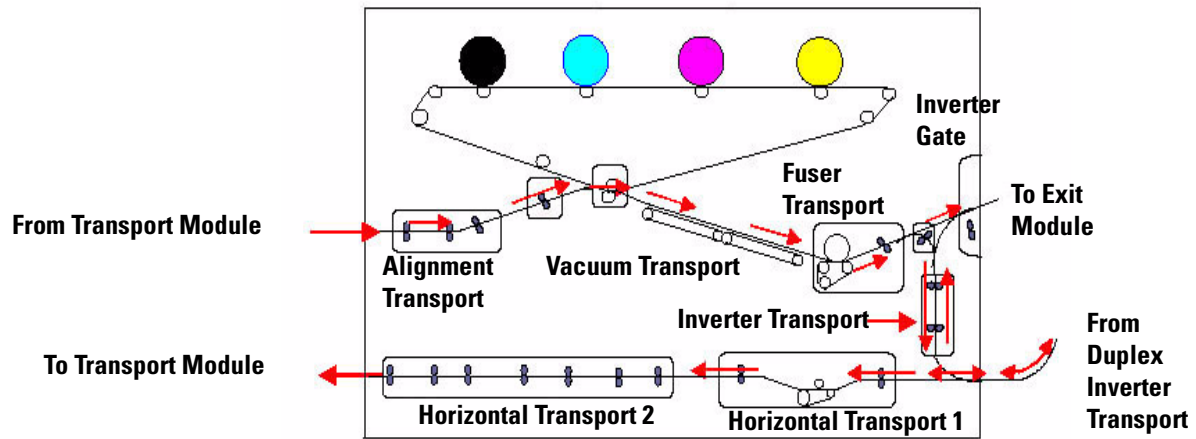


Figure 10. Right/Left Door Paper Path


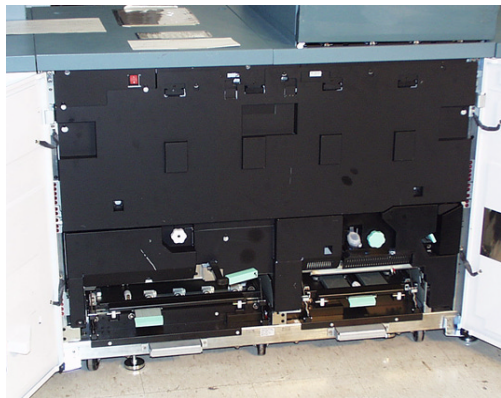


Figure 11. Right and Left Doors Open

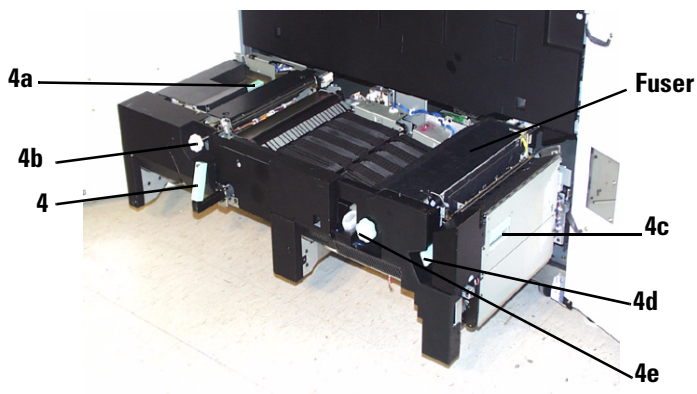

**Figure 12. Alignment, Vacuum and Fuser Transport**



**KEY POINT:** *It is imperative that you clear all other jam areas before you open and clear the Right and Left Front Door areas.*



**CAUTION:** *The Fuser area is extremely hot and injury will occur if not handled correctly.*



- 1** Open the Right and Left Front Doors.
- 2** Grasp handle 4 and move it in the direction of the arrow.
- 3** Slowly pull the Paper Transport straight out until it stops.
- 4** Lift handle 4a and carefully remove all jammed paper, ensuring that all pieces are removed if the paper is torn. Turn the green handle 4b to free any immovable paper.



- 5 Reposition green handle 4a.
- 6 The Fuser area is on the right hand side of the Paper Transport. Lift handle 4c on the right hand side and lay the Inverter Transport back.
- 7 Lift handle 4d and clear all jammed paper. Rotate knob 4e counterclockwise to clear any immovable paper.



**NOTE:** Occasionally a sheet of paper wraps around the heat roll. (The heat roll is visible when handle 4d is up.) DO NOT attempt to remove this sheet of paper because the stripper fingers may be damaged if you attempt this procedure. Call your Xerox service representative to remove this piece of paper.

- 8 Reposition green handle 4d and close the Inverter Transport 4c. Ensure the magnets are in place front and back.
- 9 Slowly push in the Paper Transport until it stops. Ensure that the green handle is seated properly.
- 10 Close the Right and Left Front Doors.
- 11 Follow the instructions on the Touch Screen to restart your print job.

## Horizontal Transport (2-Sided Printing Only)

When printing 2-Sided output, perform the following in addition to steps 2 through 8 of the Registration, Vacuum Transport, and Fuser procedure.



**Figure 13. Digital Press Horizontal Transport**



**CAUTION:** *The Fuser area is extremely hot and injury will occur if not handled correctly.*

123...

- 1** Lift both of the Horizontal Transport handles 5 and 6.
- 2** Apply pressure to the handles to securely latch them.



**CAUTION:** *The paper can rip if the paper is not pushed before removing it from under the lip of the Transport.*

- 3** Push the paper back until you see the edge of the paper, then remove the paper.
- 4** Reposition handles 5 and 6.
- 5** Close the Right and Left Front Doors.
- 6** Follow the instructions on the Touch Screen to restart your print job.

## Fault Codes

When there is a problem with the digital press or an accessory, refer to the Touch Screen where the Fault Code and a solution will be displayed. Follow all steps until the problem is corrected. If the problem persists, call the following number for assistance.

Follow the instructions below before calling for service.

123...

- 1** Be prepared to provide a complete description of the problem to the service operator. Defining the problem accurately may help you and the operator solve the problem over the phone and minimize downtime. If the problem cannot be solved by telephone, a service representative will be dispatched to your site promptly.
- 2** Record the displayed Fault Codes.
- 3** Record the Machine Serial Number. Press the **Machine Status** button on the Control Panel. Touch the **Machine Details** tab and the serial number is displayed.
- 4** If copy quality is a problem, take a copy sample to the telephone with you to help you describe the problem or to assist you when answering the questions from the service operator about the defects.
- 5** If possible, use a phone near the press when calling for assistance. Follow the instructions provided by the operator.
- 6** For system support, user help, and service support, call the appropriate number:  
 US: **1-800-821-2797**  
 Canada: **1-800-939-3769**  
 Europe: \_\_\_\_\_  
 Latin America: \_\_\_\_\_

This page is intentionally left blank.

## 7. Technical Data

---

### Raster Image Processor (RIP)

---

Refer to the documentation that comes with your RIP.

### Digital Press Specifications

---

#### Electrical Power Requirements (200/240 - 50/60 Hz)

---

##### Specifications

---

Single phase - Three wire plus safety ground

Current service - 30 Amp sole use @ 200V to 240V

20 Amp sole use @ 220V to 240V

Range (line to neutral) - 200 V minimum to 240 V maximum

Frequency - 50/60 Hz

##### Power Consumption

---

Standby - 2.6 KVA maximum

Run - 4.8 KVA maximum

Power Saver - 1.9 KVA maximum

## Heat Output

---

Standby - 7936 BTU

Run - 12,300.8 BTU

## Air Exchange Rate

---

Standby - 6143 cubic feet

Run - 21,609.72 cubic feet

Power Saver - 1059.3 cubic feet

## Energy Star/Sleep Mode

---

Standby - 2.3 KW

Run - 3.6 KW

Power Saver - 45 W

## Environmental Requirements

---

As an ENERGY STAR Partner, Xerox Corporation has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

Operating Temperatures:

Minimum: 50°F (10°C) at 15 percent relative humidity

Maximum: 90°F (32°C) at 85 percent relative humidity



**NOTE:** *Above 82°F (28°C), reduced humidity is required to maintain the specified performance.*

## Altitude

---

Normal configuration: maximum 10,000 feet (3000 meters).

## Noise Levels

	Continuous Noise	Impulse Noise
Standby	49.5 dBa	N/A
IOT Operation	64.0 dBa	72.0 dBa
Full System Operation	72.0 dBa	72.0 dBa

## Ozone Emissions

Not to exceed 0.02 PPM (maximum)

Imaging material: No unpleasant odor

## Dust

Dust concentration during continuous run should be 0.1mg/cubic meter.

## Capabilities

### Tray Capacity

Paper Trays 1 and 2 have a capacity of 550 sheets.

Paper Tray 3 has a capacity of 2200 sheets.

### Throughput

Tray 1/Tray 2: Inches/JIS B5 (LEF/SEF) to 11 x 17 inch/A3 SEF

Tray 3: Inches/JIS B5 (LEF/SEF) to 12.6 x 19.2 inch (320 x 487mm) SEF

### Warm-up Time

7 minutes

### First Print Out Time

16 seconds

## Print Rates

Use the Productivity Setting in the Tools Mode to optimize the throughput speed for the type of paper you run most frequently. This feature is available only for the DocuColor 2060.

- Selecting **Auto** selects a Fuser temperature based on the paper weight selected on the paper tray, improving average power consumption, but slowing operation while the Fuser heats up or cools down.
- Selecting **Light Weight** sets the Fuser temperature to 160°C, which optimizes the throughput speed for light weight papers, and uses less power.
- Selecting **Heavy Weight** sets the Fuser temperature to 175°C, which optimizes the throughput speed for heavier papers, and uses more power.

Refer to the *Systems Administrator Guide* for the procedure.

The DocuColor 2045 speeds for each paper weight are listed in this table and cannot be changed.

Substrate	DocuColor 2045	DocuColor 2060		
		Heavy Weight	Light Weight	Auto
64 - 80 g/m <sup>2</sup>	45 ppm*	45 ppm	45 ppm	45 ppm
81 - 105 g/m <sup>2</sup>	45 ppm	45 ppm	60 ppm	60 ppm
106 - 135 g/m <sup>2</sup>	30 ppm	60 ppm	30 ppm	60 ppm
136 - 150 g/m <sup>2</sup>	30 ppm	30 ppm	30 ppm	30 ppm
151 - 220 g/m <sup>2</sup>	22.5 ppm	30 ppm	22.5 ppm	30 ppm
221 - 280 g/m <sup>2</sup>	22.5 ppm	22.5 ppm	22.5 ppm	22.5 ppm
Transparencies	22.5 ppm	22.5 ppm	22.5 ppm	22.5 ppm

**Table 1. Substrate Print Speeds**

\*ppm = prints per minute



## Physical Characteristics

### Digital Press Size

92.3 inches/2380 mm (W) x 37.4 inches/950 mm (D) x 55.6 inches / 1412 mm (H)

### Digital Press Weight

1870 pounds/850 Kg

### Floor Space Requirements

Minimum space requirements for the basic configuration of the digital press, including the RIP: 178.5 inches/4505mm L x 165.4 inches/3167mm W.

## Duplex Automatic Document Feeder (DADF) Specifications

### Document Feeding Method

Face-up, top feed method.

### Sizes

Minimum: 8.5 x 11 inches (216 x 279 mm)/A4 (SEF)

Maximum: 11 x 17 inches (279 x 432 mm)/A3 (SEF)

### DADF Capacity

50 for 38 - 100 g/m<sup>2</sup> documents.

40 for 101 - 128 g/m<sup>2</sup>

### **Speed**

---

40 black and white copies per minute (A4 or 8.5 x 11 inch. LEF)

12 black and white copies per minute (A3 or 11 x 17)

### **Power Source**

---

Supplied from the Digital Press.

### **Noise**

---

Run: 68 dB(A)

### **Dimensions**

---

25.19 inches/640 mm (W) x 21.06 inches/535 mm (D) x 5.11 inches/130 mm (H)

### **Weight**

---

28.7 lbs. (14 kg)

### **Floor Space Requirements**

---

Refer to the *DocuColor 2060/2045 Installation Planning Guide*.

## Metric Conversion Chart



**NOTE:** Note that most numbers are rounded off.

Inches	Millimeters (mm)	Inches	Millimeters (mm)	Inches/ International Sizes	Millimeters (mm)	Celsius (°C)	Fahrenheit (°F)
0.01	0.254	6	153	13.5	343	10	50
0.04	1	7.2	183	14.0	356	32	90
0.05	1	7.3	185	8.0	203	100	212
0.1	3	7.5	190	15.75	400	200	392
0.15	4	7.8	198	16.9	429	204	400
0.2	5	8.0	203	17.0	432	218	425
0.25	6	8.3	211	24.0	610		
0.28	7	8.4	213				
0.3	7	8.5	216				
0.5	13	8.7	221	5 x 8	127 x 203		
0.6	15	9.0	229	8 x 10	203 x 254		
0.7	18	10.0	254	8 x 11	203 x 279		
0.8	20	10.5	267	A4	210 x 297		
1	25.4	10.8	274	8.5 x 11	216 x 279	Kilograms	Pounds
1.4	36	11.0	279	8.5 x 13	216 x 330	1.0	2.205
1.5	38	11.1	282	8.5 x 14	216 x 356	0.454	1.0
1.7	43	11.15	283	8.7 x 14	221 x 356		
1.9	48	11.5	292	9 x 11	229 x 279		
2	51	11.8	300	9 x 14	229 x 356		
2.3	58	11.85	301	11 x 17	279 x 432		
2.5	64	12.5	318	A3	297 x 420		
3	76	13.0	330	12 x 17	305 x 432		
4	104	13.4	340	12 x 18	305 x 457		
5	127	13.45	342	SRA3 12.6 x 17.7	320 x 450		

This page is intentionally left blank.

## 8. Maintenance

---

This chapter describes the consumable supply replenishment procedures necessary for keeping your DocuColor 2060/2045 operating reliably.

For troubleshooting problems, refer to the Problem Solving Section of this manual. Problems that cannot be solved need to be referred to your Xerox service representative. Use the procedure in this section when it becomes necessary to request a service call.

The procedure for ordering supplies and a list of the supplies you should keep on-hand are also included in this chapter.

### Cleaning the Touch Screen

---

Clean the Touch Screen during the digital press warm-up cycle at the start of each day. Remove all dust and fingerprints by wiping the Touch Screen with a clean, lint-free cloth.



**CAUTION:** *To avoid damage, do not use any Xerox cleaner, water, or commercial cleaner on the Touch Screen.*

## Cleaning the Document Glass

---

Keep the Document Glass clean to ensure that prints are the best quality. Clean the Document Glass at the beginning of each day and during the day as needed.

123...

1

Slightly dampen a clean, lint-free cloth with Xerox Lens and Mirror Cleaner or a glass cleaner that is not abrasive.



**CAUTION:** *To avoid damage, do not pour or spray the cleaner directly onto the Document Glass.*

2

Clean the Document Glass by wiping the glass in the lengthwise direction. Keep your fingers off the glass.

3

Use a clean, dry, lint-free cloth to wipe off any excess moisture.

4

Repeat these steps until there are no visible marks or streaks on the Document Glass.

## Cleaning the Document Glass Cover

Keep the Document Glass cover clean at all times. Any white foreign substance on the surface of the cushion may cause the digital press to calculate the actual document size or its position incorrectly, resulting in an unsatisfactory print. Clean the Document Glass Cover at the beginning of each day and during the day as needed.

MAINTENANCE

123...

- 1** Lift the Document Glass Cover.
- 2** Slightly dampen a clean lint-free cloth with Film Remover.
- 3** Wipe the underside of the Document Glass Cover until it is clean and dry.
- 4** Close the Document Glass Cover.

## Replacing Consumable Supplies

A message is displayed on the Touch Screen when a consumable item is nearing the replacement time. Another message is displayed when you must replace consumable items. The press will not continue to run after this message is displayed until the item is replaced.

You should keep a supply available of the following consumable items:

- Dry Ink/Toner cartridges in all four colors
- Fuser Oil
- An empty Waste Dry Ink/Toner bottle.

## Replacing a Dry Ink/Toner Cartridge


Refer to the following procedure when a message to replace a Dry Ink/Toner Cartridge is displayed on the Touch Screen. There are also instructions on labels that are affixed to the compartment containing the cartridges.



**CAUTION:** *To prevent spillage, remove Dry Ink/Toner cartridges only when the "Replace the Dry Ink Cartridge" message is displayed on the Touch Screen.*

123...

- 1** Place a drop cloth below the Dry Ink/Toner area.
- 2** Open the Dry Ink/Toner Compartment.

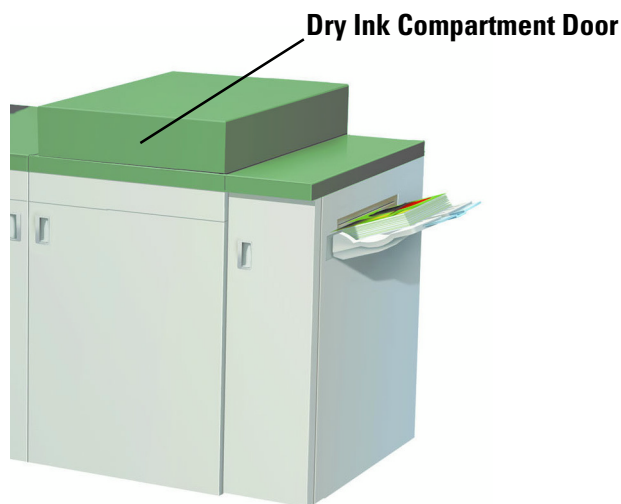


**Figure 1. Dry Ink Compartment**



- 3 Rotate the empty cartridge counter-clockwise until the arrow on the cartridge is aligned with the unlocked padlock on the compartment label.
- 4 Pull the cartridge completely out of the compartment. Dispose of the empty cartridge according to local regulations.



**CAUTION:** Do not use warm or hot water, or cleaning solvents, to remove Dry Ink/Toner from your skin or clothing. This will set the Dry Ink/Toner and make it difficult to remove. If any Dry Ink/Toner gets on your skin or clothing, use a brush to remove it, blow it off, or wash it off with cold water and mild soap.

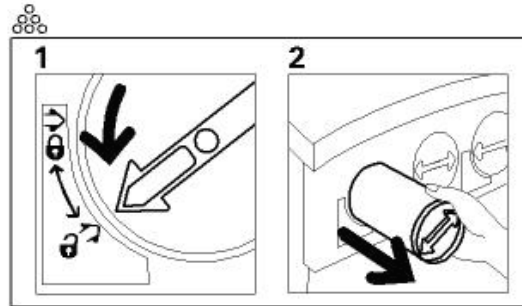

**Figure 2. Removing a Cartridge**


- 5** Remove a new cartridge from the box.



**CAUTION:** *Dry Ink/Toner settles and compacts during shipping and must be loosened before inserting the cartridge into the machine. Failure to completely loosen the material may cause damage to the gear at the end of the cartridge.*



**KEY POINT:** *Vigorously shake and/or slap the new cartridge with your hand until the Dry Ink/Toner is completely loosened. To determine if the material is loose, place your finger tips on the flat side of the gear cogs at the back of the cartridge and turn the gear clockwise. When the gear turns freely, the material is loose and the cartridge can be inserted into the compartment.*

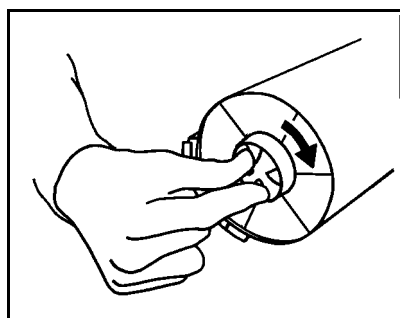


**Figure 3. Turning the Cartridge Gear**

- 6** To insert the cartridge into the compartment, align the arrow on the cartridge with the unlocked padlock on the compartment and slide the cartridge into the compartment.



**CAUTION:** *If more than one cartridge needs to be replaced at the same time, ensure that the cartridges are replaced in their correct color locations. From left to right, the cartridge colors are black, cyan, magenta, and yellow.*

- 7** Rotate the cartridge clockwise until the arrow on the cartridge is aligned with the locked padlock on the compartment.

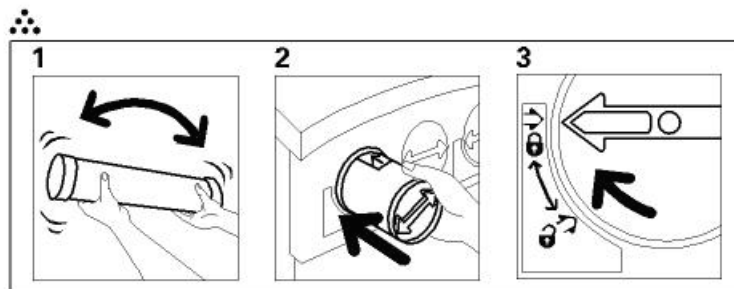

**Figure 4. Inserting a Cartridge**

- 8** Close the Dry Ink/Toner compartment.


## Adding Fuser Oil

A message appears on the Touch Screen advising you when to add Fuser Oil. Use the following procedure to replenish the Fuser Oil supply.

123...

- 1** Open the Right Front Door of the digital press.
- 2** Place a drop cloth on the floor under the Fuser area. Any oil spilled on a hard floor will make the floor slippery.
- 3** Refer to the following figure for the location of the Fuser Oil Reservoir Cap.

**Fuser Oil Cap**

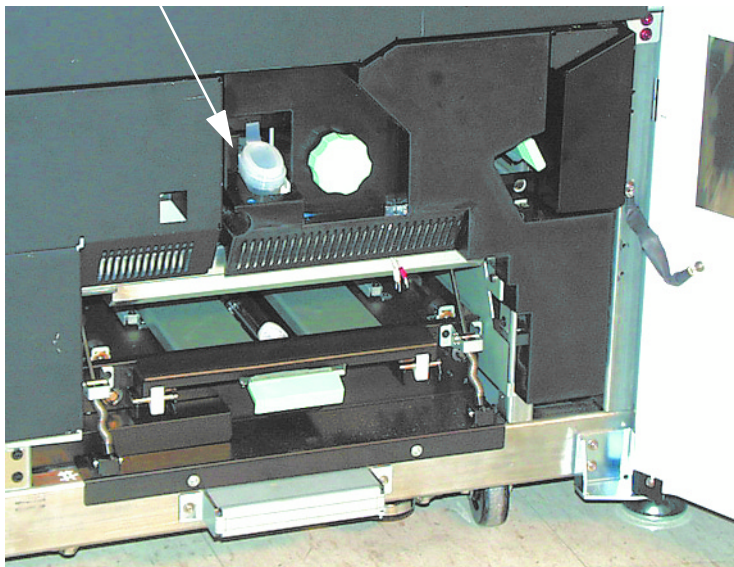

**Figure 5. Fuser Oil Cap**


- 4 To open the Reservoir Cap, grasp the tab at the back of the cap and pull it forward.
- 5 Remove the cap from the bottle of Fuser Oil and replace it with the Filler Spout Cap. This cap was provided to you when your digital press was installed. Contact your Xerox service representative if you cannot locate the Filler Spout Cap and need another one.
- 6 Carefully insert the Filler Spout into the opened Fuser Oil Reservoir and squeeze the bottle until the oil reaches the maximum fill level tab visible inside the Reservoir.
- 7 Remove the Filler Cap from the bottle and place it on a cloth or paper towel to drain. Return the original cap to the bottle of Fuser Oil.
- 8 Close the Reservoir Cap, ensuring that it snaps into place.
- 9 Close the Right Front Door of the digital press.

## Changing the Waste Dry Ink/Toner Bottle

---

A message appears on the Touch Screen advising you when to replace the Waste Dry Ink/Toner Bottle.

The bottle is located at the back of the Exit Module. Refer to the following figure.

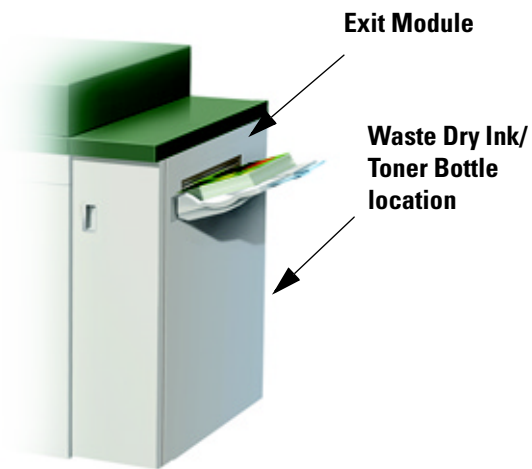

**Figure 6. Waste Dry Ink/Toner Bottle location**

To order consumable supplies, refer to Consumable Supplies in this chapter.

123...


MAINTENANCE

- 1 Open the Waste Dry Ink/Toner door at the back of the Exit Module. Refer to the following figure.



**Figure 7. Waste Bottle Door opened**

- 2 Grasp the handle of the full bottle and pull it out of the machine.
- 3 Remove the cap from the cap holder on the side of the full bottle and press the cap securely into the open hole on the top of the full bottle.

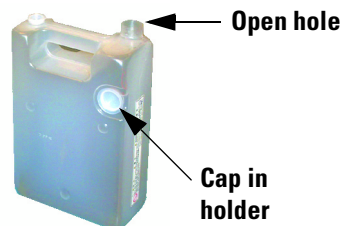

**Figure 8. Waste Dry Ink/Toner Bottle**

- 4 Dispose of the full bottle according to your local regulations.
- 5 Remove an empty bottle from the carton and insert it into the machine. Ensure that the hole on the top of the bottle is open.
- 6 Close the Waste Dry Ink/Toner Bottle door.

## Calling for Service

Refer to the Touch Screen when there is a problem with the digital press or an accessory. A status code and suggested solutions are displayed on the screen. Follow all steps in the suggested solutions until the problem is corrected. If the problem persists, call for assistance.

Follow the instructions below before calling for service.

123...

- 1** Be prepared to provide a complete description of the problem to the service operator. Defining the problem accurately may help you and the operator solve the problem over the phone and minimize downtime. If the problem cannot be solved by telephone, a service representative will be dispatched to your site promptly.
- 2** Record the displayed Fault Codes.
- 3** Record the Machine Serial Number. Press the **Machine Status** button on the Control Panel. Touch the **Machine Details** tab and the serial number is displayed. (If for some reason the serial number is not displayed, open the Right/ Left Front Doors of the digital press. The serial number is also on a white label on the bottom front frame.)
- 4** If copy quality is a problem, take a copy sample to the telephone with you to help you describe the problem or to assist you when answering the questions from the service operator about the defects.
- 5** If possible, use a phone near the press when calling for assistance. Follow the instructions provided by the operator.
- 6** For system support, user help, and service support, call the appropriate number:  
US: **1-800-821-2797**  
Canada: **1-800-939-3769**  
Europe: \_\_\_\_\_  
Latin America: \_\_\_\_\_



## Consumable Supplies

The following items are shipped with the DocuColor 2060/2045. It is recommended that you have a supply of these items available to eliminate downtime when they need to be replaced.

Supply Item	Supply Number Eastern Hemisphere	Supply Number Western Hemisphere	Supply Unit Shipped with digital press/ Reorder Quantity	Approximate Print Yield/Carton (Full Color Prints*)
Dry Ink/Toner (Black)	6R90289	6R975	1	19K
Dry Ink/Toner (Cyan)	6R90290	6R976	1	29K
Dry Ink/Toner (Magenta)	6R90291	6R977	1	29K
Dry Ink/Toner (Yellow)	6R90292	6R978	1	29K
Developer (Black)	5R90246	5R629	1	100K
Developer (Cyan)	5R90247	5R630	1	100K
Developer (Magenta)	5R90248	5R631	1	100K
Developer (Yellow)	5R90249	5R632	1	100K
Fuser Oil	8R4004	8R3993	1	200K
*Waste Dry Ink/Toner Container	8R90352	8R12662	1	50k
Paper	Colotech+	Brightwhite 94	2 reams	

\* Please call your Xerox service representative if you need to reorder Waste Dry Ink/Toner Containers. Only Xerox service representatives are able to reorder Waste Dry Ink/Toner Containers.

Store supply items and Xerox parts in their original packages in a convenient location.

\* Dry Ink/Toner yield projections are based on 15 percent area coverage per color (4 colors = 60 percent) at standardized conditions on 8.5 x 11 inch Xerox Digital Color Brightwhite 94 (previously Xerox Color Xpressions) 24 lb. (90 g/m<sup>2</sup>) and Colotech+ 90 g/m<sup>2</sup> reference paper.



**NOTE:** *Actual yields vary greatly, depending on color intensity, area coverage, paper stock, and run mode selected.*

To order consumable supplies, call the appropriate number:

US: **1-800-822-2200**

Canada: **French: 1-800-668-0133, English: 1-800-668-0199**

Europe: \_\_\_\_\_

Latin America: \_\_\_\_\_

## 9. Index

### Numerics

- 100% 4–20
- 1-Sided Output
  - Drilled Paper 3–10
- 2-Sided Output
  - Drilled Paper 3–10
  - Feature 4–28
    - 1-1 4–29
    - 1-2 4–29
    - 2-1 4–30
    - 2-2 4–31
  - Paper Trays 1, 2, and 3 3–8
  - Settings 1–17

### A

- About Color Printing 1–1
- Accepted Paper Types
  - High Capacity Stacker (HCS) 5–26
- Access Button 2–15, 2–21
- Accessories
  - High Capacity Stacker (HCS) 5–22
  - High Capacity Stacker Stapler (HCSS) 5–36
  - Tray 4 5–1
- Added Features Screen 2–18, 4–28
  - 2-Sided Output 4–28
  - Bound Originals 4–40
  - Edge Erase 4–43
  - Image Shift 4–32
  - Original Input 4–37
  - Stored Programming 4–48
- Adding Fuser Oil 8–8

## Additional Finishing Options 1–22

Die Cutting 1–22

Embossing 1–22

Lamination 1–22

Varnish 1–22

## Alert Screens 2–32

## Arrow Buttons 2–11

## Audio Tones 2–31

## Auto Center 4–33

## Auto Image Rotation 4–8

## Auto Paper Supply 3–12, 4–27

## Auto Photo &amp; Text 4–53

## Auto Tray Switching 3–12

**B**

---

## Back...Tab 4–101

## Basic Features Screen 2–18, 4–13

Auto 4–18

Color Mode 4–14

Face Down 4–18

Face Up 4–18

Output 4–18

Paper Supply 4–27

Reduce/Enlarge 4–19

## Basic Scanning Steps 4–2

## Binding Methods 1–21

Looseleaf Binding 1–21

Mechanical Binding 1–21

Perfect Binding 1–21

Saddle Stitching 1–21

## Binding Preparation 1–20

Bottling 1–20

Gathered Signature 1–20

Nested Signature and Binders Creep 1–20

## Booklet Creation 4–85

## Border Erase 4–45

## Bound Originals 4–40

## Build Job 4–97

**C**

- C (Clear) Button 2–17
- Calibration 1–12
- Calling for Service 8–12
- Cancel Buttons 2–12
- Capabilities
  - First Print Out Time 7–3
  - Print Rates 7–4
  - Throughput 7–3
  - Tray Capacity 7–3
  - Warm-up Time 7–3
- Capturing an Image Digitally 1–12
  - Additional Tips 1–13
  - Calibration 1–12
  - Image Manipulation 1–13
  - Output Considerations 1–14
- Certifications in Europe xxii
- Changing the Waste Dry Ink/Toner Bottle 8–10
- Chapter 1 About Color Printing 1–1
- Chapter 2 Overview 2–1
- Chapter 3 Paper and Paper Trays 3–1
- Chapter 4 Scanner 4–1
- Chapter 5 Accessories 5–1
- Chapter 6 Problem Solving 6–1
- Chapter 7 Technical Data 7–1
- Chapter 8 Maintenance 8–1
- Chroma 4–71
- Clear All Button 2–16, 2–29
- Coated Paper
  - Paper Tray 4 5–6, 5–8
  - Paper Trays 1,2, and 3 3–6
- Collated 4–18
- Color Balance 4–69
- Color Bar 4–72
- Color Management 1–10
- Color Mode 4–14
  - 3 Pass Color 4–15
  - Auto 4–14
  - Black Only 4–15
  - Full Color 4–15
  - Single Color 4–16

- Color Printing Overview 1–1
- Color Range 1–7
- Color Shift 4–70
- Color Translation 1–8
- Consumable Supplies 8–13
- Control Panel 2–4, 2–13
  - Access Button 2–15, 2–21
  - C (Clear) Button 2–17
  - Clear All Button 2–16, 2–29
  - Features Button 2–15, 2–18
  - Help Button 2–16, 2–29
  - Interrupt Button 2–16, 2–29
  - Job Status Button 2–15, 2–19
  - Keypad 2–17
  - Language Button 2–15, 2–21
  - Machine Status 2–22
  - Machine Status Button 2–15, 2–22
  - Pause Button 2–17, 2–29
  - Power Saver Button 2–15, 2–21
  - Review Button 2–16, 2–26
  - Start Button 2–17
- Conventions xxvii
  - Symbols xxvii
  - Writing Style Conventions xxviii
- Corner Shift 4–36
- Covers 4–74
- Curl 3–8
- Cutting and Trimming Paper 3–2

## **D**

---

- Dark Edges 4–57
- Define Area 4–59
  - Change Coordinates 4–61
  - Deleting an Area 4–62
- Delete Job Button 2–19, 2–20
- Delete Programming 4–50

- Digital Press
  - Calling for Service 8–12
  - Consumable Supplies 8–13
  - Maintenance 8–1
  - Replacing Consumable Supplies 8–3
- Digital Press Capabilities 7–3
  - First Print Out Time 7–3
  - Print Rates 7–4
  - Throughput 7–3
  - Tray Capacity 7–3
  - Warm-up Time 7–3
- Digital Press Electrical Power Requirements 7–1
  - Air Exchange Rate 7–2
  - Energy Star/Sleep Mode 7–2
  - Heat Output 7–2
  - Power Consumption 7–1
  - Specifications 7–1
- Digital Press Environmental Requirements 7–2
  - Altitude 7–2
  - Dust 7–3
  - Noise Levels 7–3
  - Ozone Emissions 7–3
- Digital Press Paper Path 2–39
- Digital Press Physical Characteristics 7–5
  - Floor Space Requirements 7–5
  - Size 7–5
  - Weight 7–5
- Digital Press Specifications 7–1
  - Capabilities 7–3
- Disconnect Device xvi
- Document Glass 2–3, 2–35
- Document Specifications 4–4
- Drilled Paper
  - 1-Sided Output 3–10
  - 1-Sided Print Jobs 3–10
  - 2-Sided Output 3–10
  - 2-Sided Print Jobs 3–10
  - Duplex Print Jobs 3–10
  - High Capacity Stacker Stapler (HCSS) 5–44
  - Overview 3–10
  - Paper Trays 1,2, and 3 3–6
  - Simplex Print Jobs 3–10

- Dry Ink/Toner Cartridges 2–36
- Dry Ink/Toner Compartment 2–4
- Dry Ink/Toner Waste Bottle 2–7
- Duplex Automatic Document Feeder (DADF) 2–3, 2–34, 4–4
  - Clearing a DADF Jam 4–7
  - Document Specifications 4–4
  - Identifying Duplex Automatic Document Feeder (DADF) Parts 4–5
  - Jam Clearance 4–7
  - Using the Duplex Automatic Document Feeder (DADF) 4–6
- Duplex Automatic Document Feeder (DADF) Specifications 7–5
  - Capacity 7–5
  - Dimensions 7–6
  - Document Feeding Method 7–5
  - Floor Space Requirements 7–6
  - Noise 7–6
  - Power Source 7–6
  - Sizes 7–5
  - Speed 7–6
  - Weight 7–6

## **E**

---

- Ecology Module 2–5
- Edge Erase 4–43
  - Border Erase 4–45
  - Edge/Center Erase 4–46
- Edge/Center Erase 4–46
- Electrical Module 2–6
- Electrical Power Requirements 7–1
  - Air Exchange Rate 7–2
  - Energy Star/Sleep Mode 7–2
  - Heat Output 7–2
  - Power Consumption 7–1
  - Specifications 7–1
- Electrical Safety xv
- Environmental Notices for Canada xxvi
- Environmental Notices for the USA xxvi
- Exit Module 2–4, 2–40



**F**

- Face Down 4–18
- Face Up 4–18
- Factors Affecting Color Output 1–5
  - Additive Color 1–6
  - Paper Type 1–6
  - Raster Image Processors (RIP) 1–6
  - Subtractive Color 1–6
- Factors Affecting Image Quality 1–11
  - Paper 1–11
- Factors Affecting Image Reproduction 1–3
  - Color Contrast 1–4
  - Original Size 1–5
  - Scanners 1–3
- Fault Codes 6–29
- FCC in the USA xxi
- Features Button 2–15, 2–18
- Fiery EX2000 stapling hints 5–44
- File Formats 1–17
- Finishing Options 1–19
  - Additional Finishing Options 1–22
  - Binding Methods 1–21
  - Binding Preparation 1–20
  - Folding Techniques 1–19
- Fixed Selection Buttons 2–11
- Floor Space Requirements 7–5
- Folding Techniques 1–19
  - Accordion Fold 1–19
  - Gate Fold 1–19
  - Parallel Fold 1–19
  - Right Angle Fold 1–19
- Forming a Color Image 1–10
  - Halftone Dot Shapes 1–11
  - Halftone Dots 1–11
  - Halftone Screens 1–10

**G**

- General Problems 6–1
- Ground Fault Indicator (GFI) Circuit Breaker 2–4, 2–8

**H**

---

- Help Button 2–16, 2–29
- High Capacity Stacker (HCS) 5–22
  - Control Panel 5–23
  - Identifying High Capacity Stacker (HCS) Parts 5–22
  - Jam Clearance 5–32
  - Loss of Power 5–35
  - Maintenance 5–33
  - Offset Mode 5–29
  - Paper Guidelines 5–25
  - Problem Solving 5–34
  - Selecting High Capacity Stacker (HCS) Features 5–27
  - Special Notes 5–26
  - Stack Tray 5–25
  - Stacker Mode 5–29
  - Top Tray 5–25
  - Top Tray Mode 5–29
  - Unloading 5–30
- High Capacity Stacker Stapler (HCSS) 5–36
  - Control Panel 5–37
  - Electrical/Environmental Requirements 5–38
  - Feeding Drilled Paper 5–44
  - Hints and Tips 5–41
  - Identifying High Capacity Stacker Stapler (HCSS) Parts 5–36
  - Jam Clearance 5–48
  - Loss of Power 5–53
  - Maintenance 5–50
  - Ordering and Loading Staples 5–49
  - Paper Guidelines 5–38
  - Paper Path 5–40
  - Paper Specifications for Stapling 5–46
  - Problem Solving 5–51
  - Stapling Capacity by Paper Weight/Type 5–47
  - Stapling from the Fiery EX2000 5–45
  - Stapling Hints 5–41
  - Unloading 5–47
  - Using the High Capacity Stacker Stapler (HCSS) 5–41
- Hold Job Button 2–19, 2–20
- Horizontal Transport (2-Sided Printing Only) 6–28

- Icon Buttons 2–11
- Identifying Duplex Automatic Document Feeder (DADF) Parts 4–5
- Identifying High Capacity Stacker (HCS) Parts 5–22
- Identifying High Capacity Stacker Stapler (HCSS) Parts 5–36
- Identifying the Digital Press External Parts 2–2
  - Control Panel 2–4, 2–13
  - Document Glass 2–3, 2–35
  - Dry Ink/Toner Compartment 2–4
  - Dry Ink/Toner Waste Bottle 2–7
  - Duplex Automatic Document Feeder (DADF) 2–3, 2–34
  - Ecology Module 2–5
  - Electrical Module 2–6
  - Exit Module 2–4
  - Ground Fault Indicator (GFI) Circuit Breaker 2–4, 2–8
  - Offset Catch Tray (OCT) 2–4
  - Power Switch 2–3
  - Right/Left Front Doors 2–4
  - Scanner 2–3
  - Touch Screen 2–3, 2–9
  - Transport Module 2–3
  - Upper Door 2–3
- Identifying the Digital Press Internal Parts 2–36
  - Dry Ink/Toner Cartridges 2–36
  - Exit Module 2–40
  - Paper Path 2–39
  - Serial Number Label 2–36
  - Transport Module 2–38
  - Upper Door 2–37
- Identifying Tray 4 Parts 5–1
- Image Manipulation 1–13
  - Modifying the Color 1–13
  - Resizing an Image 1–13
  - Sharpening an Image 1–13
- Image Quality of the Original 1–2
- Image Quality Overview 1–2

## Image Quality Screen 2–18, 4–51

Chroma 4–71

Color Balance 4–69

Color Bar 4–72

Color Shift 4–70

Image Tone Presets 4–65

Lighten/Darken 4–63

Original Type 4–52

Sharpness 4–64

## Image Shift 4–32

Auto Center 4–33

Corner Shift 4–36

Margin Shift 4–34

No Shift 4–32

Unrestricted Shift 4–35

## Image Tone Presets 4–65

Background Erase 4–68

Cool 4–67

Lively 4–66

Normal 4–65

Sharp 4–66

Warm 4–67

In Canada xxi

Inserts 4–78

Interrupt Button 2–16, 2–29

It's Illegal in Canada xxv

It's Illegal in the USA xxiii

**J**

---

## Jam Clearance

Duplex Automatic Document Feeder (DADF) 4–7, 6–15

Exit Module Jams 6–23

High Capacity Stacker (HCS) 5–32

High Capacity Stacker Stapler (HCSS) 5–48

Horizontal Transport (2-Sided Printing Only) 6–28

Left Side Door Jam 6–17

Overview 6–14

Paper Tray 4 5–13

Paper Trays 1, 2 and 3 6–18

- Right/Left Door Paper Path Jams 6–25
- Transport Module Jam 6–21
- Trays 1, 2 and 3 Jams 6–18
- Upper Door Jam 6–20
- Job Assembly Screen 4–96
  - Build Job 4–97
  - Proof Set 4–100
- Job Details Button 2–19, 2–20
- Job List Screen 2–20
- Job Monitor Screen 2–30
- Job Status 2–15
- Job Status Button 2–15, 2–19
  - Delete Job Button 2–19, 2–20
  - Hold Job Button 2–19, 2–20
  - Job Details Button 2–19, 2–20
  - Job List Screen 2–20
  - Promote Job Button 2–19, 2–20
  - Release Job Button 2–19, 2–20
  - Up/Down Arrow Buttons 2–20

## K

- Keypad 2–17

## L

- Labels
  - Paper Trays 1,2, and 3 3–6
- Language Button 2–15, 2–21
- Laser Safety xvii
- Letterhead Paper
  - Paper Tray 4 5–8
  - Paper Trays 1, 2, and 3 3–11
- Lighten/Darken 4–63
- Loading Paper
  - Paper Tray 4 5–9
  - Paper Trays 1, 2, and 3 3–13
- Loading Staples 5–49
- Loss of Power
  - High Capacity Stacker (HCS) 5–35
  - High Capacity Stacker Stapler (HCSS) 5–53
  - Paper Tray 4 5–18

**M**

---

## Machine Status

Meters 2–23

## Machine Status Button 2–15, 2–22

Error Log Tab 2–22

Machine Details Tab 2–22

Meters Screen 2–23

Maintenance Tab 2–22, 2–33

Paper Trays Tab 2–22

## Maintenance

## Digital Press

Adding Fuser Oil 8–8

Changing the Waste Dry Ink/Toner Bottle 8–10

Cleaning the Document Glass Cover 8–3

Cleaning the Document Screen 8–2

Cleaning the Touch Screen 8–1

Replacing a Dry Ink/Toner Cartridge 8–4

## High Capacity Stacker (HCS) 5–33

Cleaning the High Capacity Stacker (HCS) 5–33

## High Capacity Stacker Stapler (HCSS) 5–50

Cleaning the High Capacity Stacker Stapler (HCSS) 5–50

## Paper Tray 4 5–14

Cleaning Tray 4 5–14

## Maintenance Safety xviii

## Manual Input 4–38

## Map 4–56

## Margin Shift 4–34

## Meters Screen 2–23

## Metric Conversion Chart 7–7

## Mirror Image 4–89

## Mixed Size Originals 4–39

## Modifying the Color 1–13

## More... Button 4–21

## More... Tab 2–18

## More...Tab 4–73

**N**

- Negative Image 4–90
- No Shift 4–32
- Non-standard Size Paper
  - Paper Tray 4 5–8
  - Paper Trays 1, 2, and 3 3–11
- Notices **xxi**
  - Certifications in Europe **xxii**
  - Environmental Notices for Canada **xxvi**
  - Environmental Notices for the USA **xxvi**
  - It's Illegal in Canada **xxv**
  - It's Illegal in the USA **xxiii**
  - Radio Frequency Emissions **xxi**
- N-Up 4–80

**O**

- Offset Catch Tray (OCT) 2–4
- Offset Mode 5–29
- Operational Safety **xix**
- Option Buttons 2–11
- Ordering Staples 5–49
- Original Input 4–37
  - Auto 4–37
  - Manual Input 4–38
  - Mixed Size Originals 4–39
- Original Type 4–52
  - Auto Photo & Text 4–53
  - Dark Edges 4–57
  - Define Area 4–59
  - Map 4–56
  - Photo 4–55
  - Text 4–54
- Output 4–18
  - Collated 4–18
  - More... Button 4–18
  - Uncollated 4–18

- Output Considerations 1–14
  - 2-Sided Output Settings 1–17
  - File Formats 1–17
  - Halo 1–15
  - Image Resolution 1–17
  - Jagged Edges 1–16
  - Knockout 1–16
  - Opacity 1–15
  - Overprint 1–16
  - Registration 1–14
  - Trapping 1–15
  - Uneven Toner Coverage 1–14
- Output Format Screen 4–73
  - Booklet Creation 4–85
  - Covers 4–74
  - Inserts 4–78
  - Mirror Image 4–89
  - Negative Image 4–90
  - N-Up 4–80
  - Poster 4–93
  - Repeat Image 4–91
  - Transparency Options 4–82
- Oversize Paper
  - Paper Trays 1, 2, and 3 3–11
- Ozone Safety xx

## **P**

---

- Paper Guidelines 3–5
  - High Capacity Stacker (HCS) 5–25
    - Accepted Paper Types 5–26
    - Paper Weight Range 5–26
    - Special Notes 5–26
    - Stack Tray 5–25
    - Top Tray 5–25
  - High Capacity Stacker Stapler (HCSS) 5–38
    - Paper Specifications for Stapling 5–46
    - Staple Capacity by Paper Weight/Type 5–47



- Paper Tray 4 5–5
  - Coated Paper 5–6
  - Paper Size 5–6
  - Paper Weight Range 5–6
  - Tabbed Inserts 5–6
  - Transfer Paper 5–6
  - Transparencies 5–6
- Paper Trays 1, 2, and 3 3–5
  - Coated Paper 3–6
  - Drilled Paper 3–6
  - Labels 3–6
  - Paper Size 3–6
  - Paper Weight Range 3–6
  - Tabbed Inserts 3–6
  - Transfer Paper 3–6
  - Transparencies 3–6
- Paper Handling 3–1
  - Cutting and Trimming Paper 3–2
  - Paper Storage 3–2
  - Store Paper 3–2
- Paper Path in the Digital Press 2–39
- Paper Path of Paper Tray 4 5–2
- Paper Path of Trays 1, 2, and 3 3–4
- Paper Size
  - Paper Tray 4 5–6
  - Paper Trays 1,2, and 3 3–6
- Paper Specifications for Stapling 5–46
- Paper Stock Specifications
  - Special Paper Stock for Tray 4 5–5
- Paper Storage 3–2
- Paper Supply 4–27
  - Auto Paper 4–27
  - Auto Paper Supply 4–27
- Paper Tray 4 5–1
  - Coated Paper 5–8
  - Control Panel 5–3
  - Identifying Tray 4 Parts 5–1
  - Jam Clearance 5–13
  - Letterhead Paper 5–8
  - Loading Paper 5–9

- Loading Special Paper 5–7
- Loss of Power 5–18
- Maintenance 5–14
- Non-standard Size Paper 5–8
- Paper Guidelines 5–5
- Paper Path 5–2
- Paper Reliability 5–14
- Problem Solving 5–15
- Selecting Tray 4 5–12
- Special Features 5–7
- Tabbed Inserts 5–7
- Tray 4 Capabilities 5–21
- Tray 4 Environmental Requirements 5–20
- Tray 4 Physical Characteristics 5–21
- Tray 4 Specifications 5–19
- Paper Trays
  - 1, 2, and 3 3–3
  - 4 5–1
  - Special Features 3–7, 5–7
- Paper Trays 1, 2 and 3
  - Paper Guidelines 3–5
- Paper Trays 1, 2, and 3 3–3
  - 2-Sided Printing 3–8
  - Curl 3–8
  - Drilled Paper 3–10
  - Letterhead Paper 3–11
  - Loading Paper 3–13
  - Non-standard Size Paper 3–11
  - Oversize Paper 3–11
  - Paper Path 3–4
  - Special Features 3–7
  - Tabbed Inserts 3–9
  - Transparency Guidelines 3–9
  - Tray Capacity 3–8
- Paper Weight Conversion Ranges 3–18
- Paper Weight Conversion Tables 3–17
  - Paper Weight Conversion Ranges 3–18
  - Specific Paper Weight Conversion 3–17
  - Specific Weight Conversion 3–17
  - Weight Conversion Ranges 3–18

- Paper Weight Range
  - High Capacity Stacker (HCS) 5–26
  - Paper Tray 4 5–6
  - Paper Trays 1,2, and 3 3–6
- Pause Button 2–17, 2–29
- Percentage Conversions 4–26
- Photo 4–55
- Poster 4–93
- Power Saver Button 2–15, 2–21
- Power Switch 2–3
- Print Rates
  - Auto 7–4
  - Heavy Weight 7–4
  - Light Weight 7–4
- Problem Solving
  - General Problems 6–1
  - High Capacity Stacker (HCS) 5–34
  - High Capacity Stacker Stapler (HCSS) 5–51
  - Loss of Power 5–18
  - Paper Tray 4 5–15
- Promote Job Button 2–19, 2–20
- Proof Set 4–100

## R

---

- Radio Frequency Emissions xxi
  - FCC in the USA xxi
  - In Canada xxi
- Raster Image Processor (RIP) 1–18, 7–1
- Recall Programming 4–49
- Recommended Papers and Special Materials 3–1
  - Paper Handling 3–1
  - www.xerox.com 3–1, 4–3, 4–6, 5–1

- Reduce/Enlarge 4–19
  - 100% 4–20
  - Auto% 4–20
  - Fourth Button 4–20
  - More... Button 4–21
    - % by Length 4–24
    - 100% 4–21
    - Auto% 4–21
    - Custom 4–23
    - Preset/Variable 4–22
    - Whole Image 4–25
  - Third Button 4–20
- Registration, Vacuum Transport and Fuser 6–25
- Release Job Button 2–19, 2–20
- Relocating the DocuColor 2060/2045 2–41
- Repeat Image 4–91
- Replacing a Dry Ink/Toner Cartridge 8–4
- Replacing Consumable Supplies 8–3
- Resizing an Image 1–13
- Review Button 2–16, 2–26
- Right/Left Front Doors 2–4

## **S**

---

- Safety Extra Low Voltage Approval xxii
- Safety Notes xv
- Save Buttons 2–12
- Scanner 2–3
  - Added Features Screen 4–28
  - Auto Image Rotation 4–8
  - Basic Features Screen 4–13
  - Duplex Automatic Document Feeder (DADF) 4–4
  - Image Quality Screen 4–51
  - Job Assembly Screen 4–96
  - Output Format Screen 4–73
  - Overview 4–1
  - Touch Screen 4–9
  - White Border Edges on Copies 4–8
- Scanner Features 4–13
- Serial Number Label 2–36
- Sharpening an Image 1–13
- Sharpness 4–64
- Specific Paper Weight Conversion 3–17

- Stacker Mode 5–29
- Staple Capacity by Paper Weight/Type 5–47
- Stapling from the Fiery EX2000 5–45
- Start Button 2–17
- Store Programming 4–48
- Stored Programming 4–48
  - Delete Programming 4–50
  - Recall Programming 4–49
  - Store Programming 4–48
- Supplies 8–13
- Symbols xxvii

## T

- Tabbed Inserts
  - Overview 3–9
  - Paper Tray 4 5–6, 5–7
  - Paper Trays 1,2, and 3 3–6
- Text 4–54
- Top Tray Mode 5–29
- Touch Screen 2–3, 2–9, 4–9
  - Message Area 2–9, 4–9
  - Tabs/Buttons/Icons 2–9, 4–10
    - Touch Screen Button Types and Functions 2–11, 4–11
- Touch Screen Button Types and Functions 2–11, 4–11
- Transfer Paper
  - Paper Tray 4 5–6
  - Paper Trays 1,2, and 3 3–6
- Transparencies
  - Paper Tray 4 5–6
  - Paper Trays 1,2, and 3 3–6
  - Transparency Guidelines 3–9
- Transparency Options 4–82
- Transport Module 2–3, 2–38
- Tray 4 Capabilities
  - Throughput 5–21
  - Tray Capacity 5–21
- Tray 4 Environmental Requirements
  - Atmosphere Requirements 5–20
  - Dust 5–20
  - Noise Levels 5–20
  - Ozone Emissions 5–20

- Tray 4 Physical Characteristics
  - Floor Space Requirements 5–21
  - Size 5–21
  - Weight 5–21
- Tray 4 Specifications
  - Capabilities 5–21
  - Electrical Requirements 5–19
  - Environmental Requirements 5–20
  - Heat Output 5–19
  - Physical Characteristics 5–21
  - Power Consumption 5–19
- Tray Capacity
  - Paper Trays 1, 2, and 3 3–8

## U

---

- Uncollated 4–18
- Uneven Toner Coverage 1–14
- Unloading the High Capacity Stacker (HCS) 5–30
- Unloading the High Capacity Stacker Stapler (HCSS) 5–47
- Unrestricted Shift 4–35
- Up/Down Arrow Buttons 2–20
- Upper Door 2–3, 2–37
- Using the Duplex Automatic Document Feeder (DADF) 4–6
- Using the High Capacity Stacker Stapler (HCSS) 5–41

## W

---

- Ways to Improve Color 1–9
- White Border Edges on Copies 4–8
- Writing Style Conventions xxviii
- www.xerox.com. 3–1, 4–3, 4–6



701P36797  
March 2001  
Xerox Corporation  
Global Knowledge and Language Services  
780 Salt Road  
Webster, New York 14580